Waterjet Design Ideas

IMPORTANT
READ THIS FIRST

So what will you see on the next ninety two pages? Ideas! That is all they are. Ninety two pages of ideas for your gates or decorative panels.

Can they be turned sideways? Absolutely you can turn them upside down, back to front or any angle you wish so long as it suits your design.

Can they be stretched to suit my site? The answer is mostly yes. There are a few designs however that simply will not look right if you start stretching them. But don't worry we will be the first to tell you before we cut.

Can parts be added or subtracted? Again the answer is mostly yes.

I still can't find anything but have my own idea. Great let us have a look and we can tell you how well it will work or why it won't.

Why do we use waterjet and not laser? Simple answer is that although it is a more expensive process it is cleaner and superior finish. It suits the finish our customers require.

DESIGN 0001

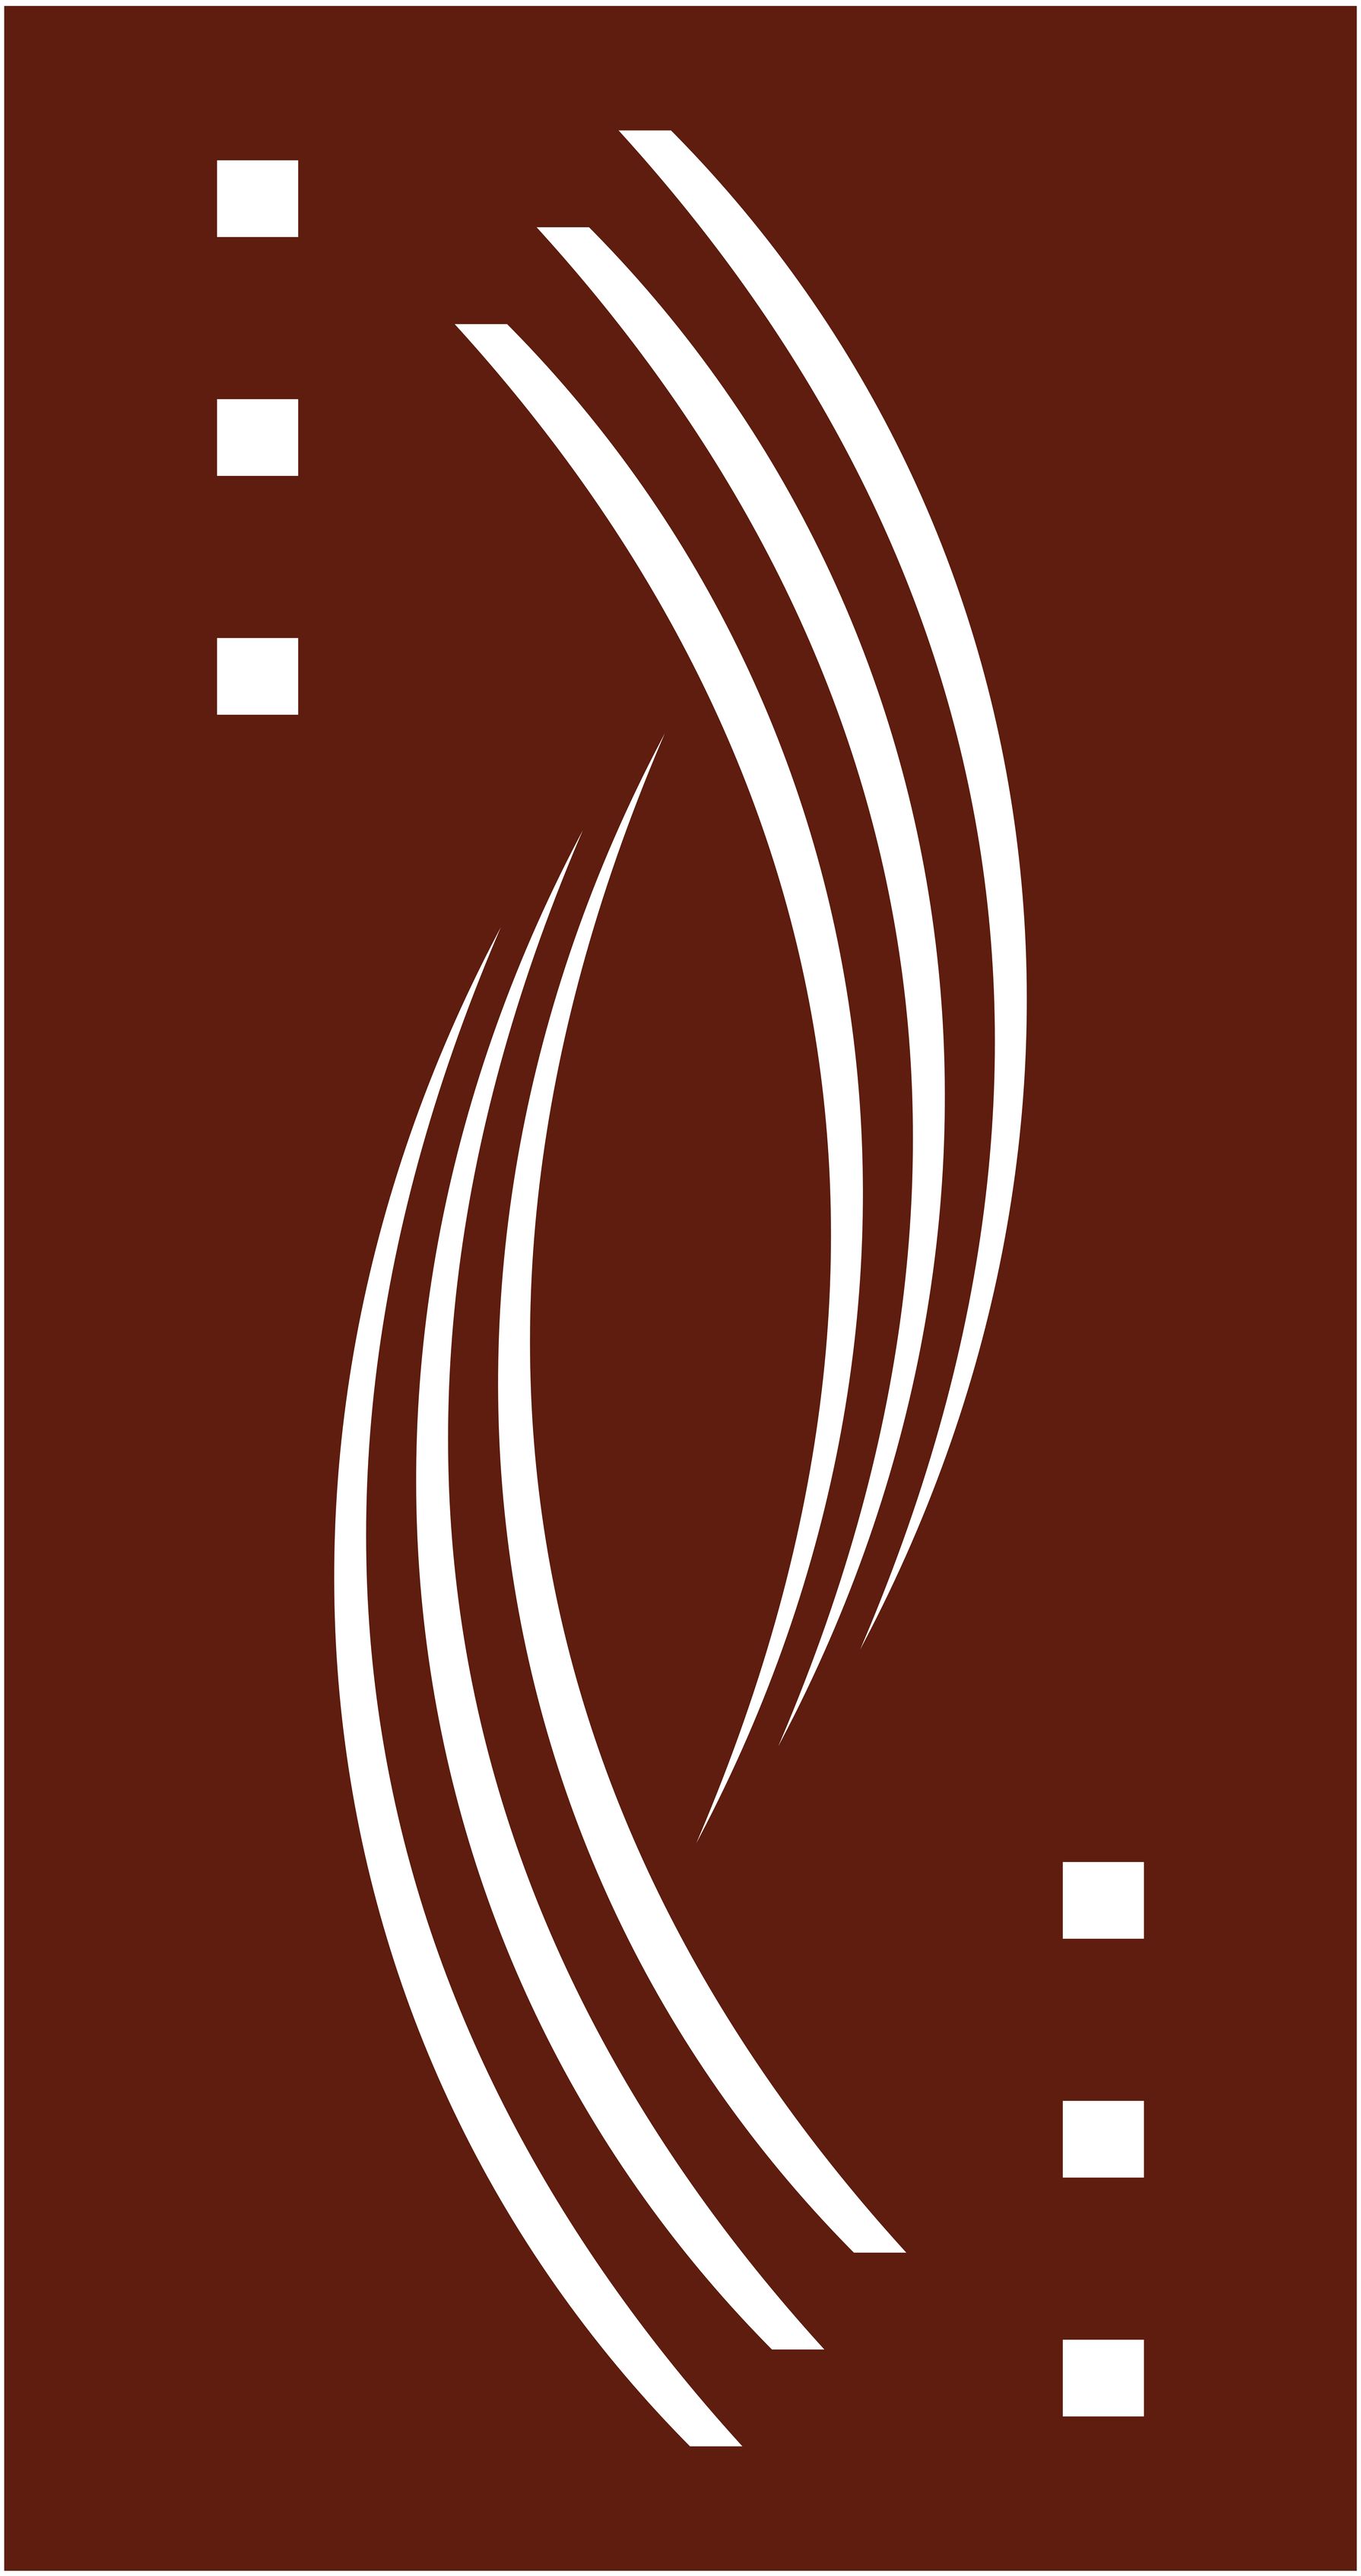

(4.0 3A25 5A44 3C72)

DESIGN 0002

(4.0 3A39 5A67 3C110)

DESIGN 0003

(4.0 3A28 5A47 3C78)

DESIGN 0004

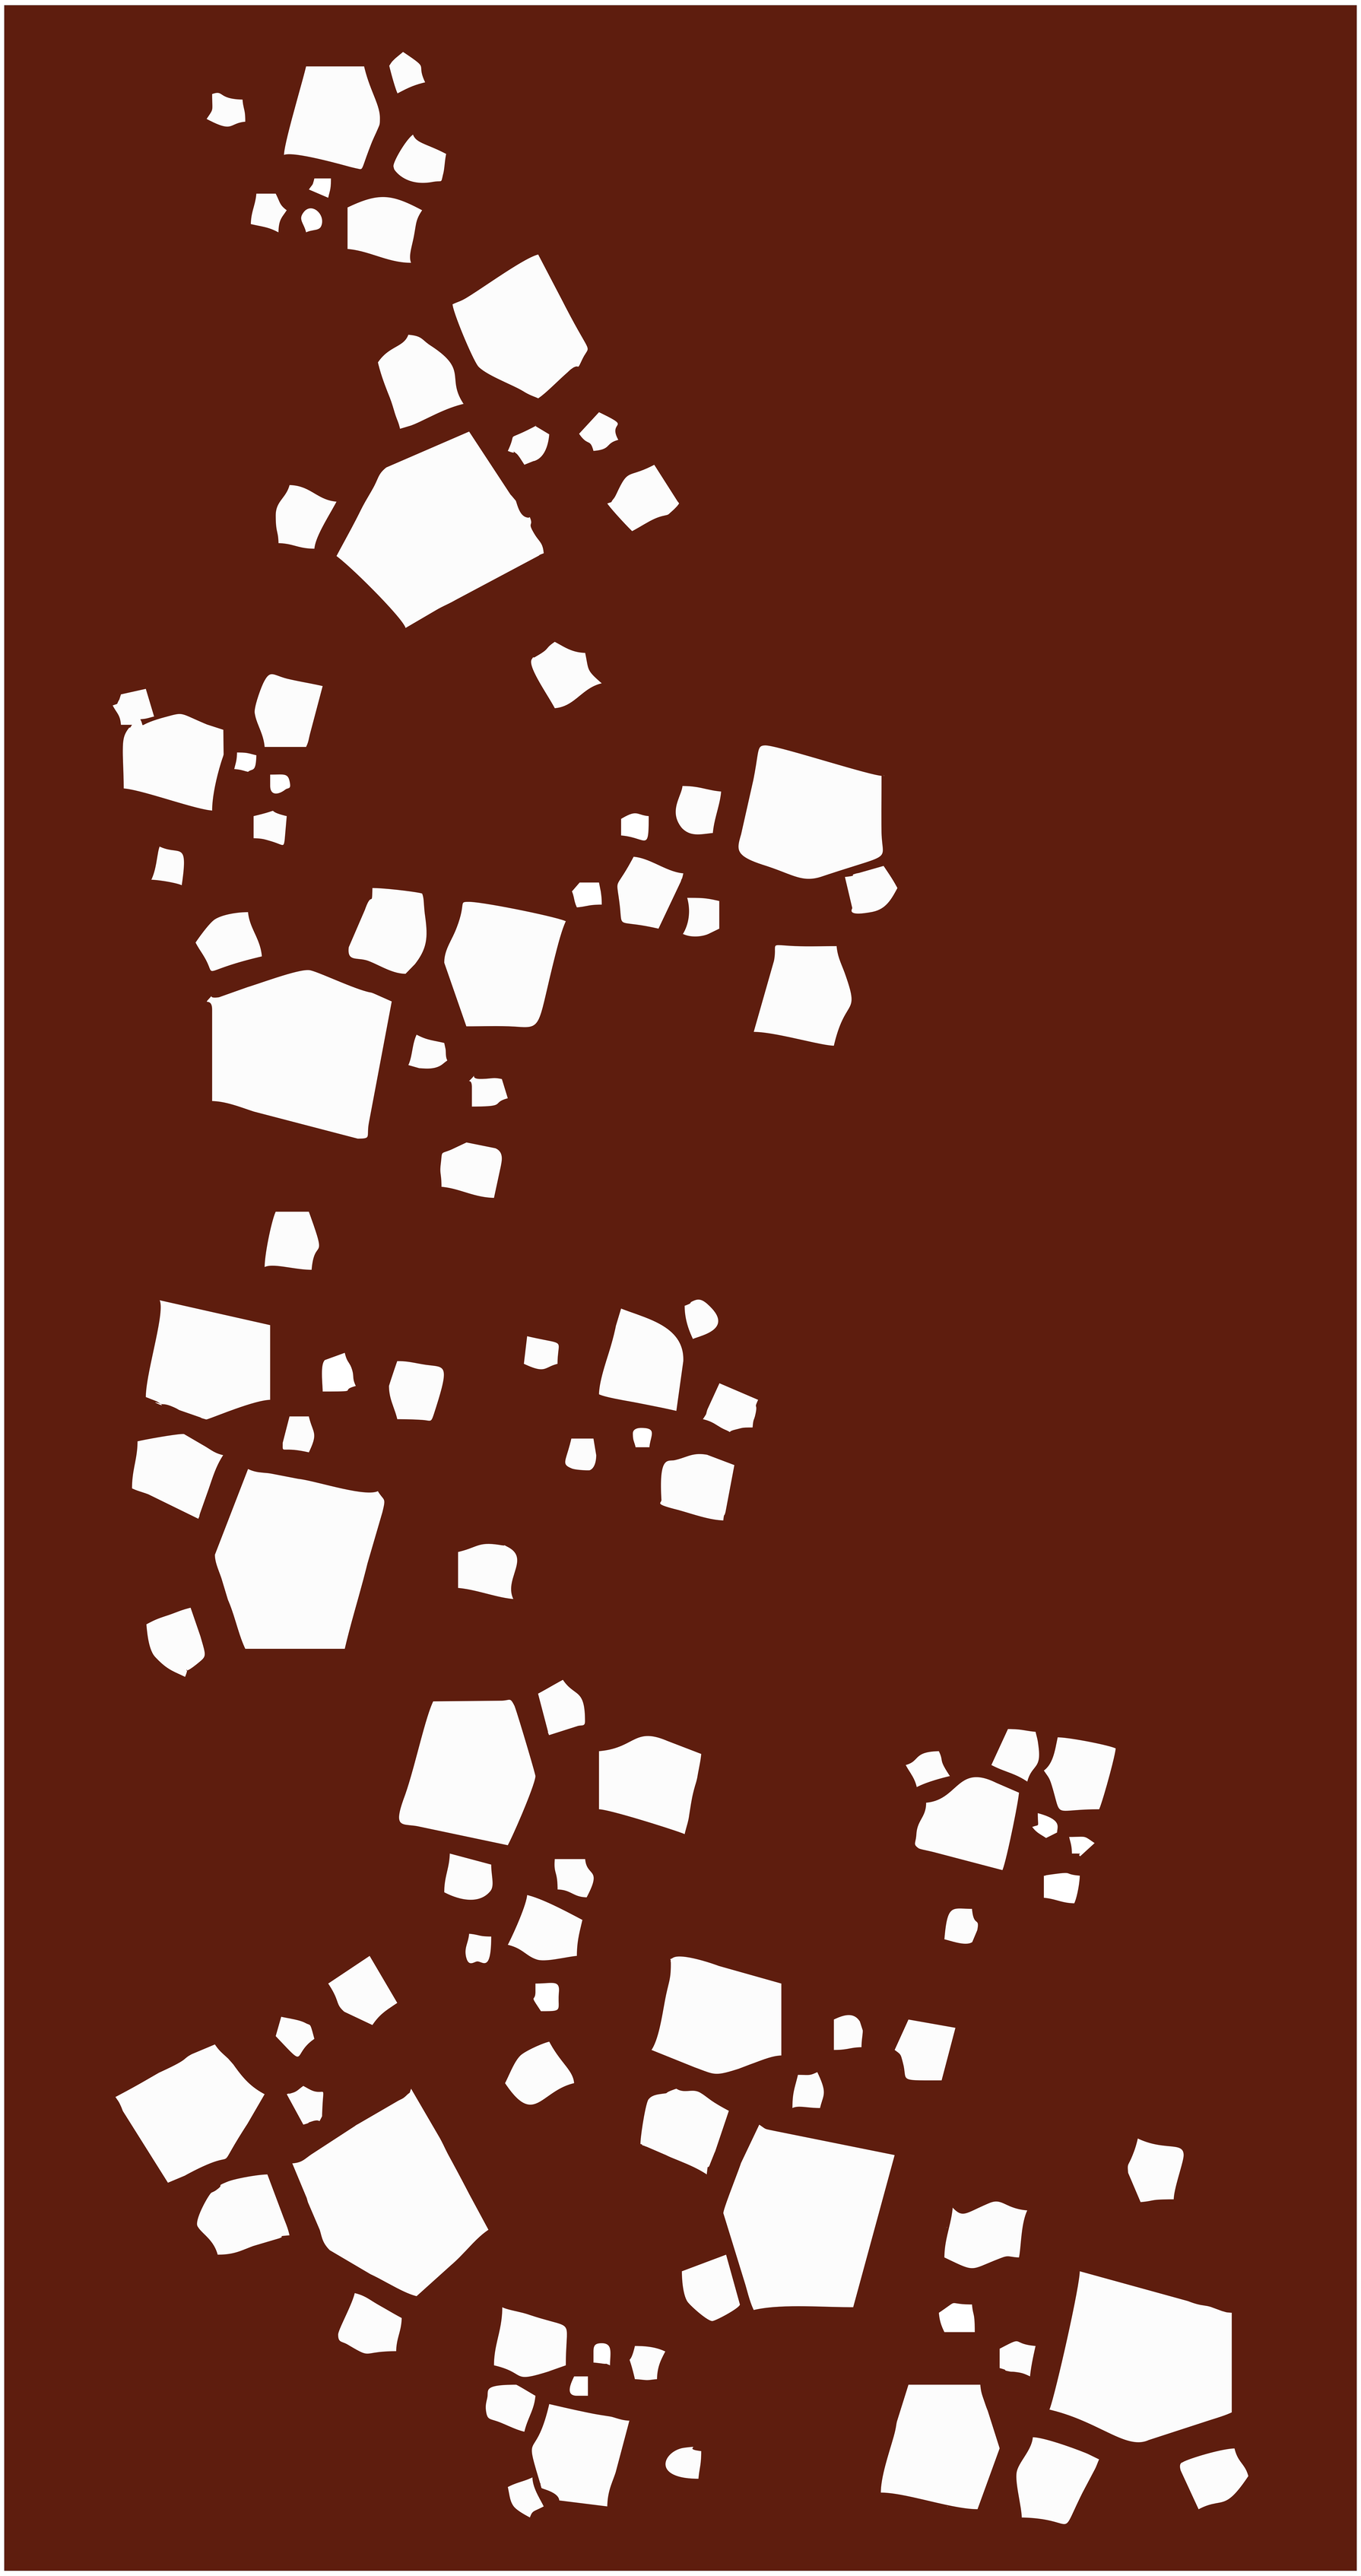

(4.0 3A28 5A47 3C78)

DESIGN 0005

(4.0 3A35 5A60 3C99)

DESIGN 0006

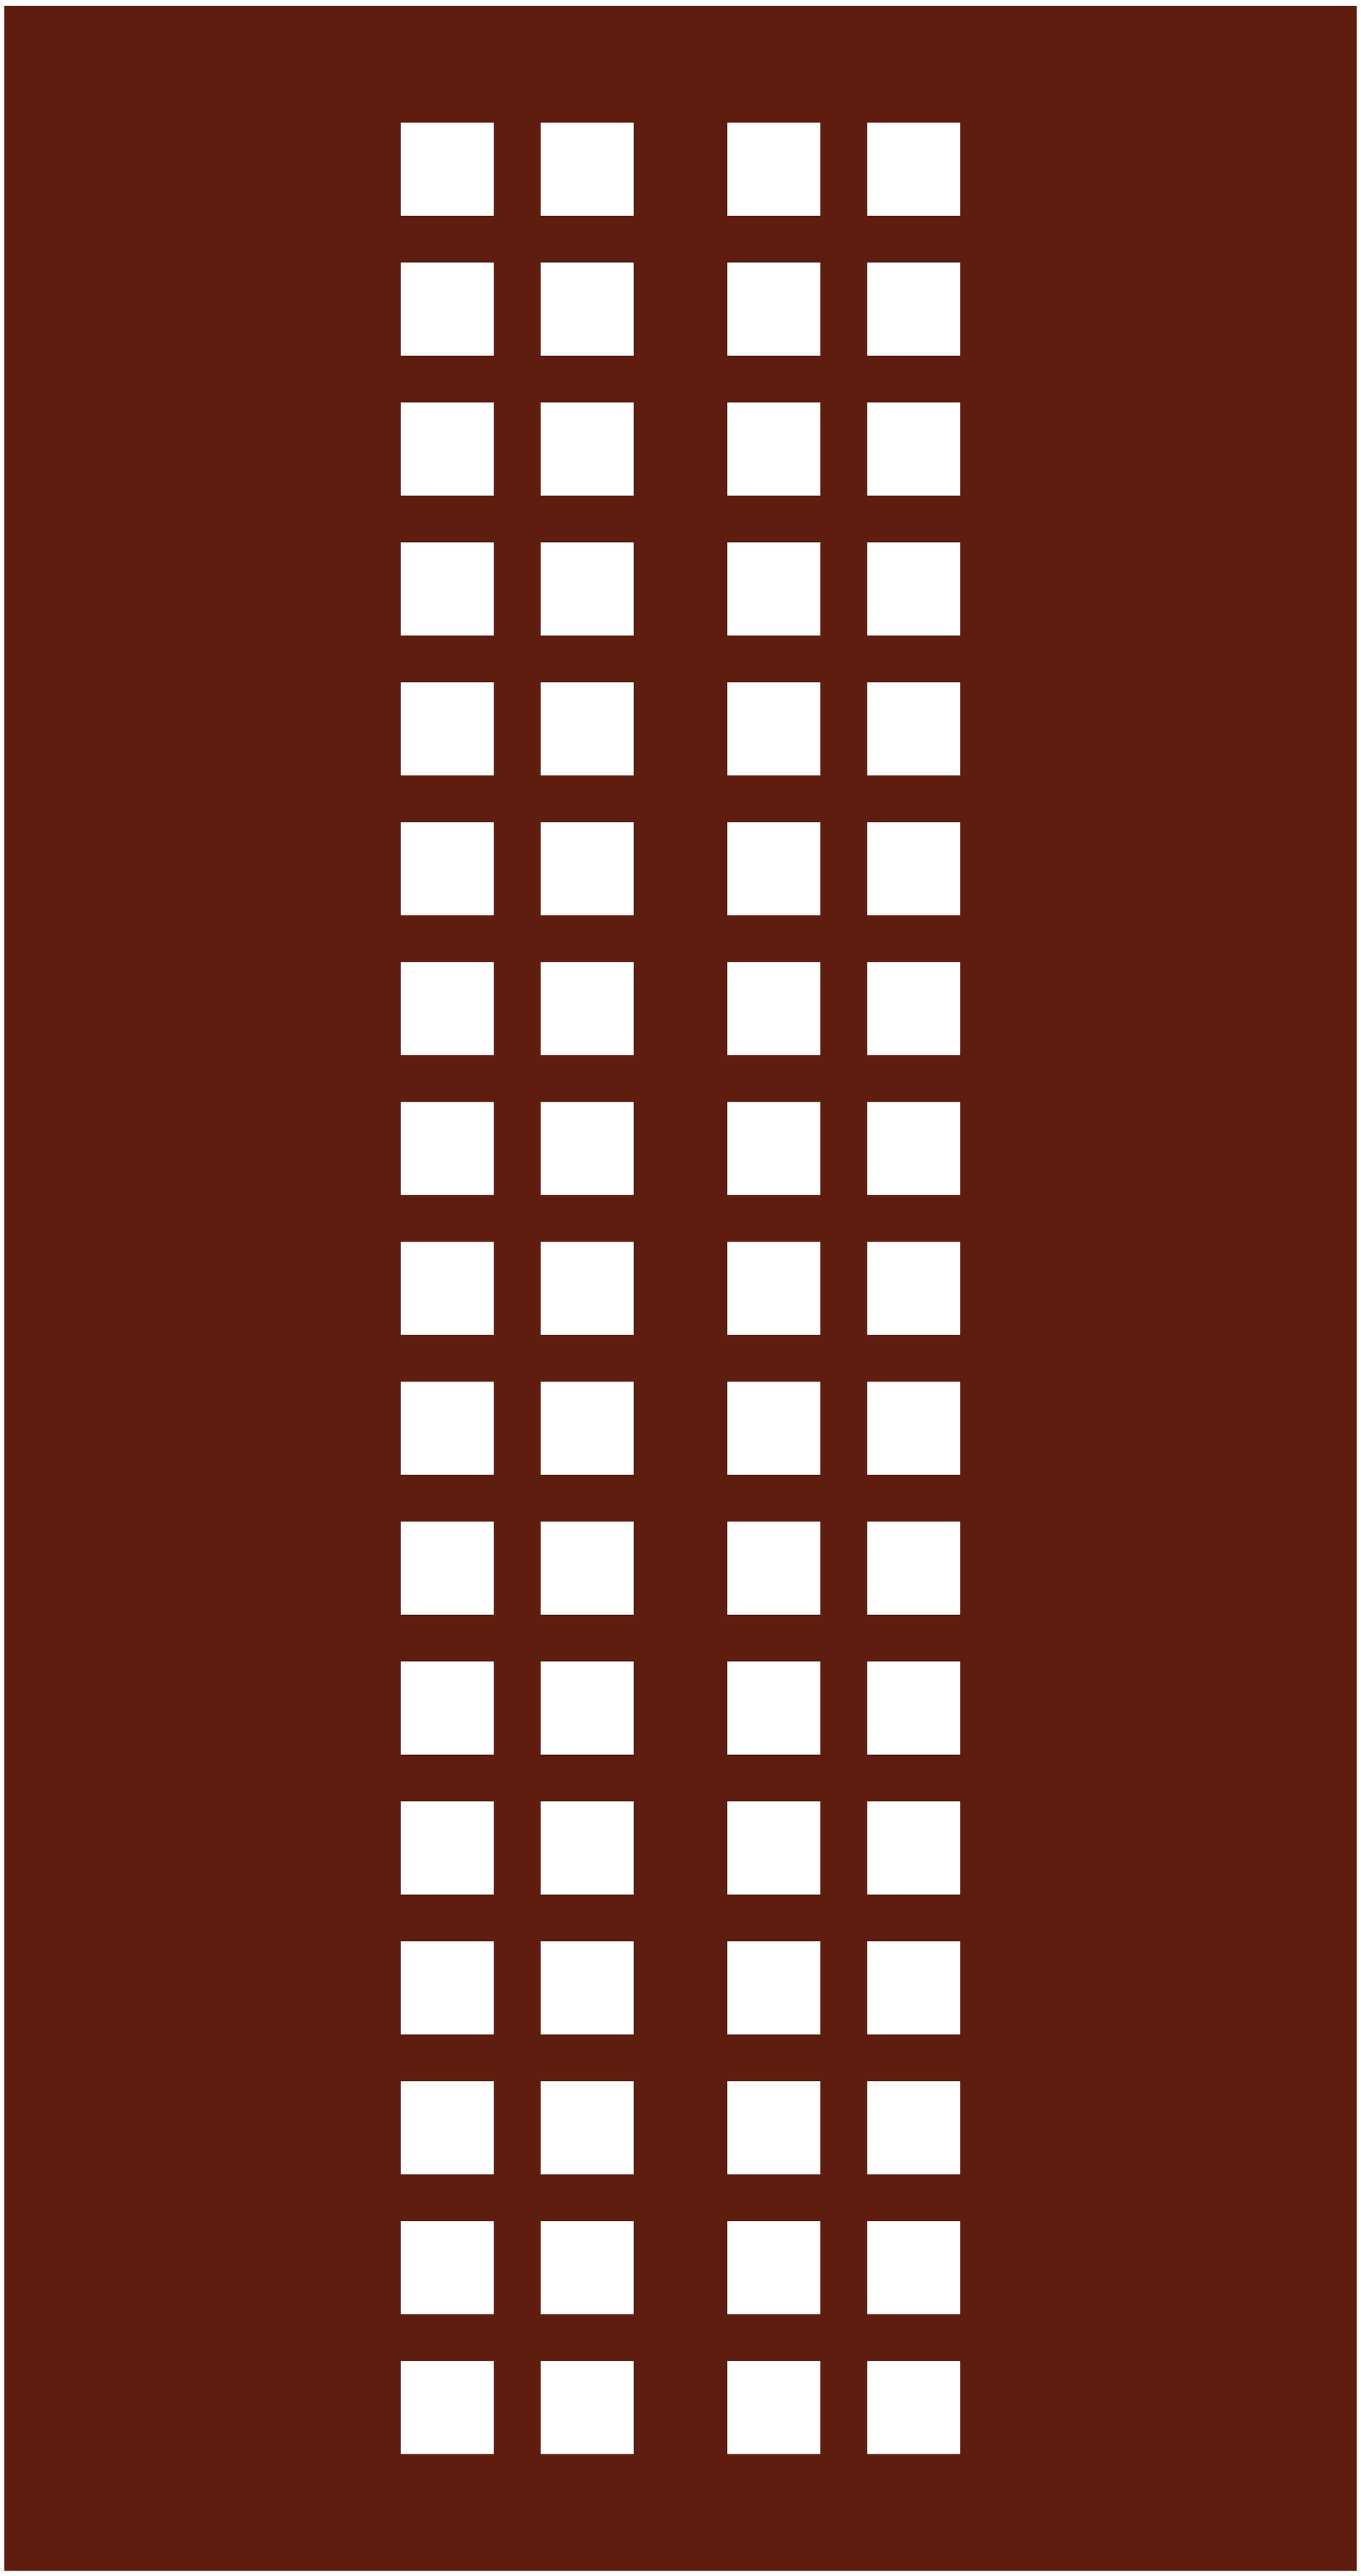

(4.0 3A28 5A47 3C78)

DESIGN 0007

(4.0 3A36 5A62 3C103)

DESIGN 0008

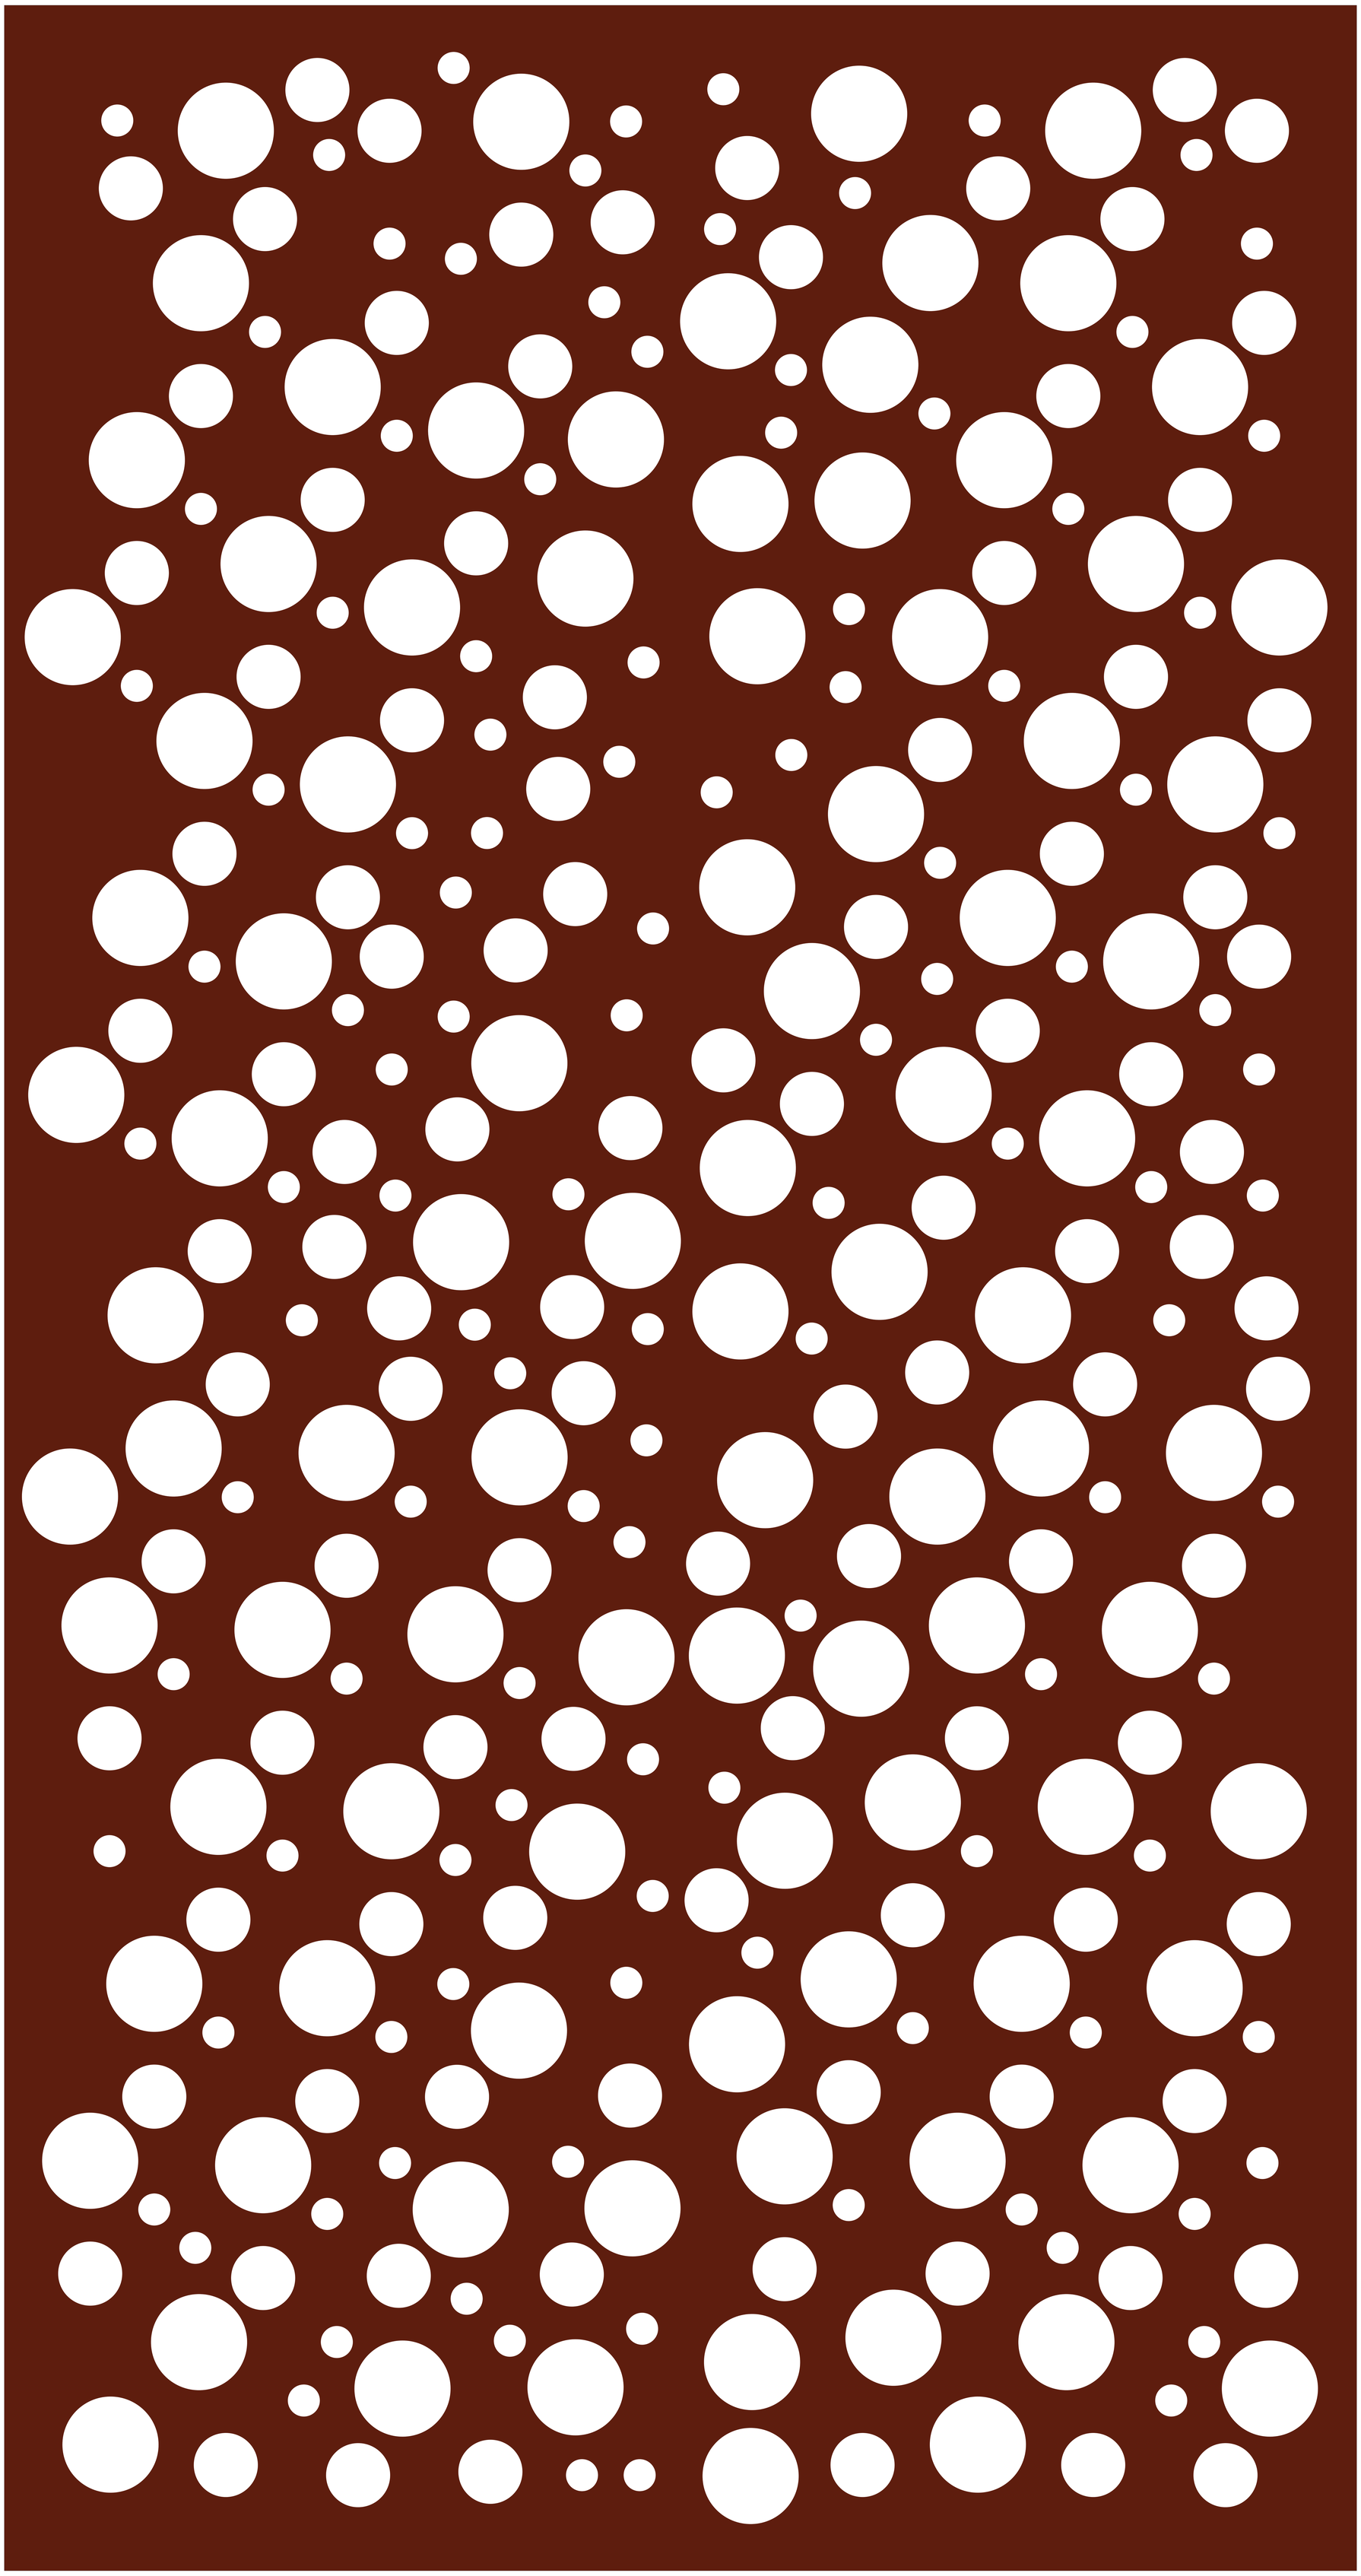

(4.0 3A67 5A115 3C189)

DESIGN 0009

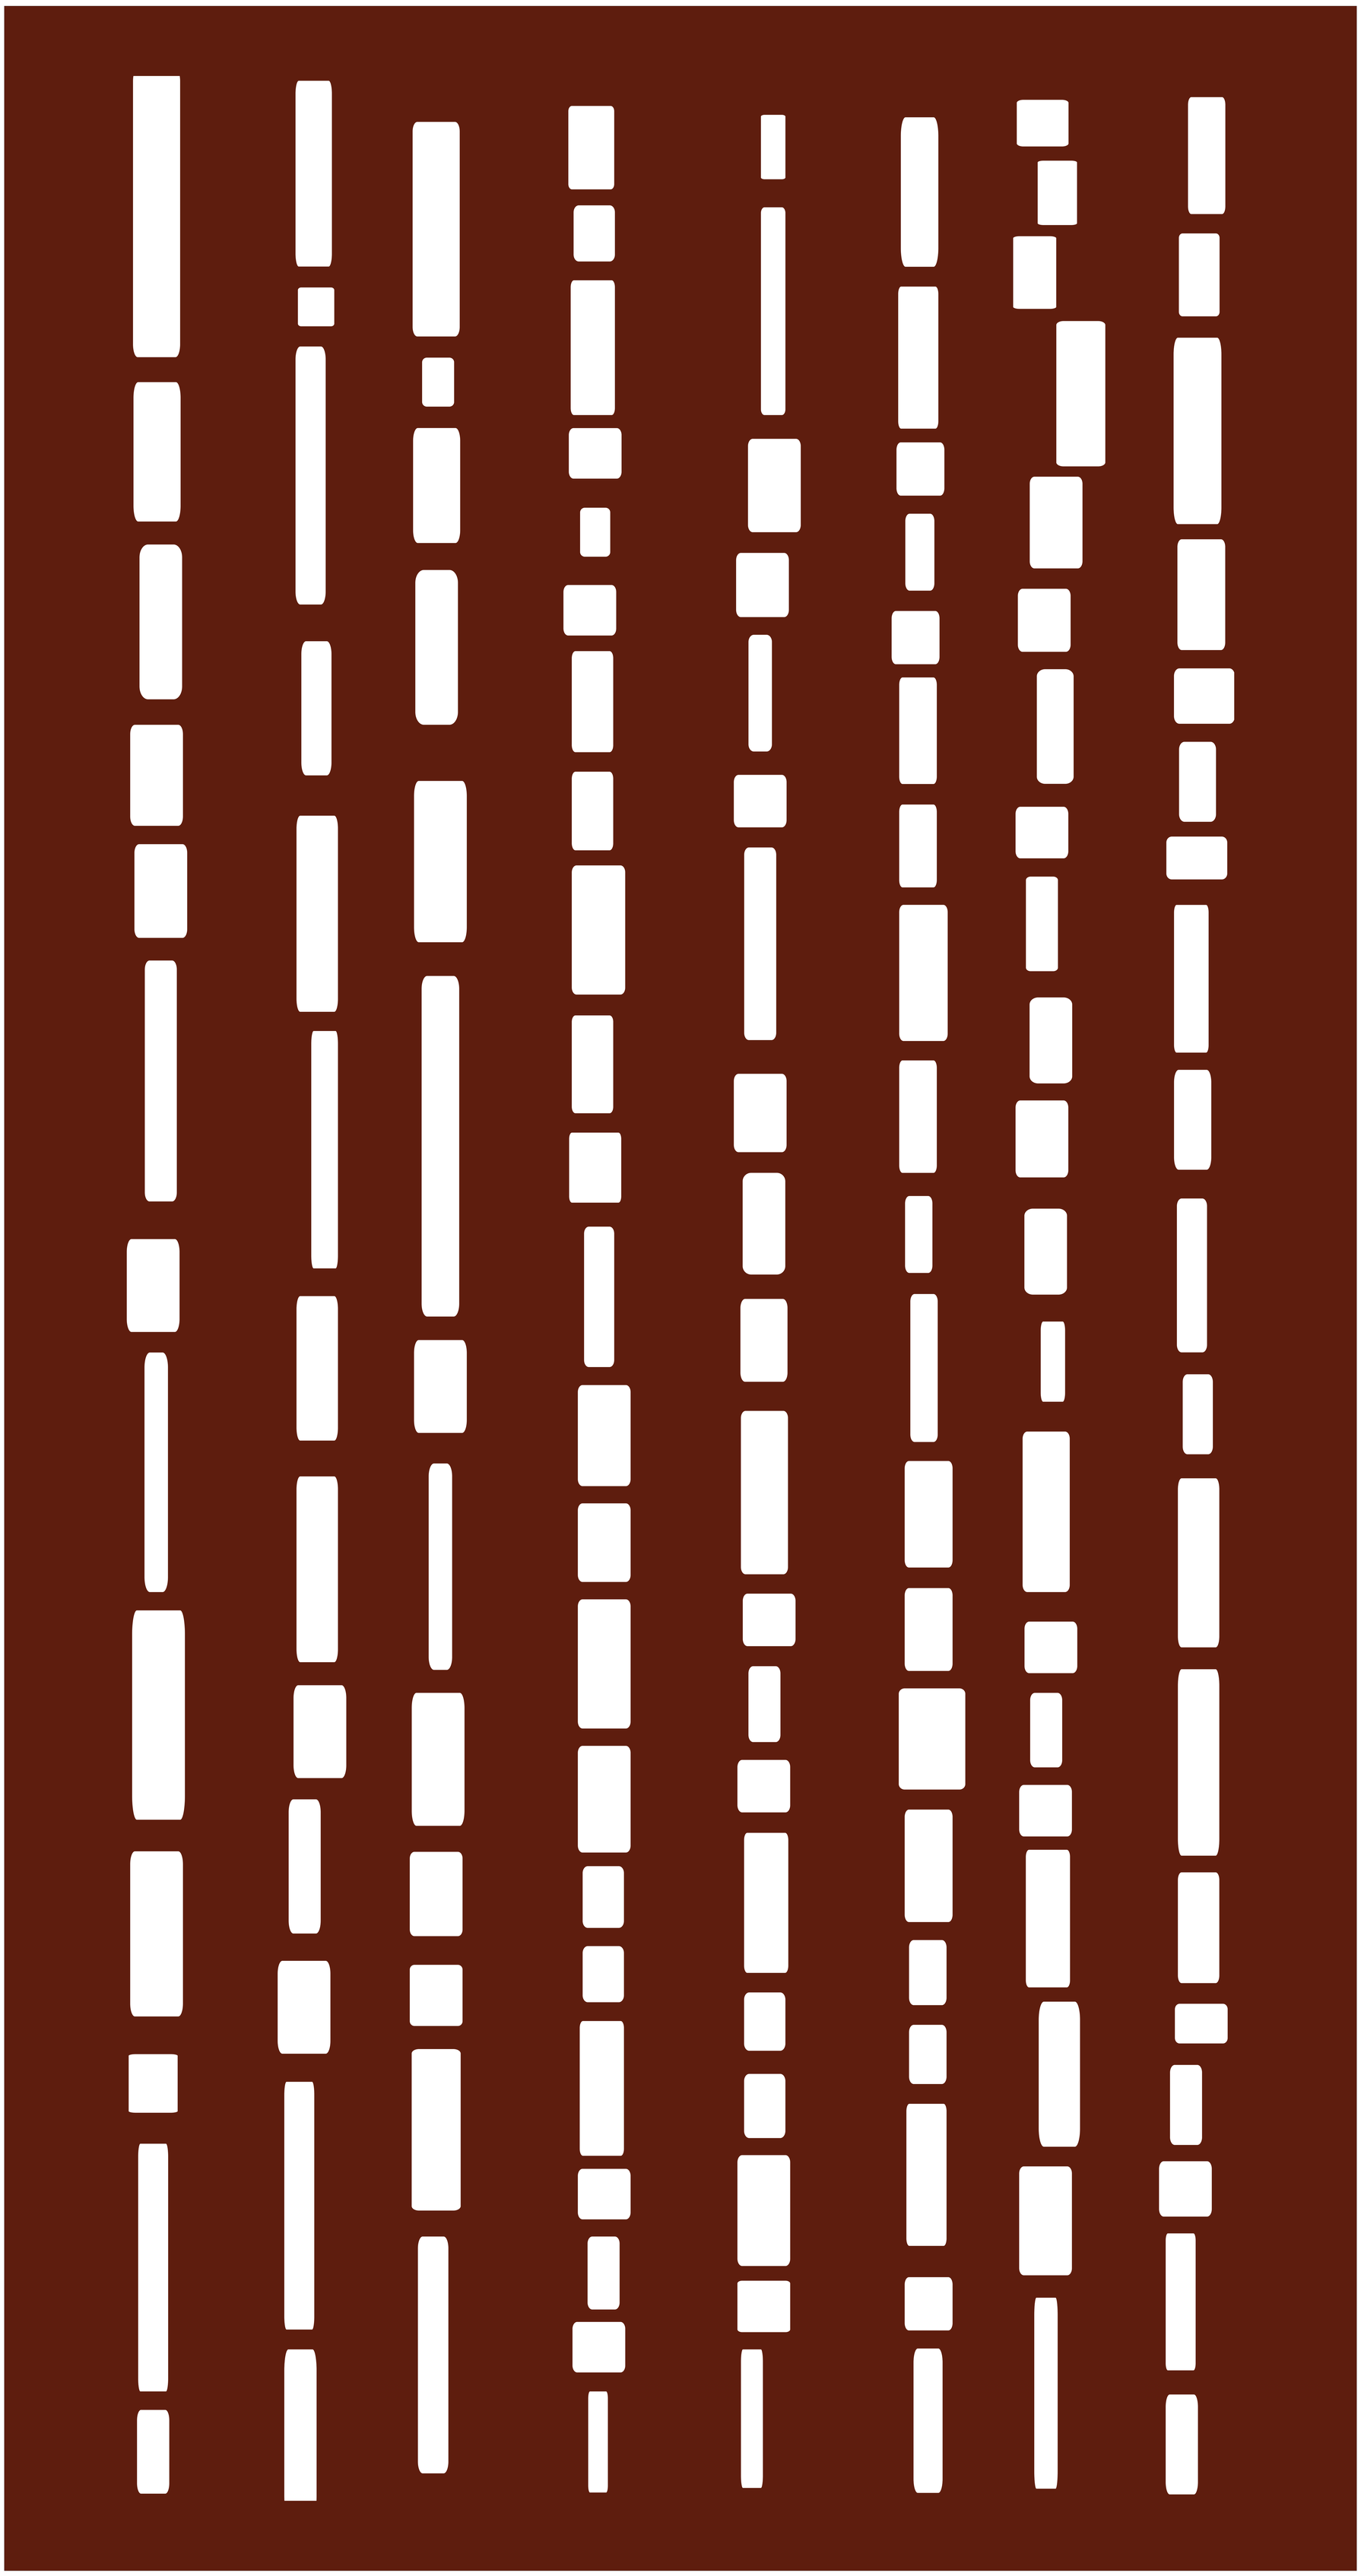

(4.0 3A46 5A79 3C130)

DESIGN 0010

(4.0 3A33 5A57 3C93)

DESIGN 0011

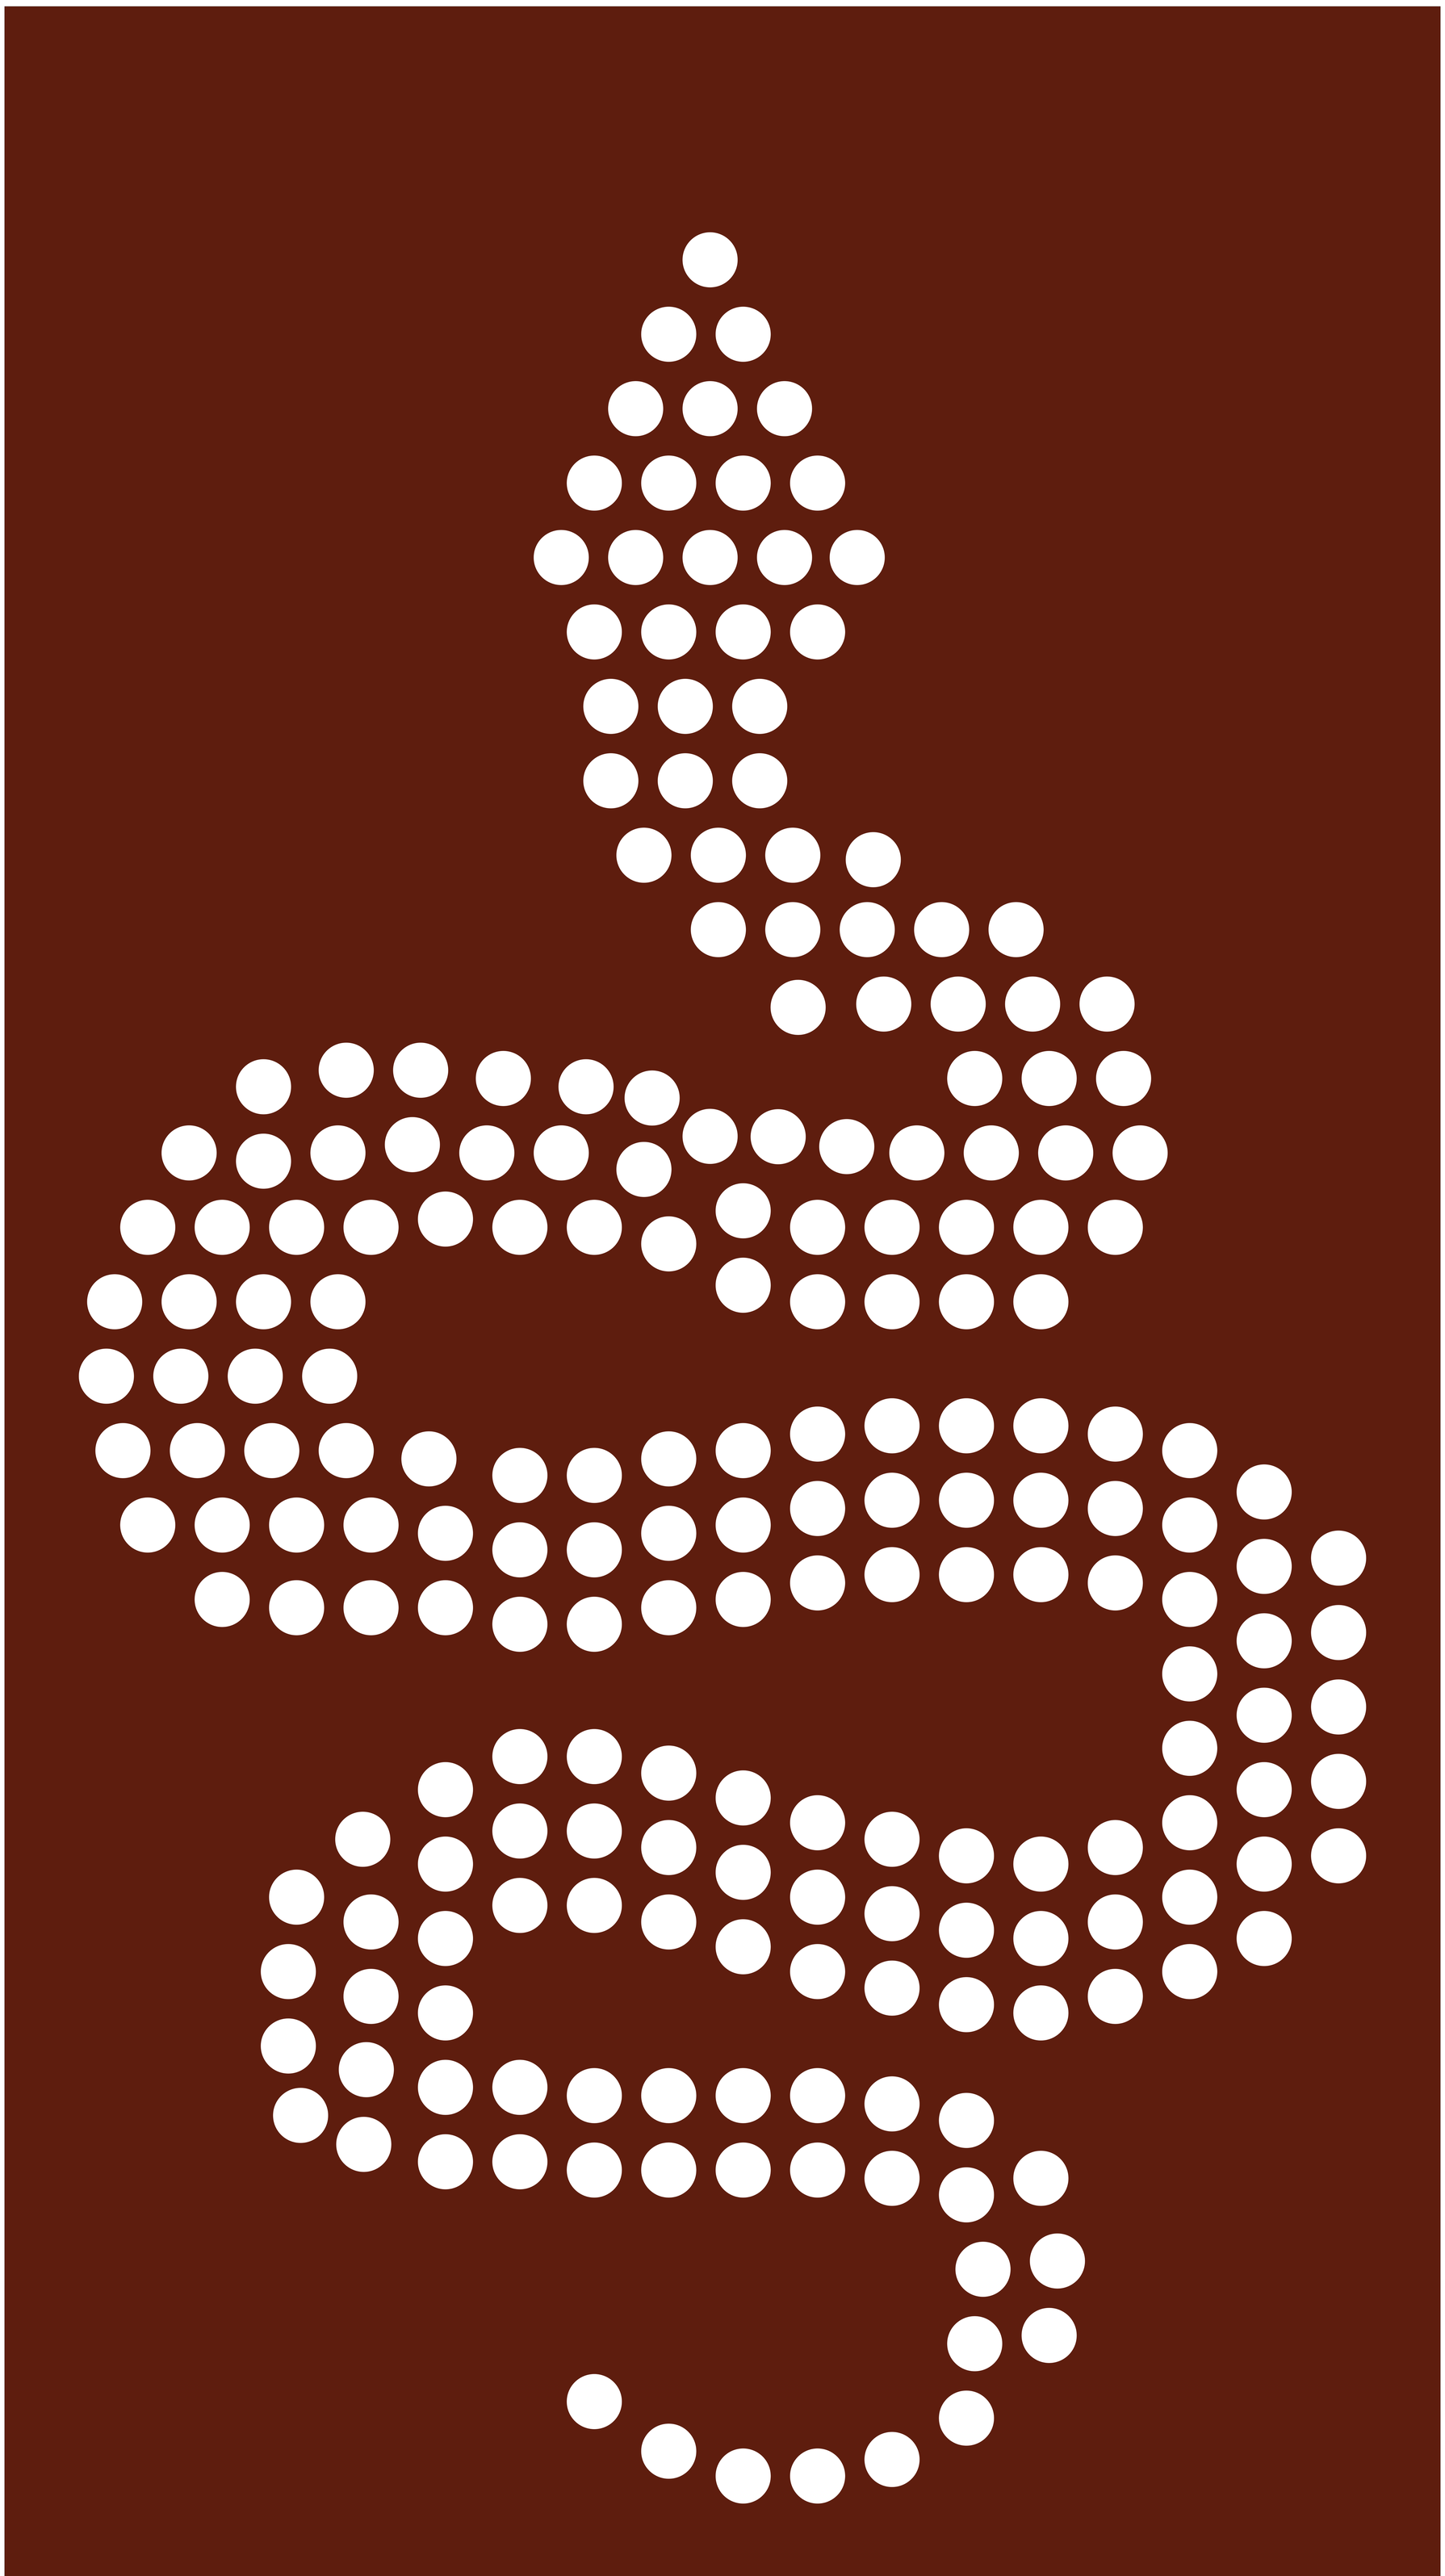

(4.0 3A42 5A73 3C119)

DESIGN 0012

(4.0 3A42 5A73 3C119)

DESIGN 0013

(4.0 3A42 5A73 3C119)

DESIGN 0014

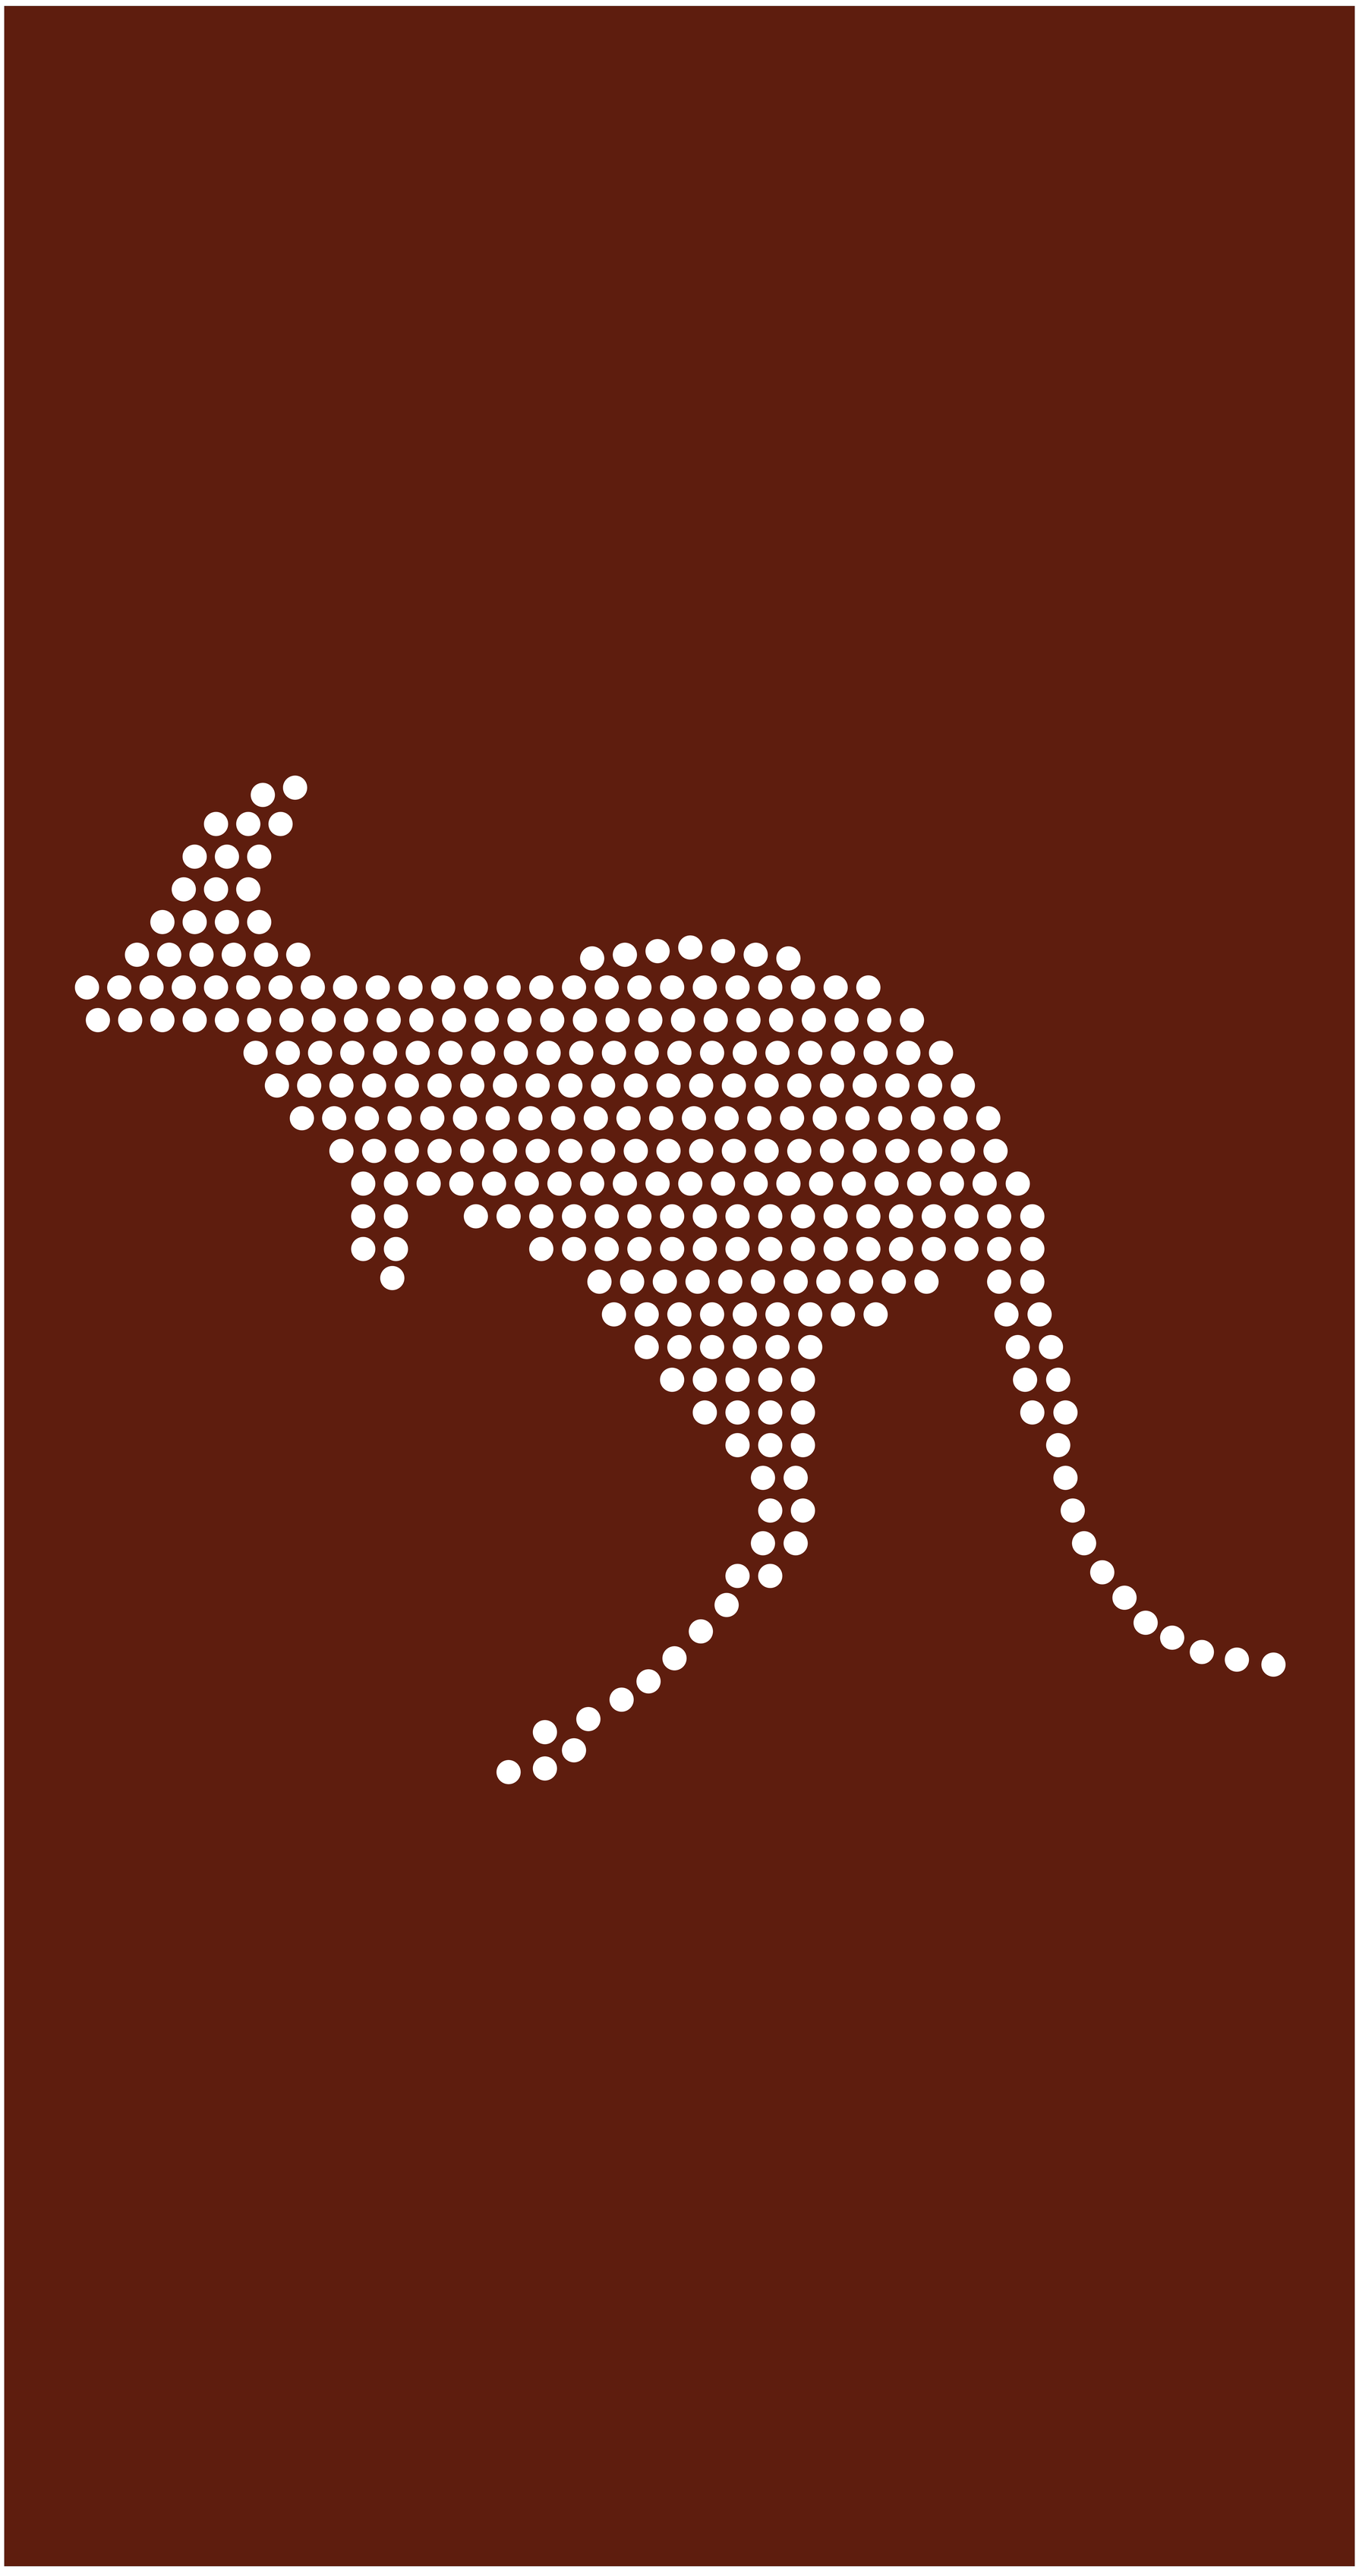

(4.0 3A42 5A73 3C119)

DESIGN 0015

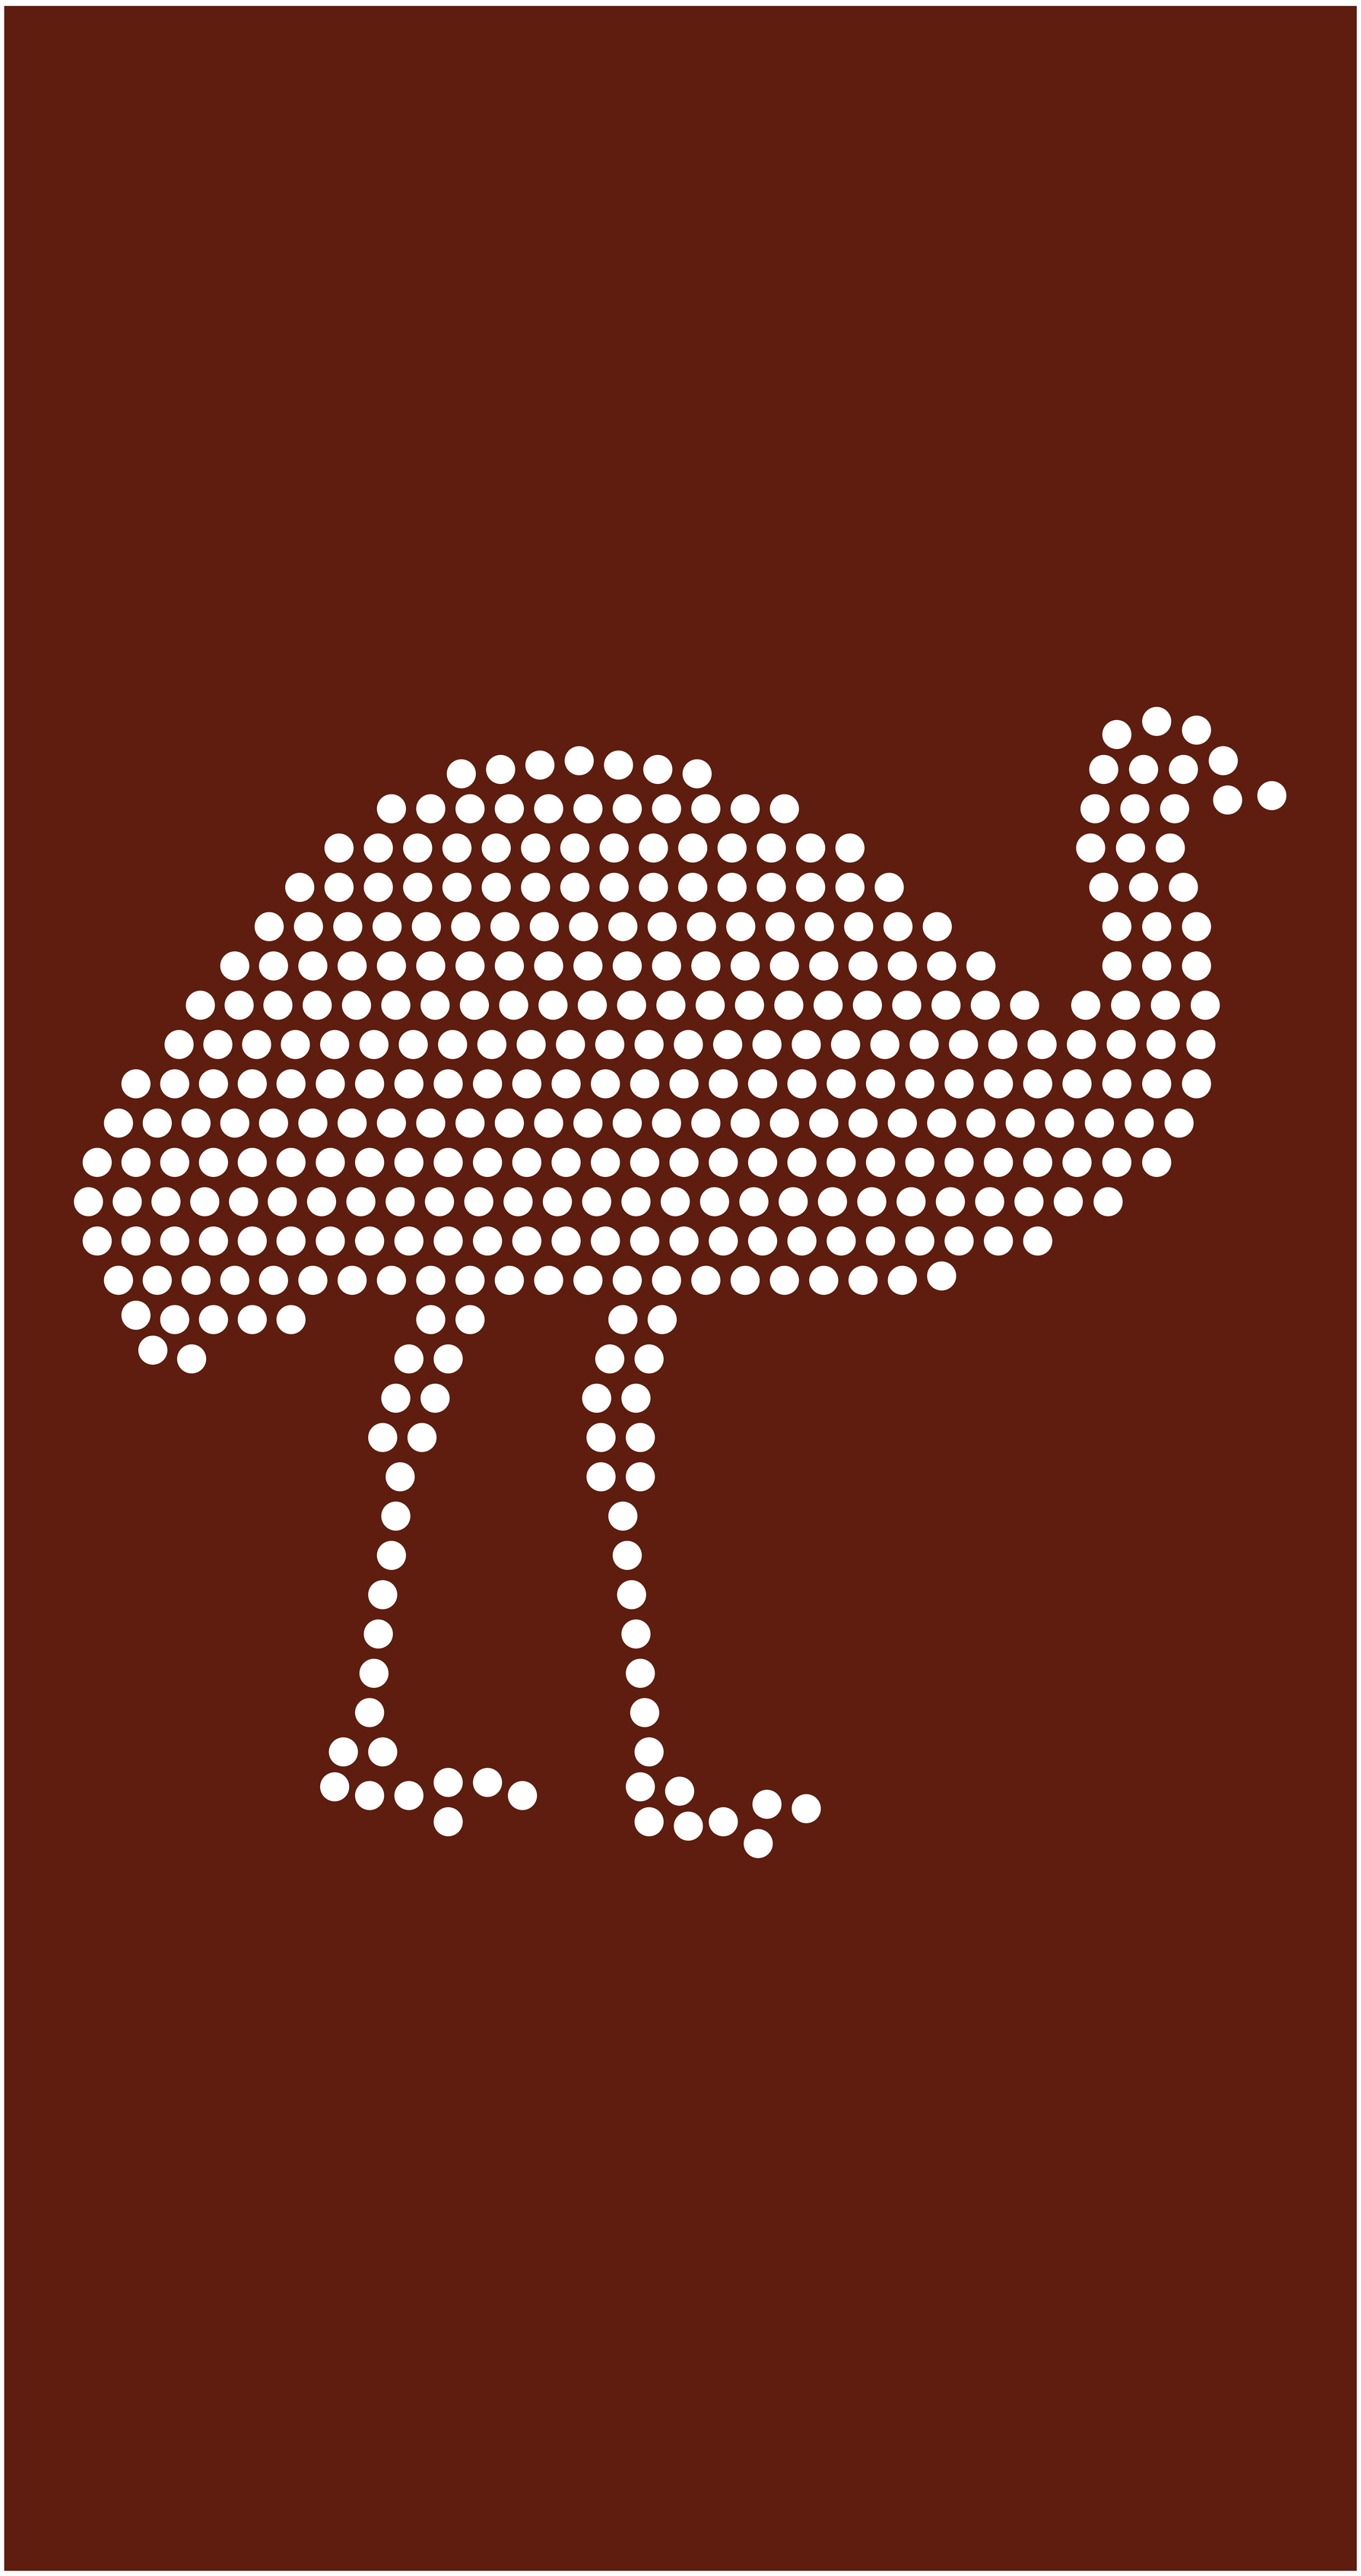

(4.0 3A42 5A73 3C119)

DESIGN 0016

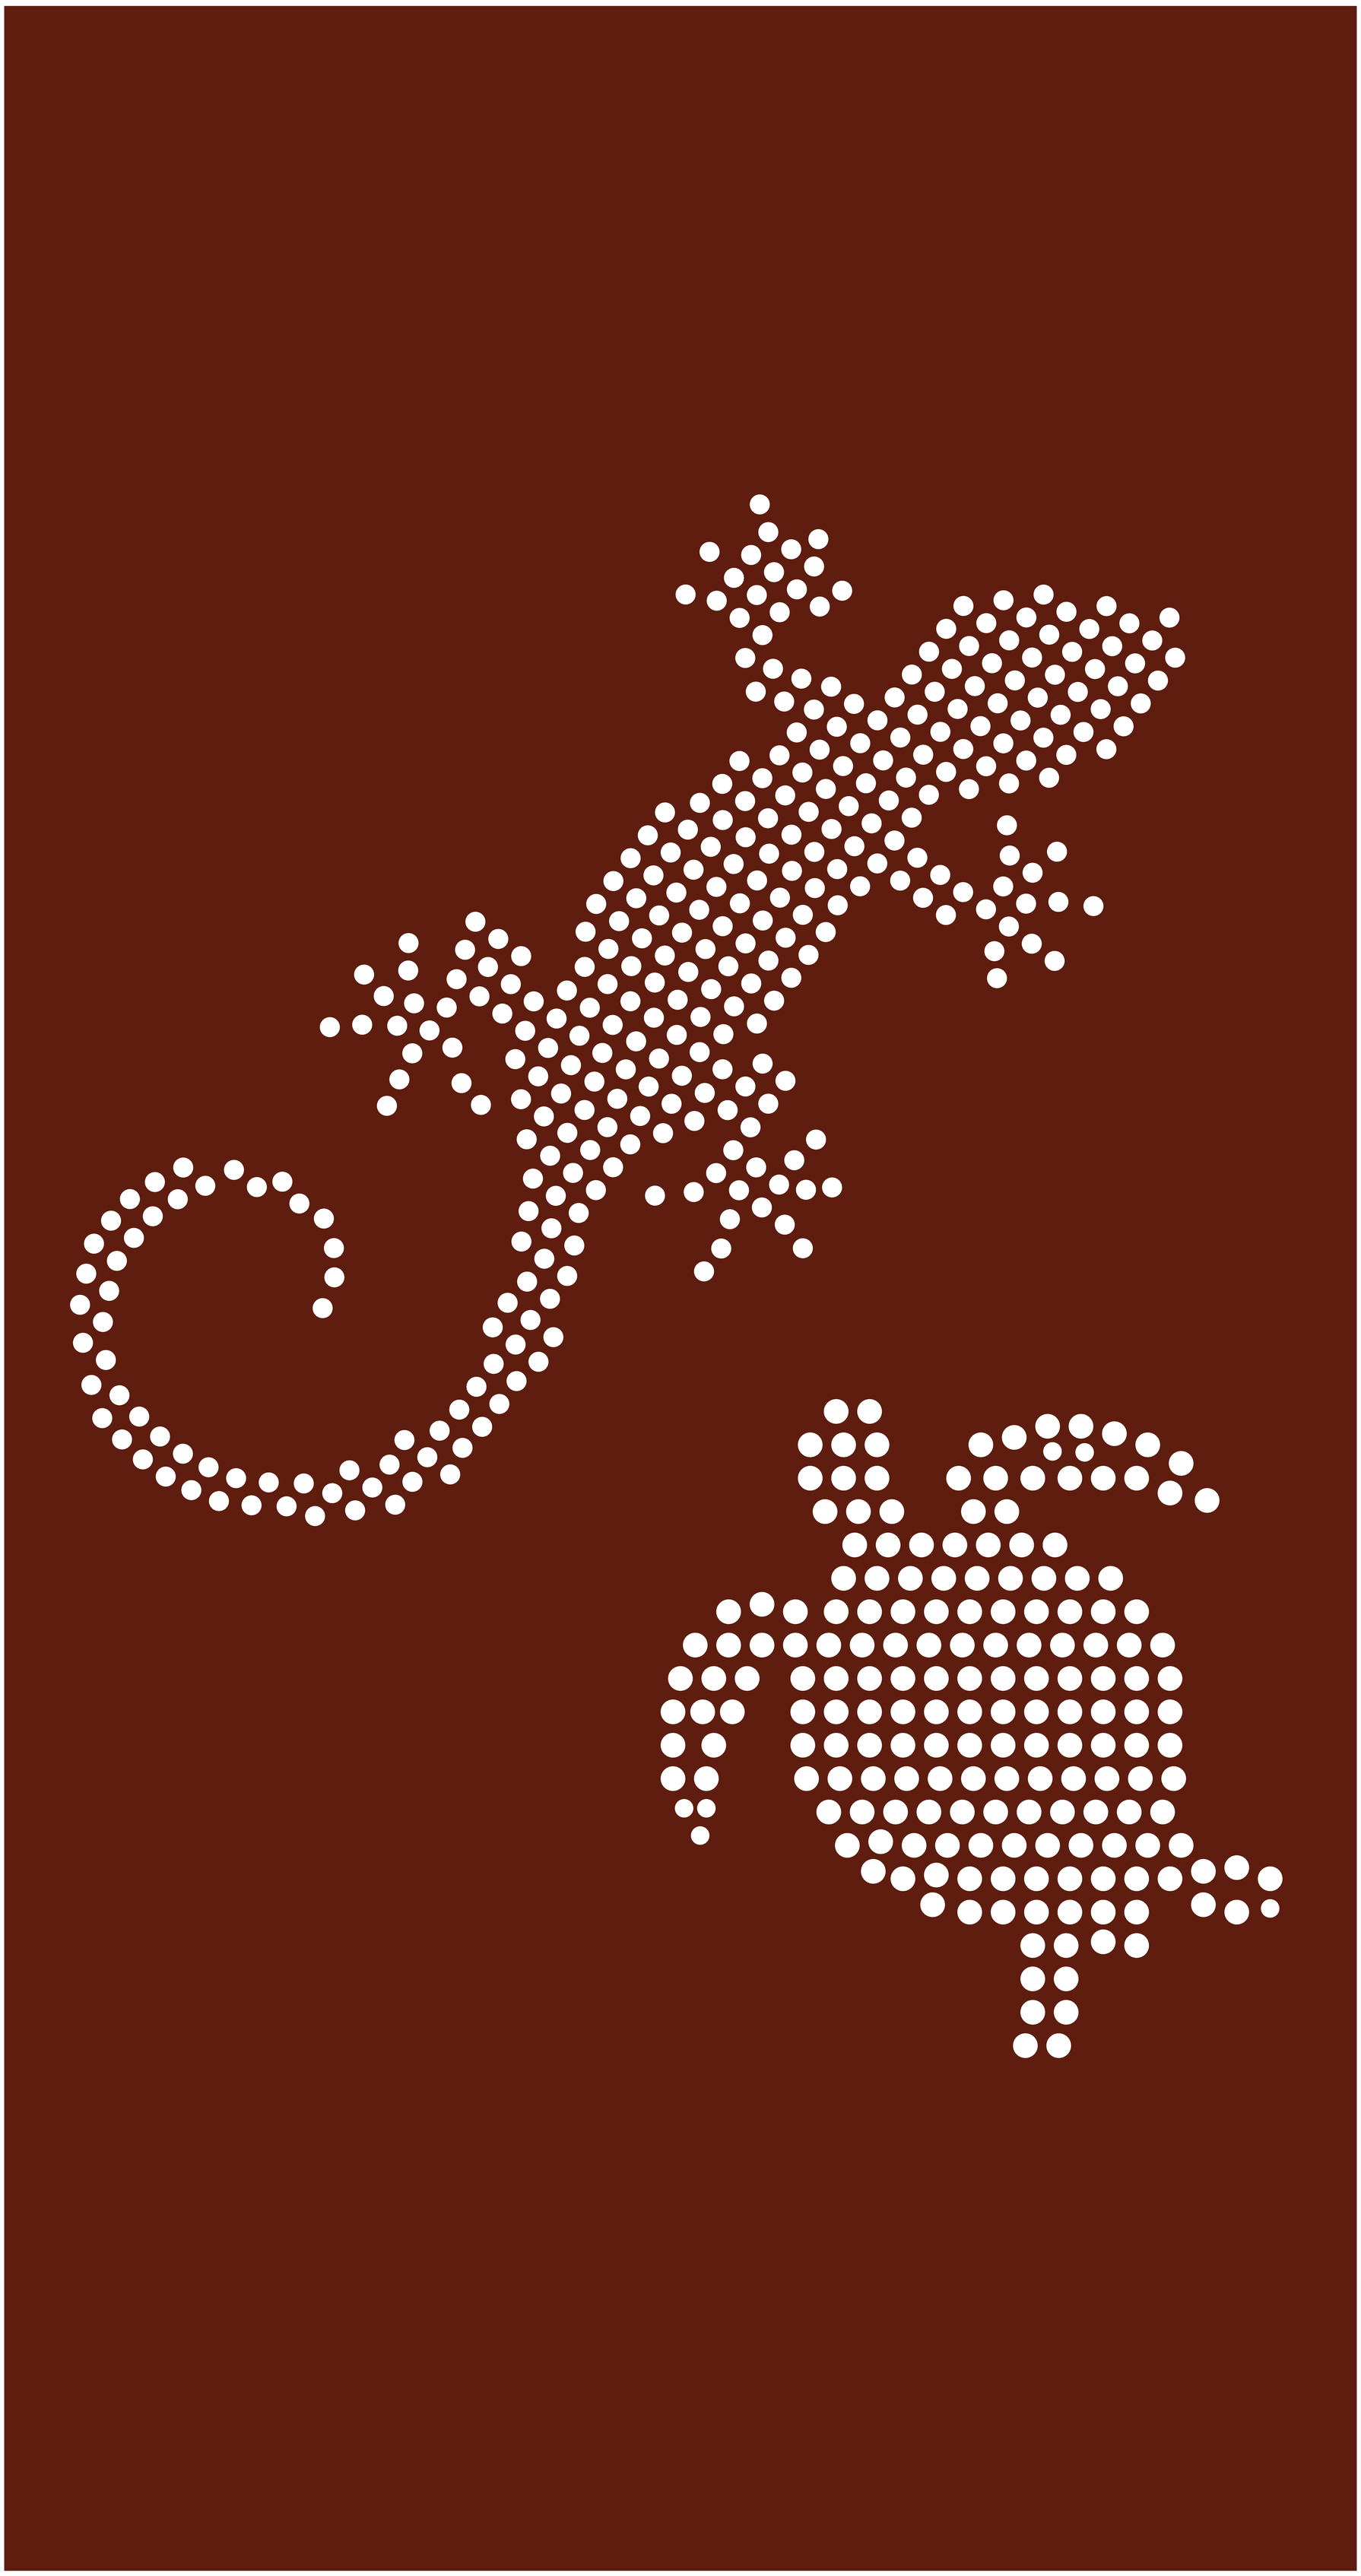

(4.0 3A42 5A73 3C119)

DESIGN 0017

(4.0 3A90 5A155 3C254)

DESIGN 0018

(4.0 3A34 5A59 3C96)

DESIGN 0019

(4.0 3A22 5A38 3C62)

DESIGN 0020

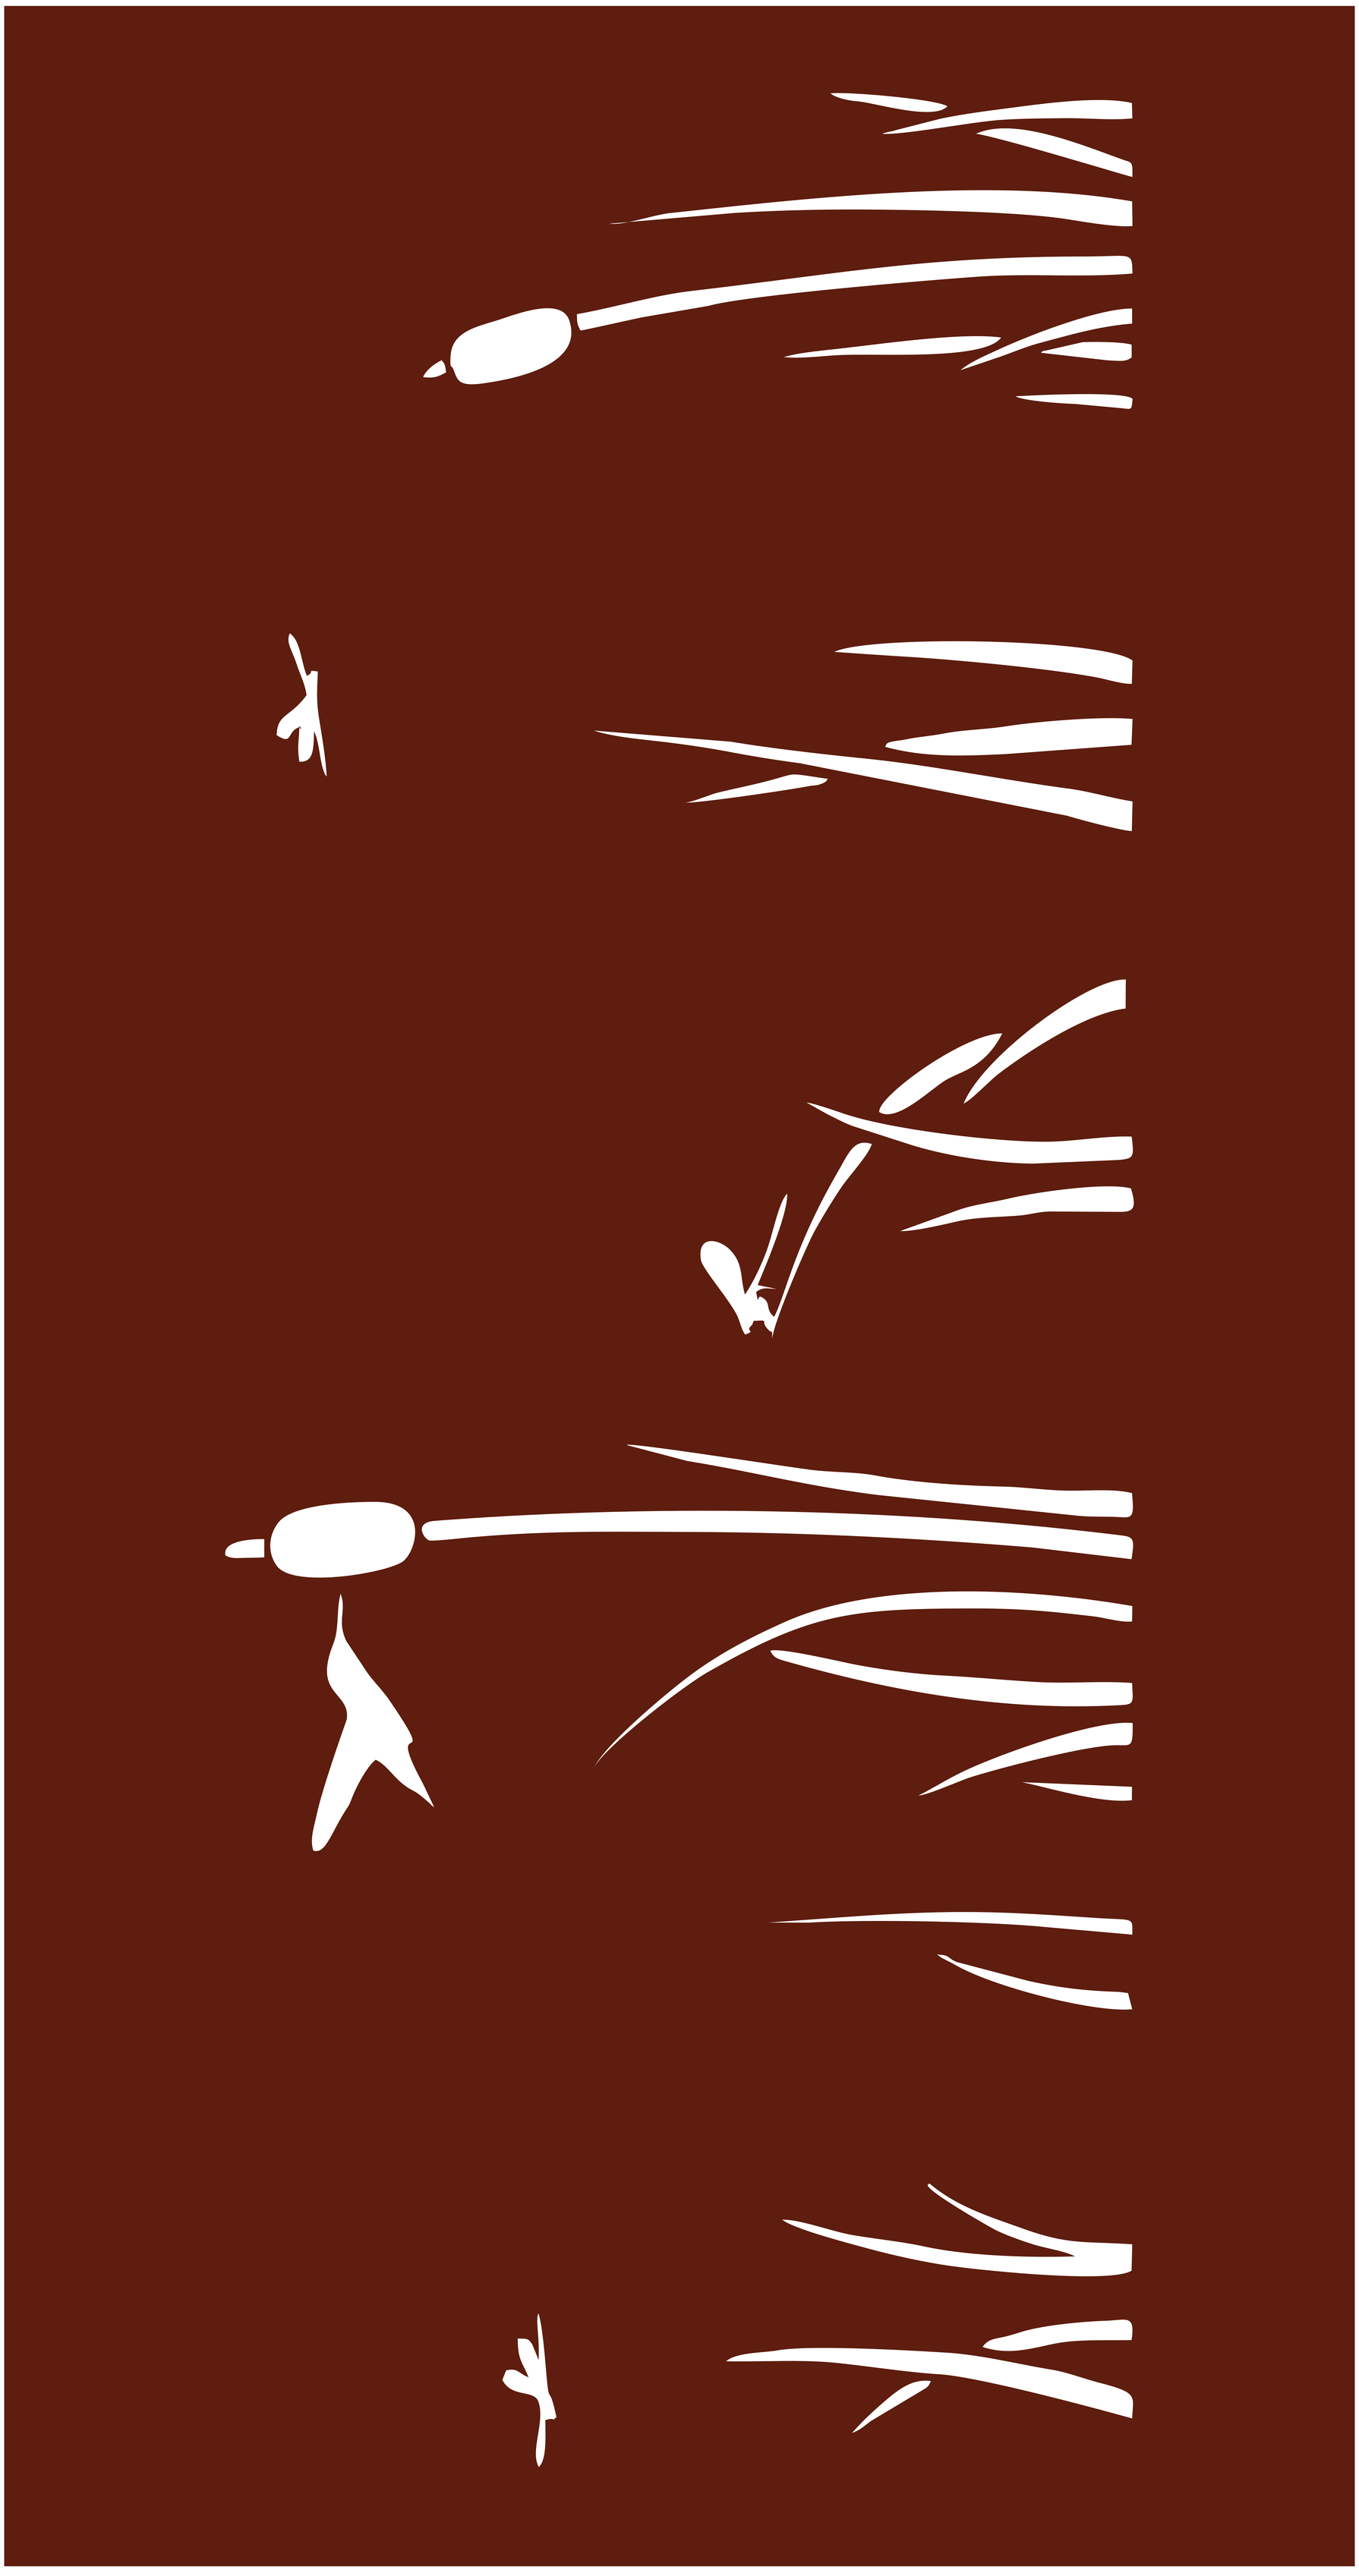

(4.0 3A25 5A43 3C71)

DESIGN 0021

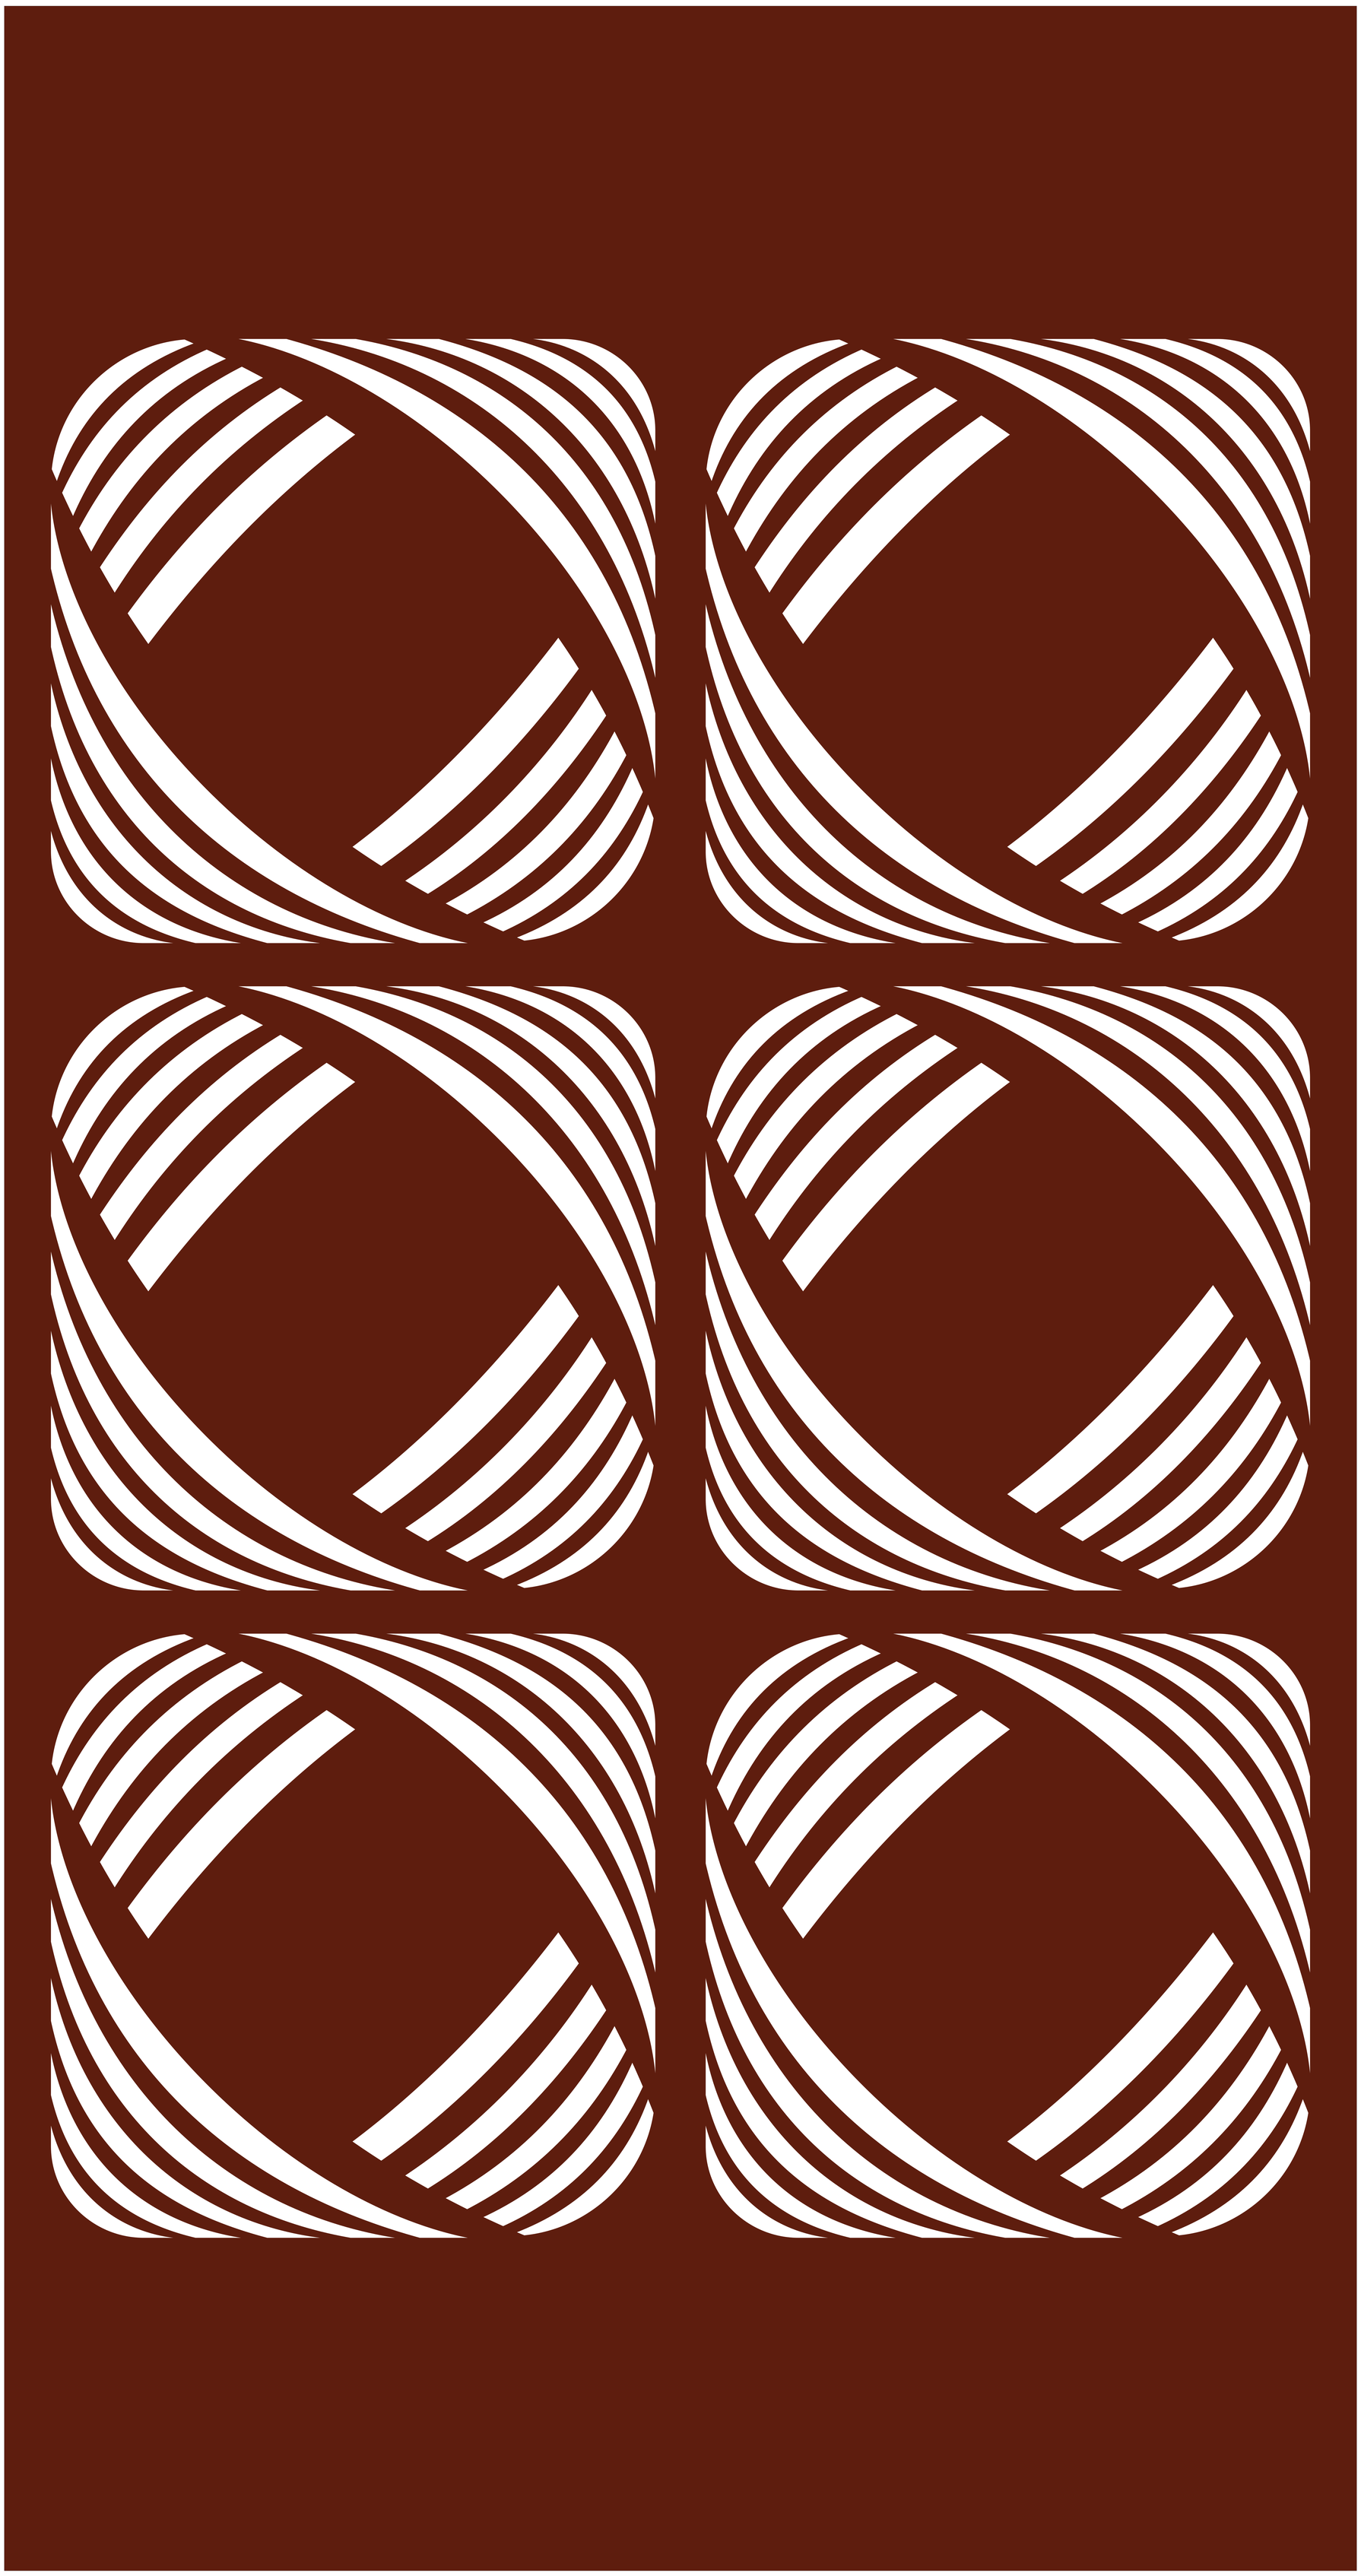

(4.0 3A75 5A129 3C212)

DESIGN 0022

(4.0 3A40 5A69 3C113)

DESIGN 0023

(4.0 3A54 5A93 3C153)

DESIGN 0024

(4.0 3A90 5A155 3C254)

DESIGN 0025

(4.0 3A43 5A74 3C122)

DESIGN 0026

(4.0 3A16 5A28 3C45)

DESIGN 0027

(4.0 3A46 5A79 3C130)

DESIGN 0028

(4.0 3A32 5A55 3C90)

DESIGN 0029

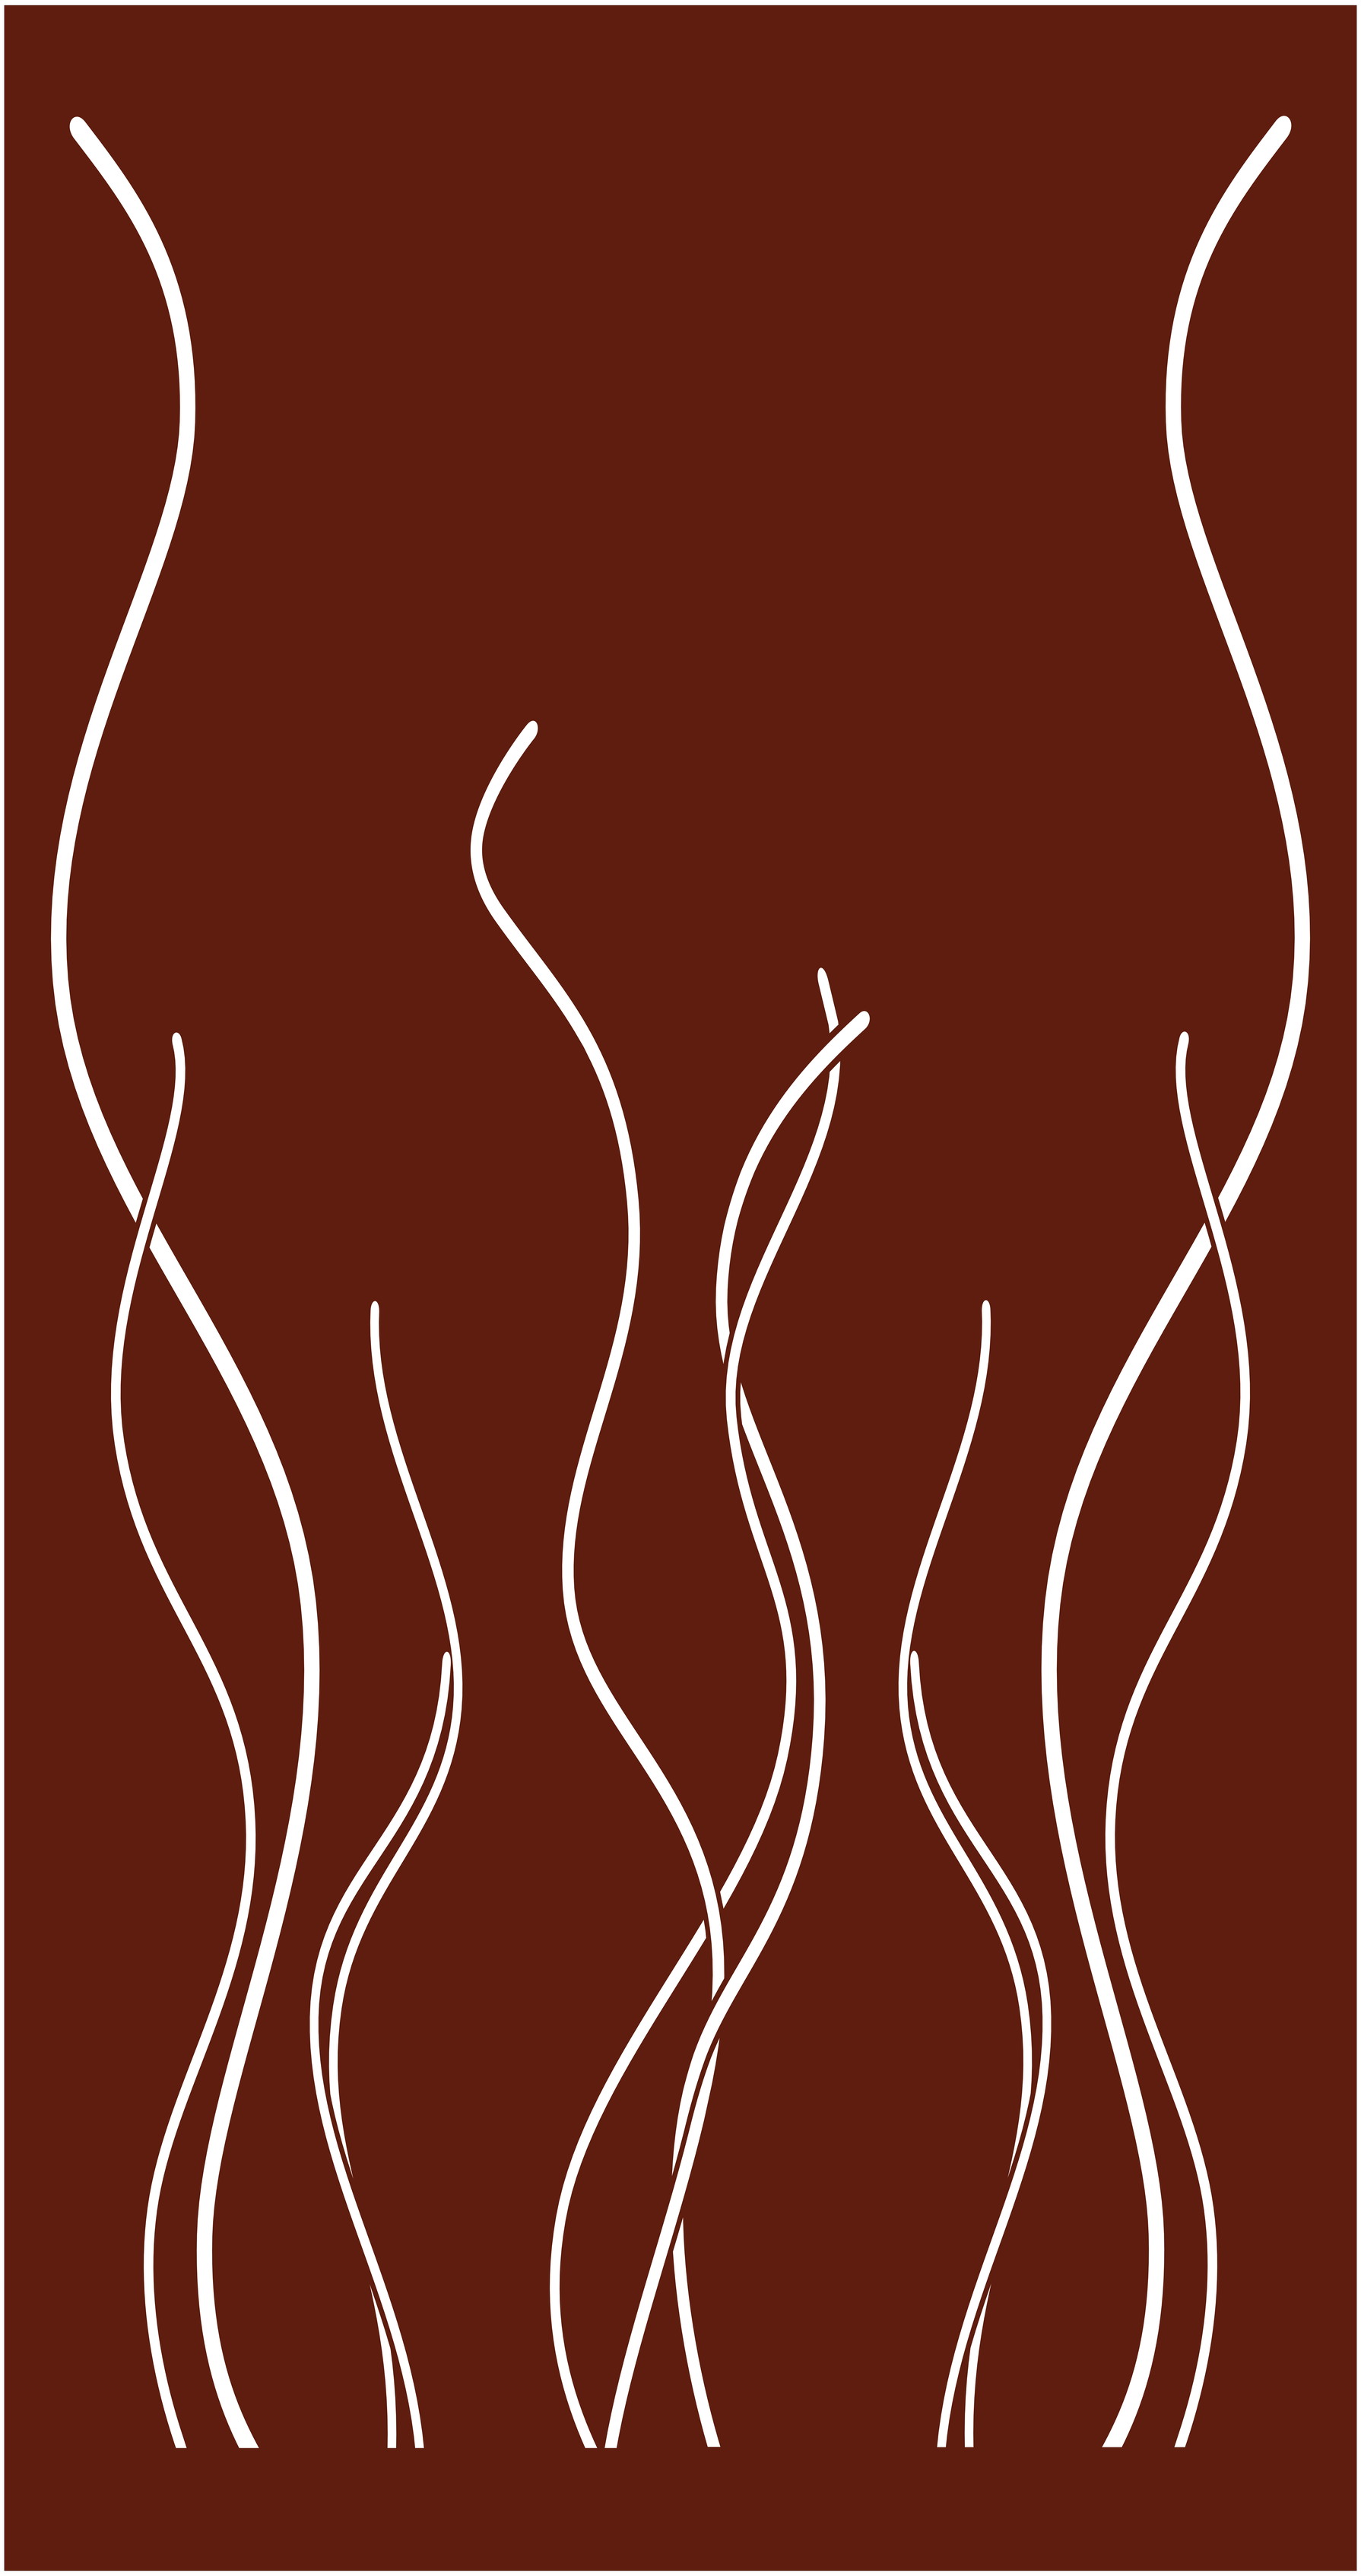

(4.0 3A33 5A57 3C93)

DESIGN 0030

(4.0 3A64 5A110 3C181)

DESIGN 0031

(4.0 3A32 5A55 3C90)

DESIGN 0032

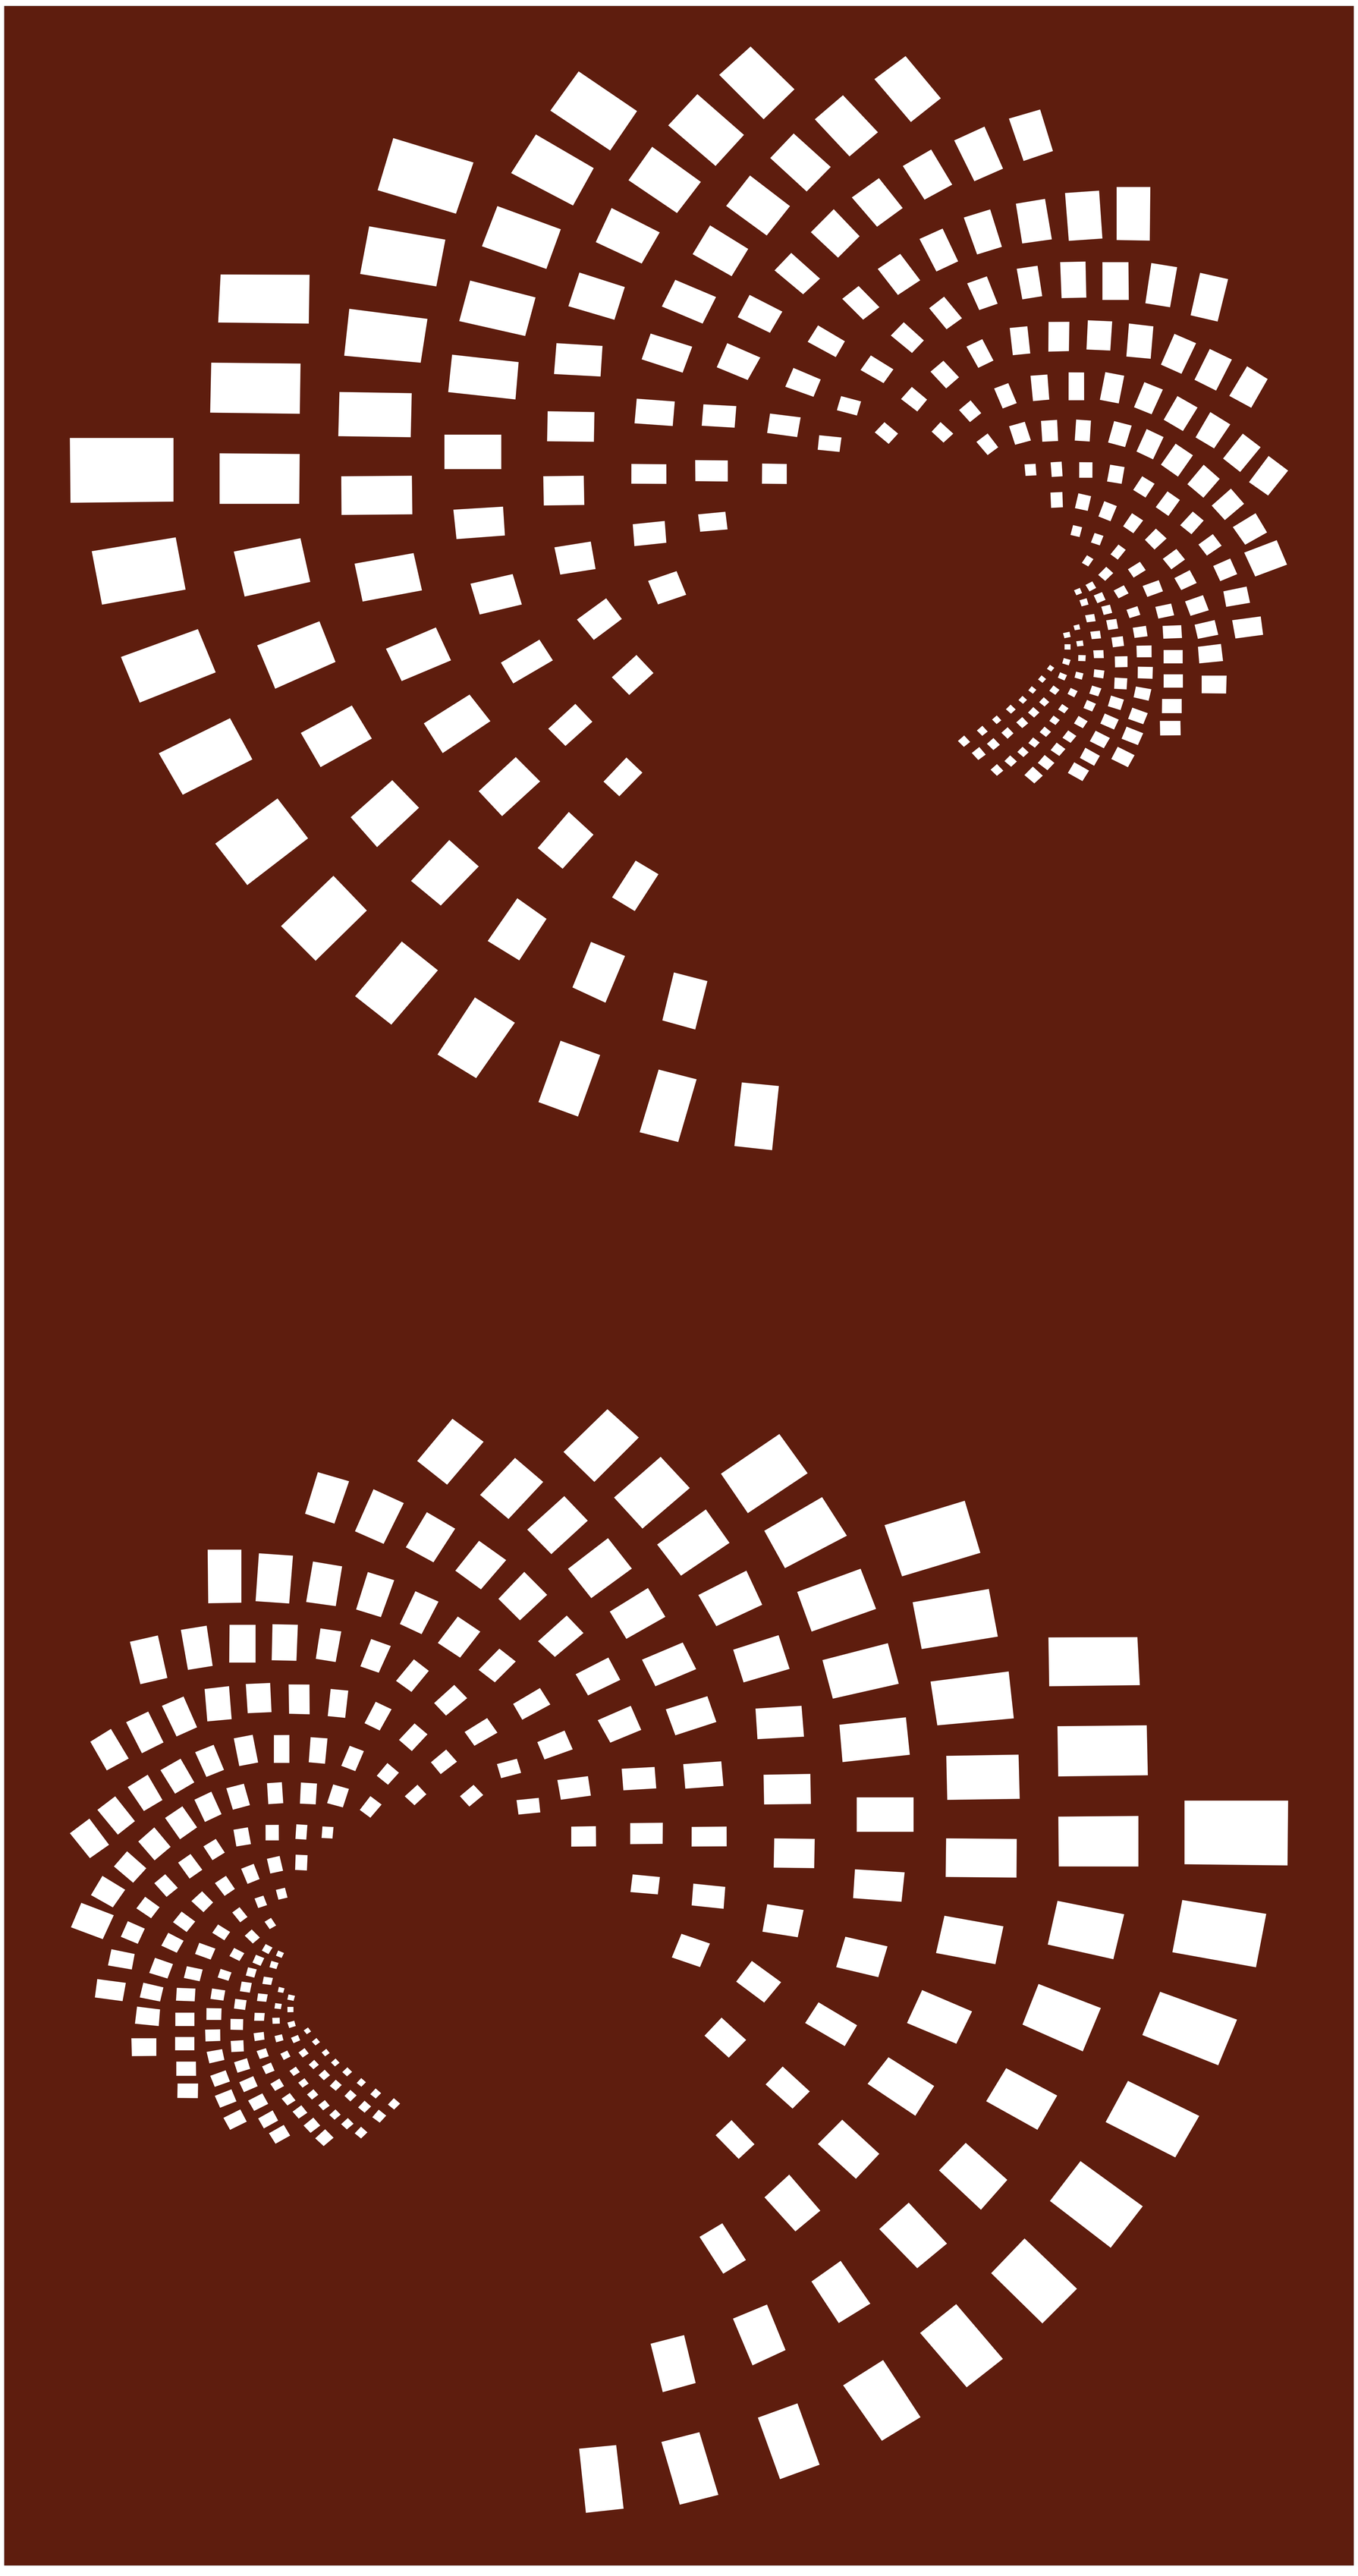

(4.0 3A60 5A103 3C169)

DESIGN 0033

(4.0 3A25 5A43 3C71)

DESIGN 0034

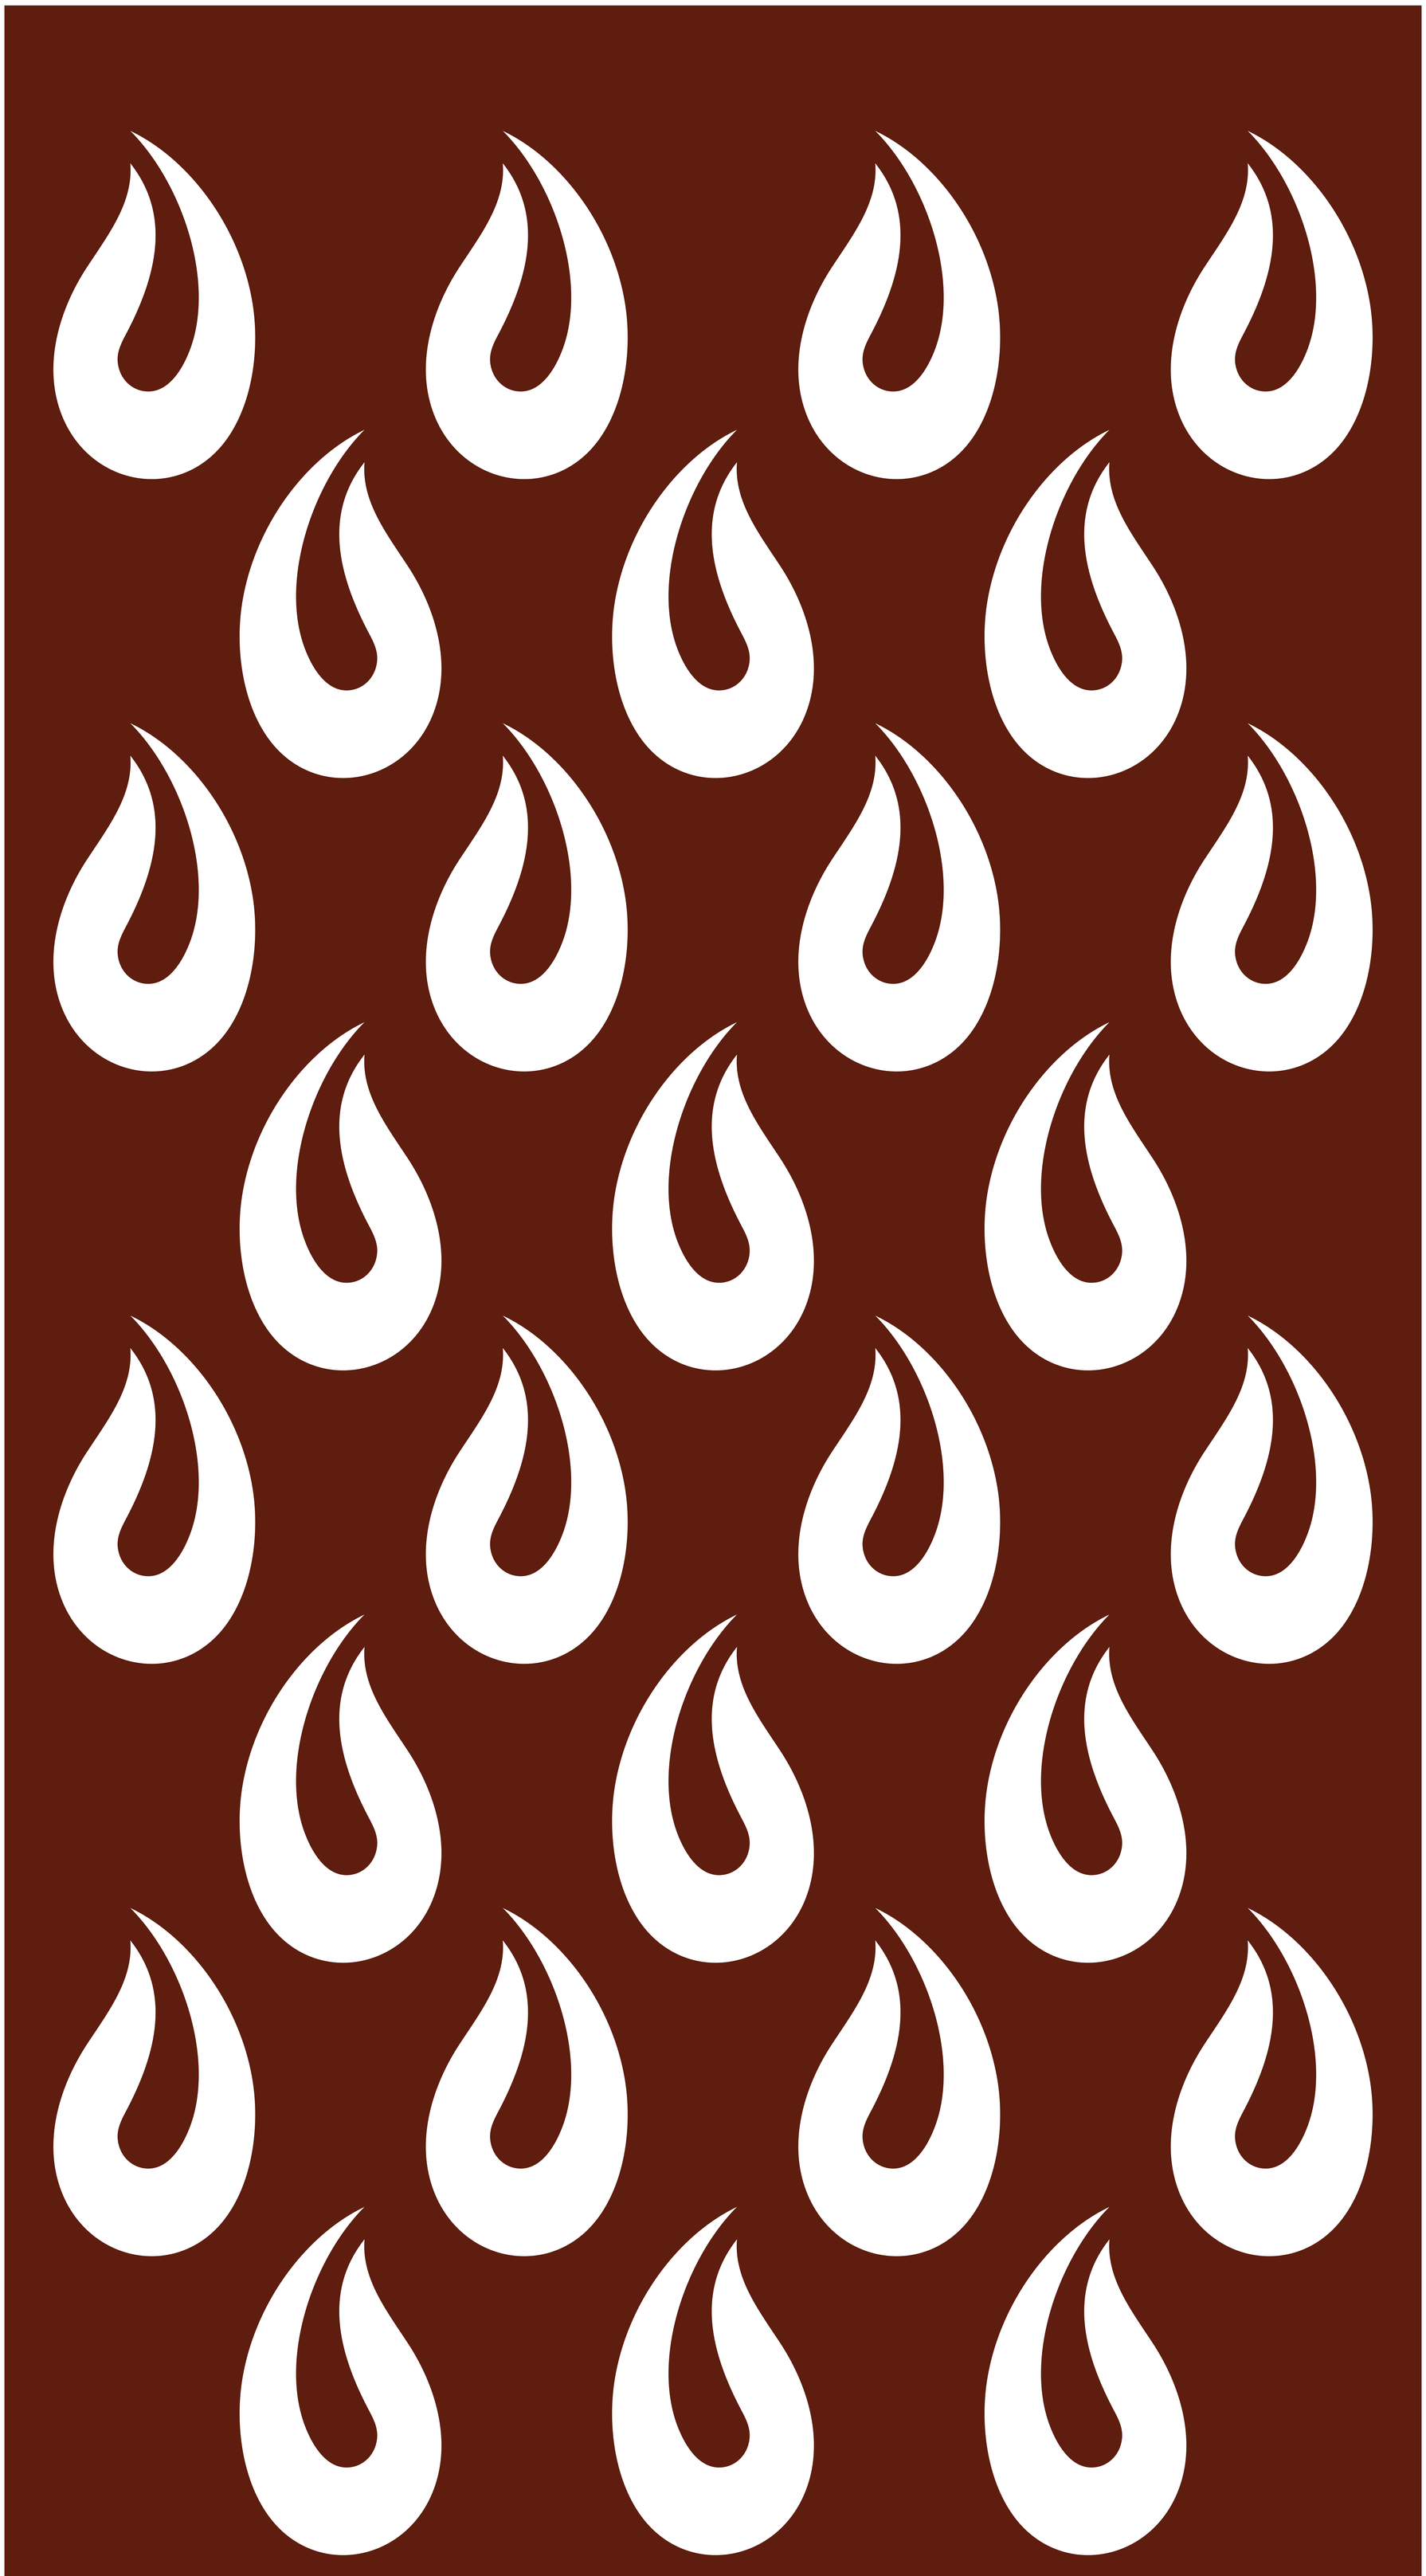

(4.0 3A37 5A64 3C105)

DESIGN 0035

(4.0 3A45 5A78 3C127)

DESIGN 0036

(4.0 3A69 5A119 3C195)

DESIGN 0037

(4.0 3A11 5A19 3C31)

DESIGN 0038

(4.0 3A22 5A38 3C62)

DESIGN 0039

(4.0 3A33 5A57 3C93)

DESIGN 0040

(4.0 3A107 5A184 3C302)

DESIGN 0041

(4.0 3A30 5A52 3C85)

DESIGN 0042

(4.0 3A30 5A52 3C85)

DESIGN 0043

(4.0 3A53 5A92 3C150)

DESIGN 0044

(4.0 3A55 5A95 3C155)

DESIGN 0045

(4.0 3A71 5A122 3C200)

DESIGN 0046

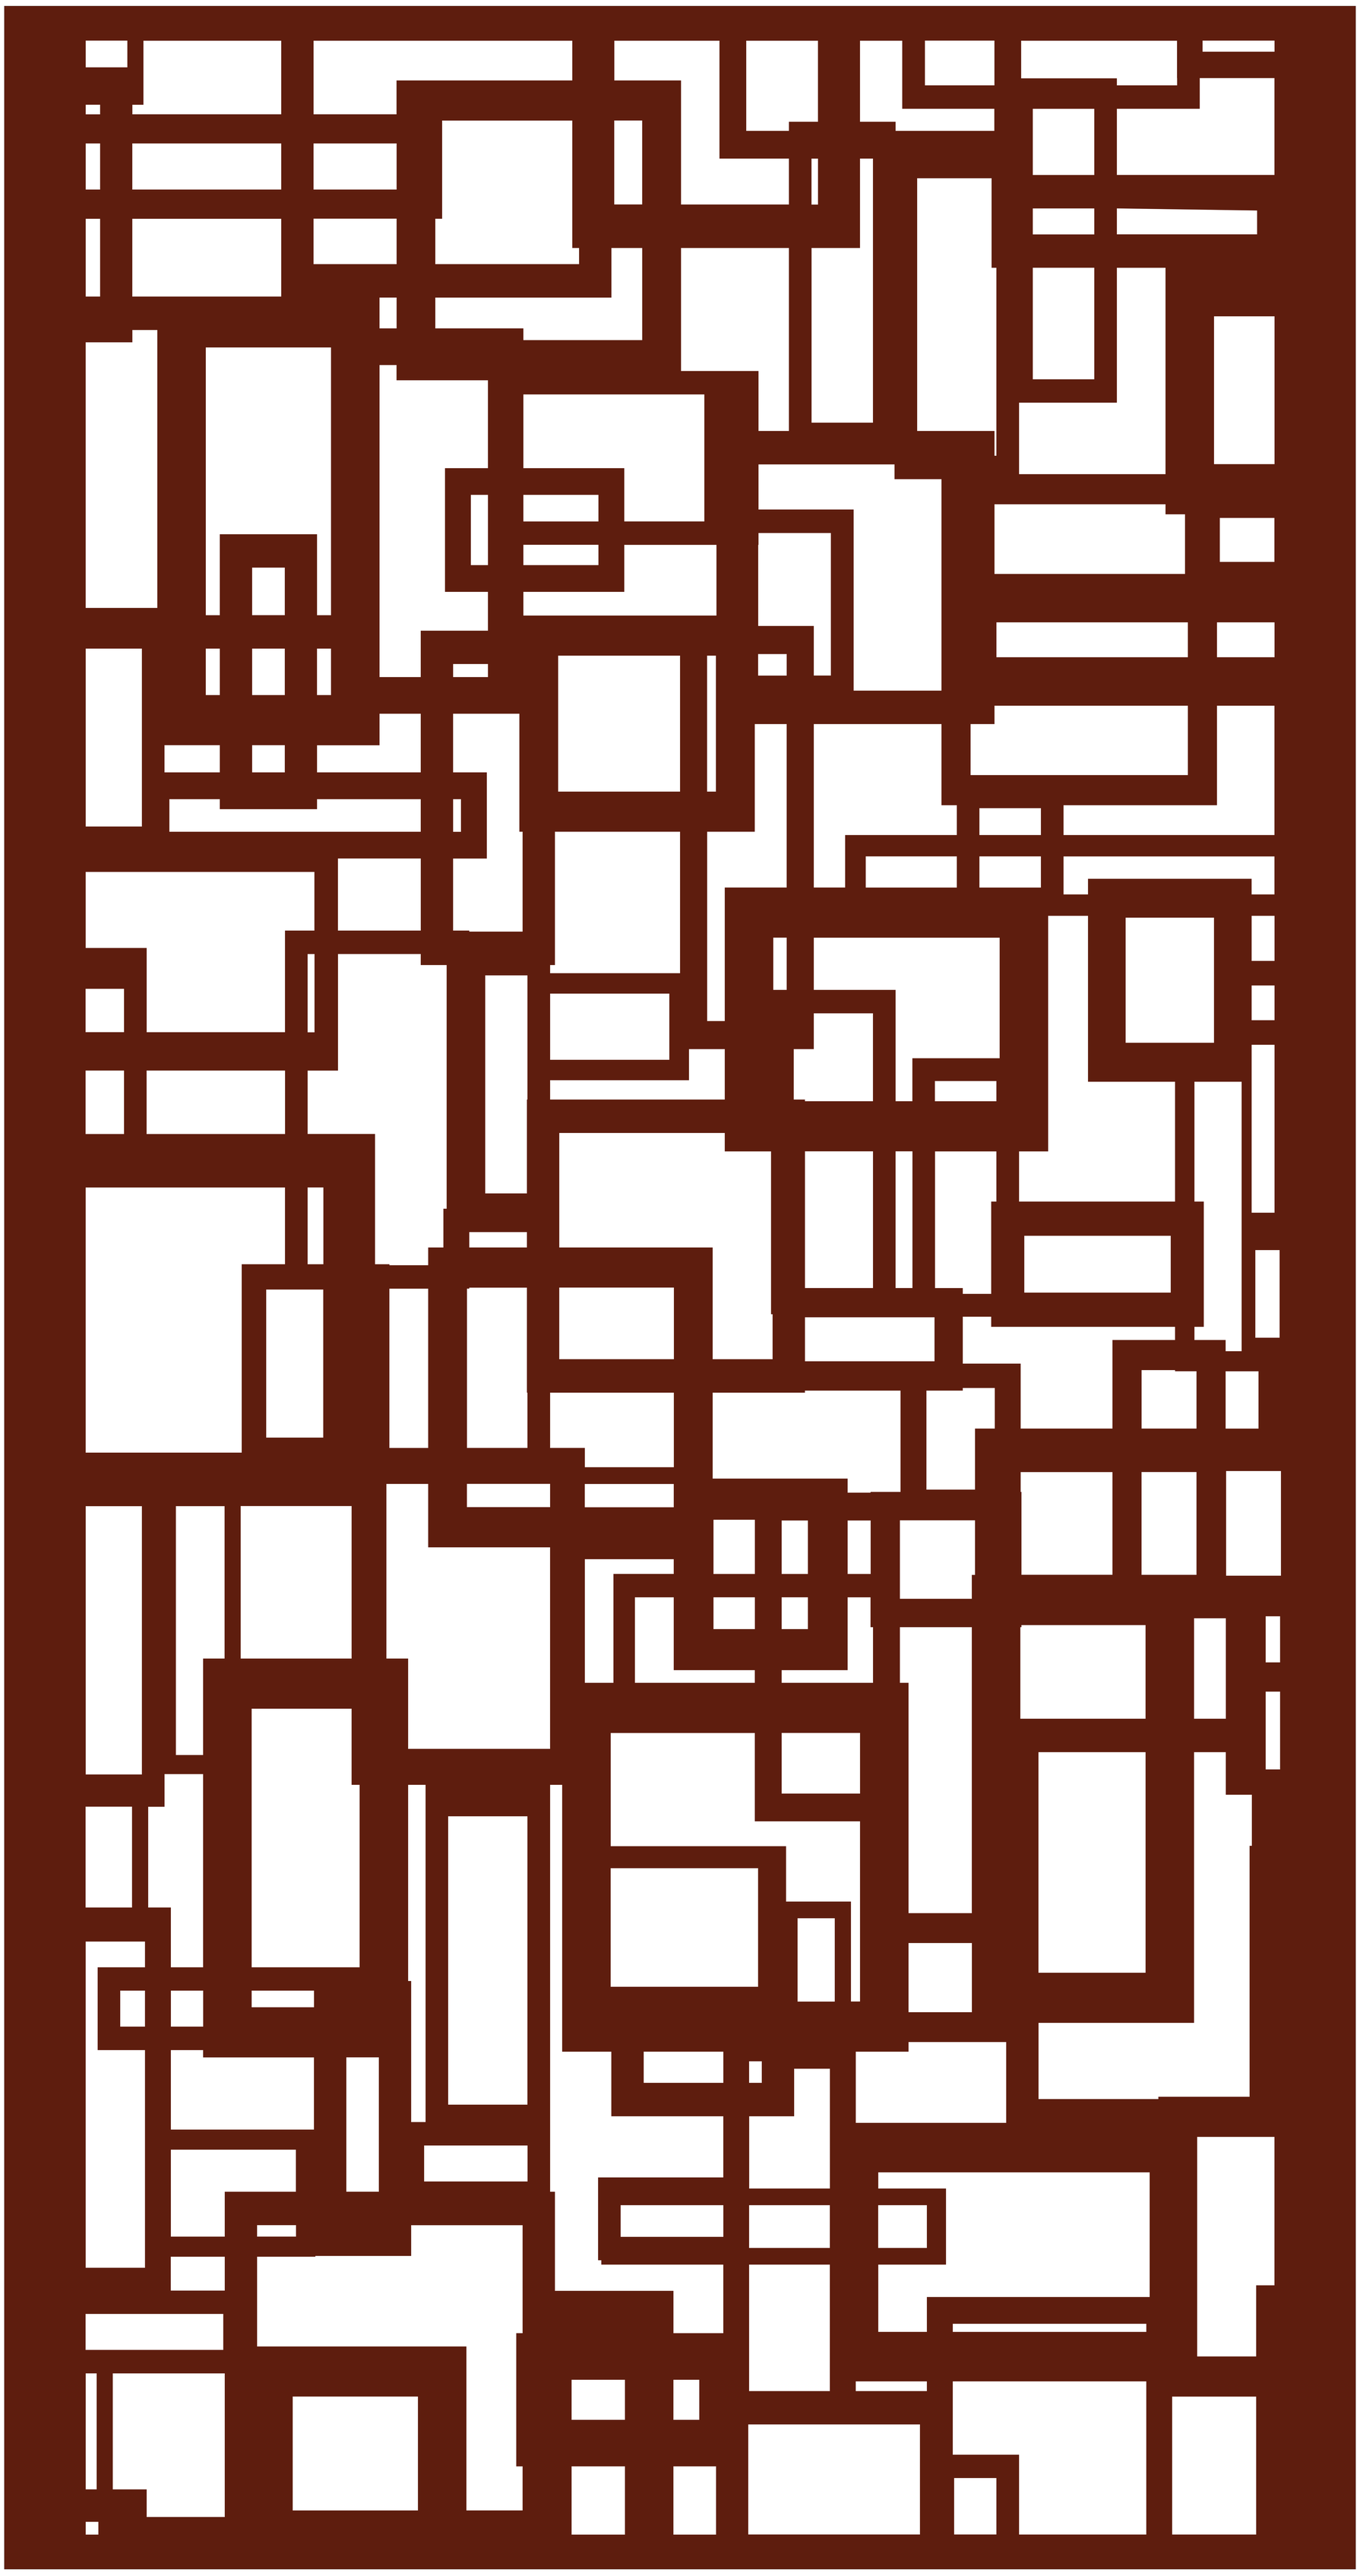

(4.0 3A71 5A122 3C200)

DESIGN 0047

(4.0 3A104 5A179 3C293)

DESIGN 0048

(4.0 3A48 5A83 3C136)

DESIGN 0049

(4.0 3A80 5A138 3C226)

DESIGN 0050

(4.0 3A97 5A167 3C274)

DESIGN 0051

(4.0 3A121 5A208 3C342)

DESIGN 0052

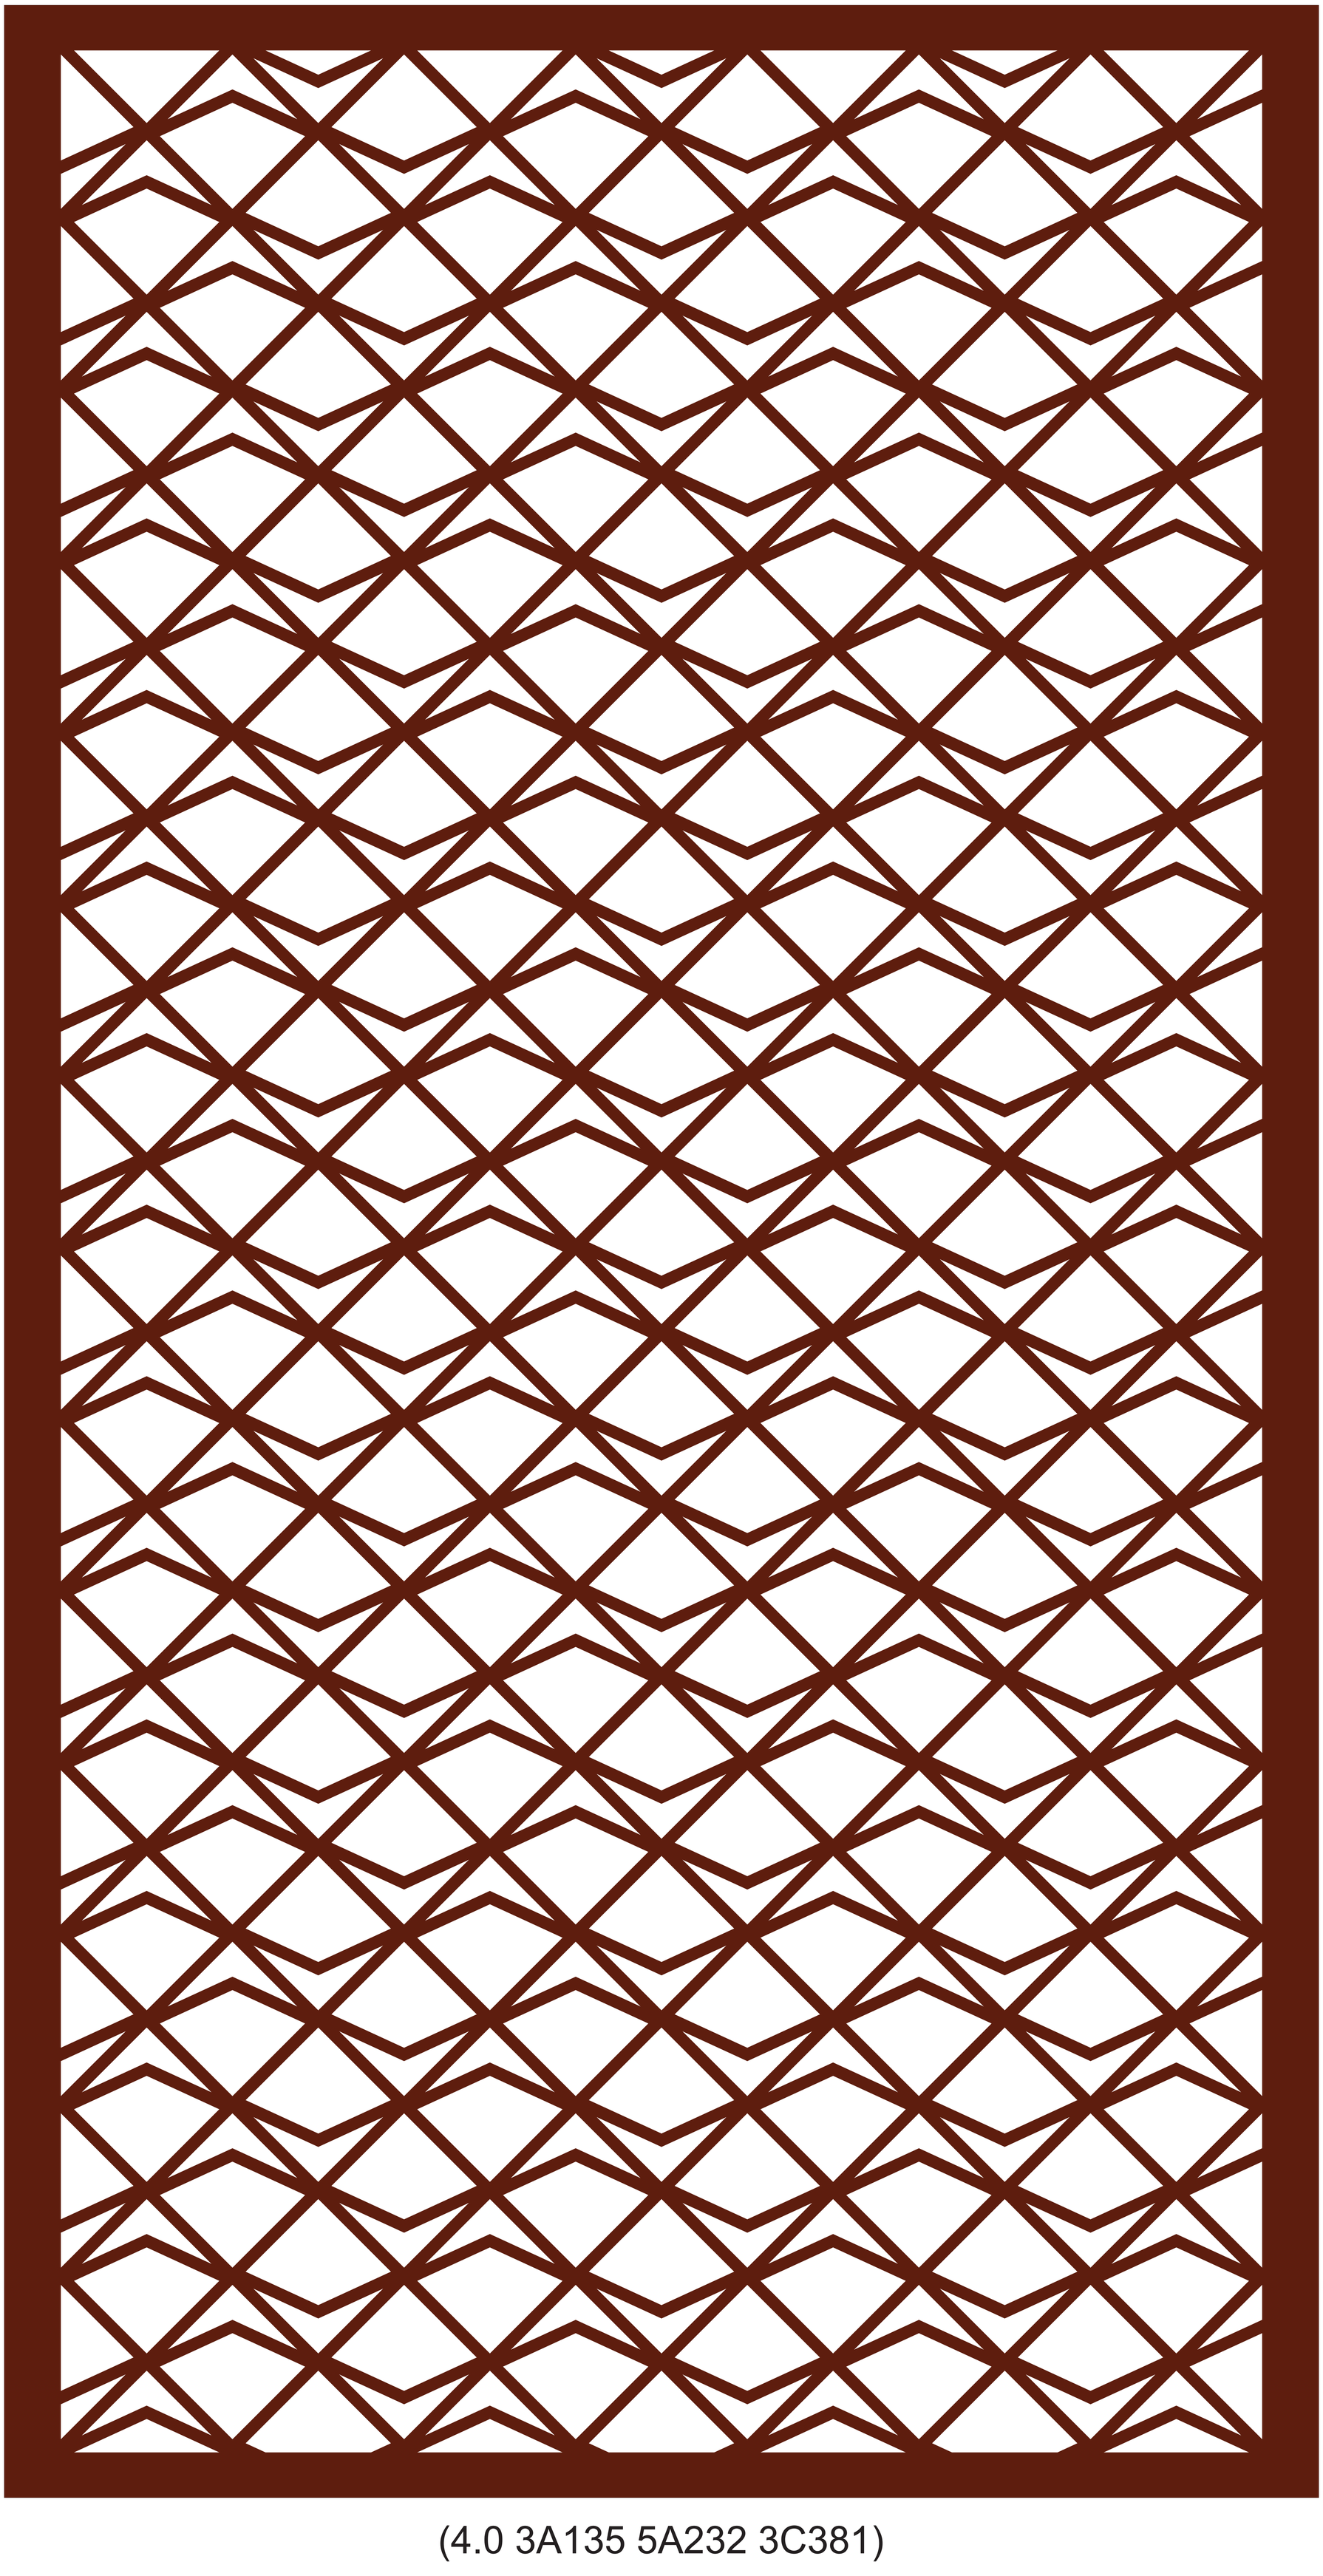

(4.0 3A135 5A232 3C381)

DESIGN 0053

(4.0 3A76 5A131 3C215)

DESIGN 0054

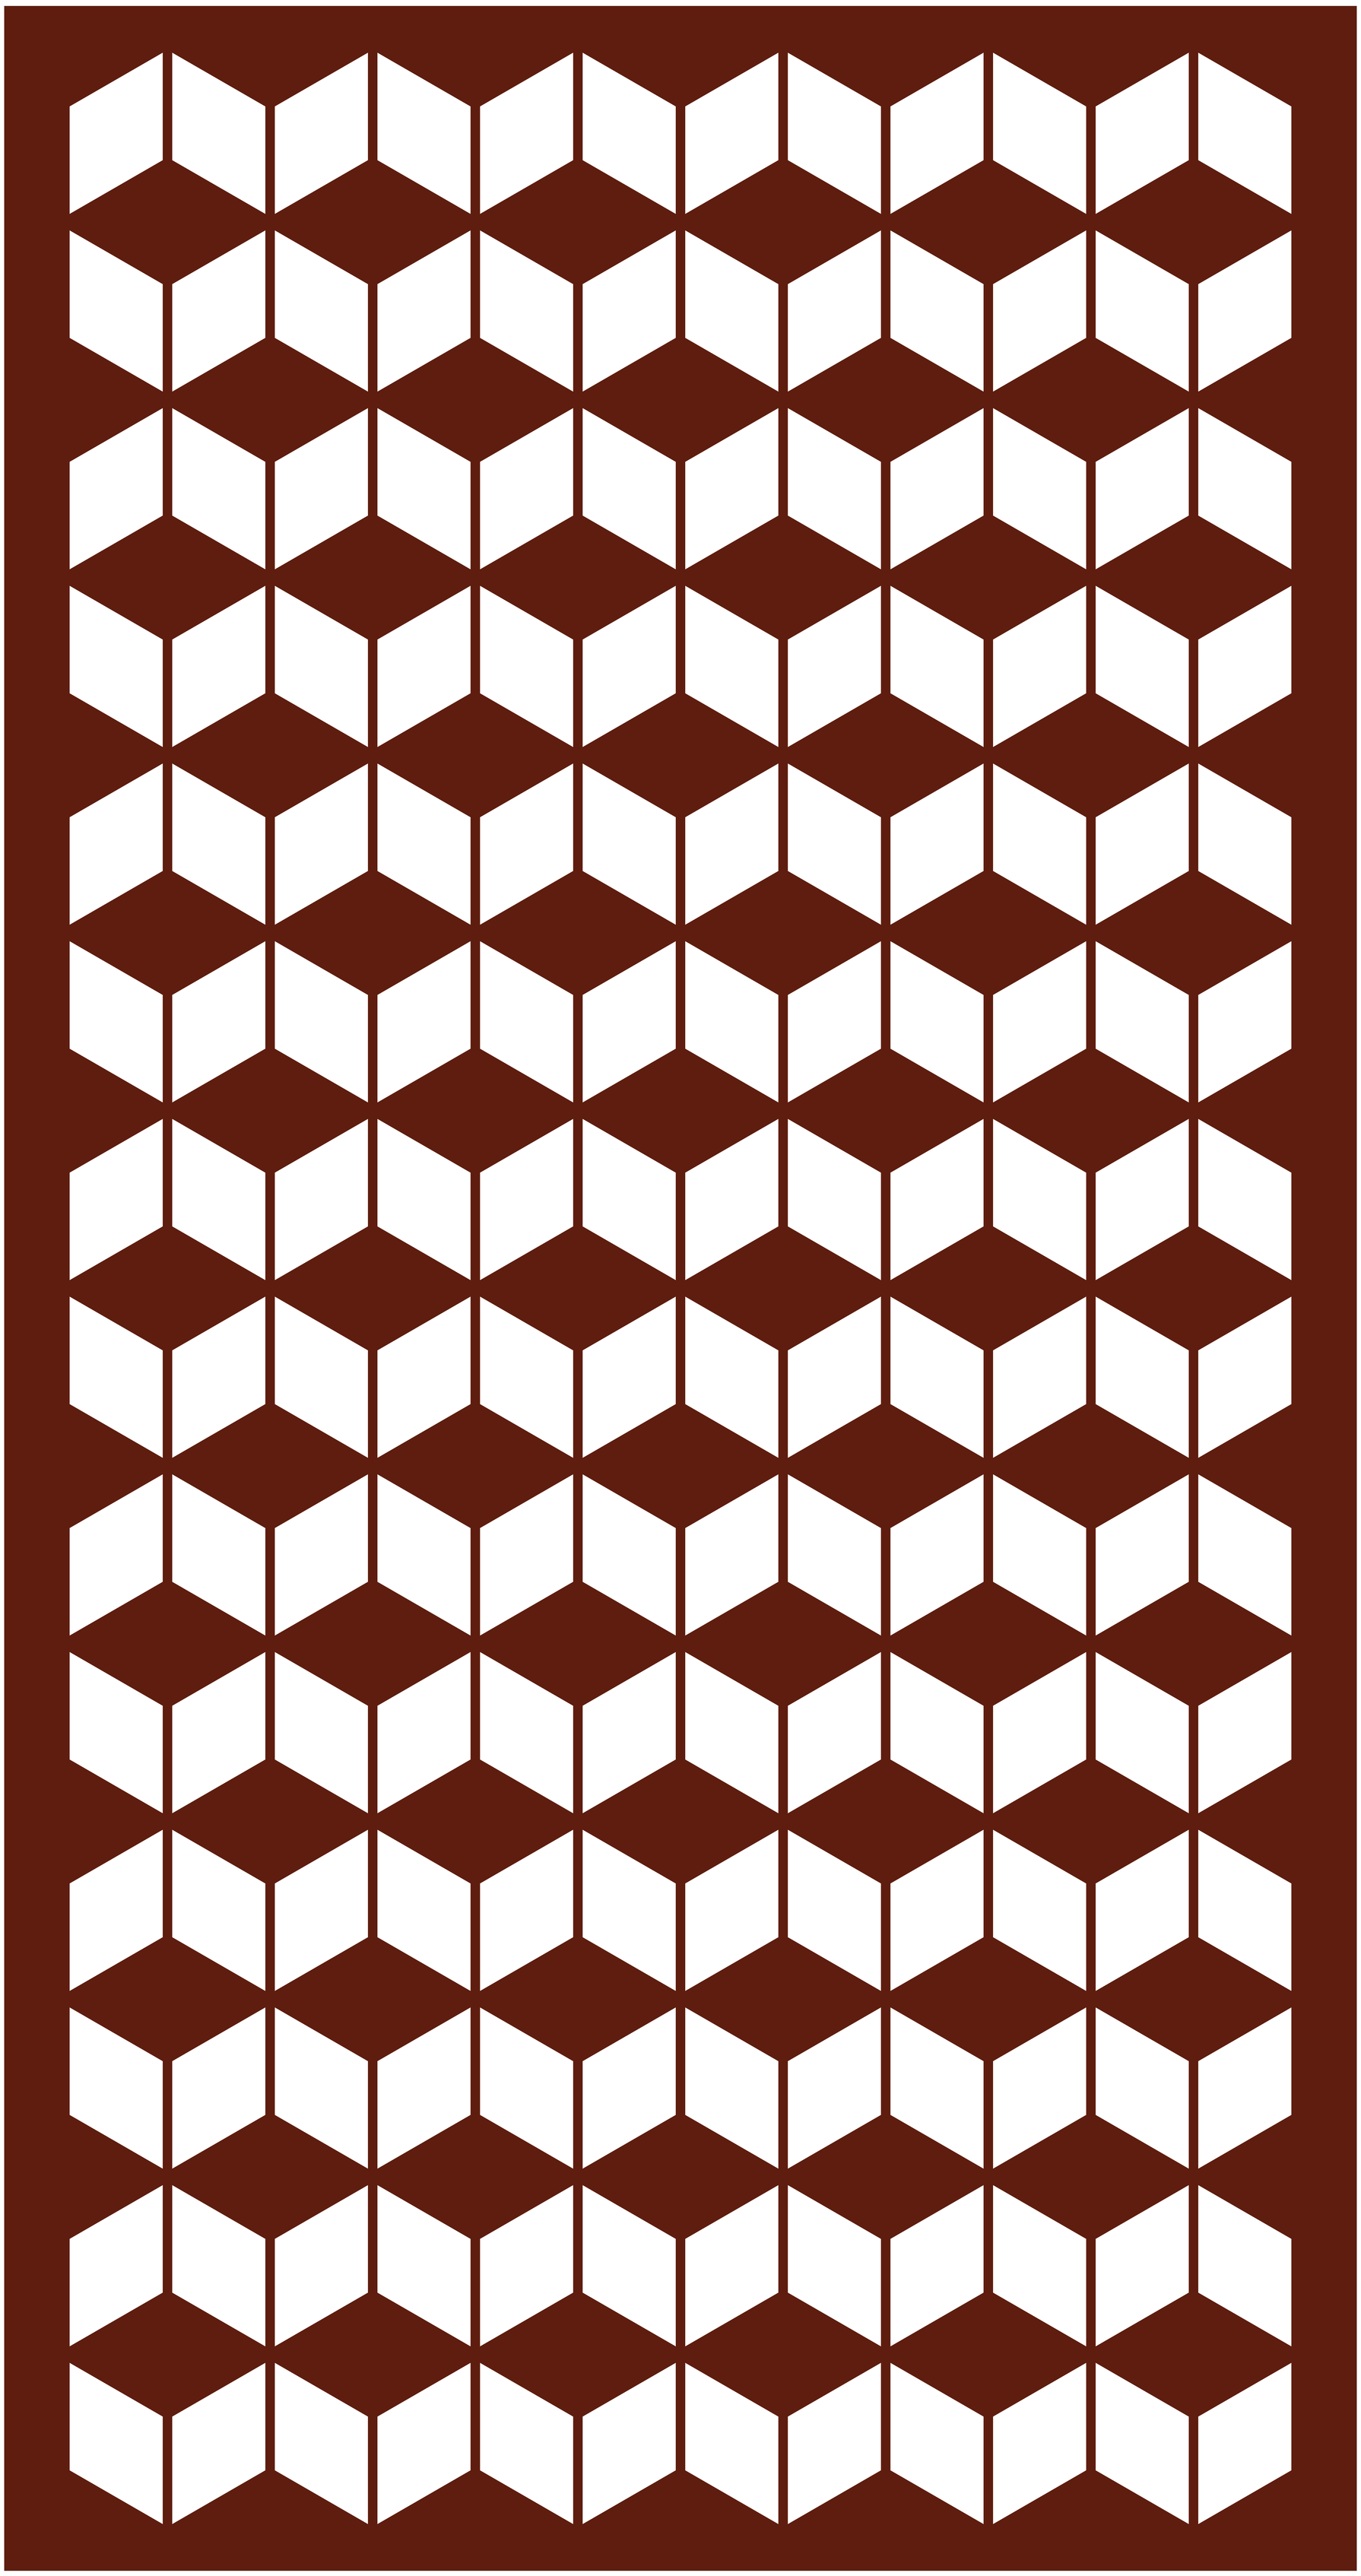

(4.0 3A69 5A119 3C195)

DESIGN 0055

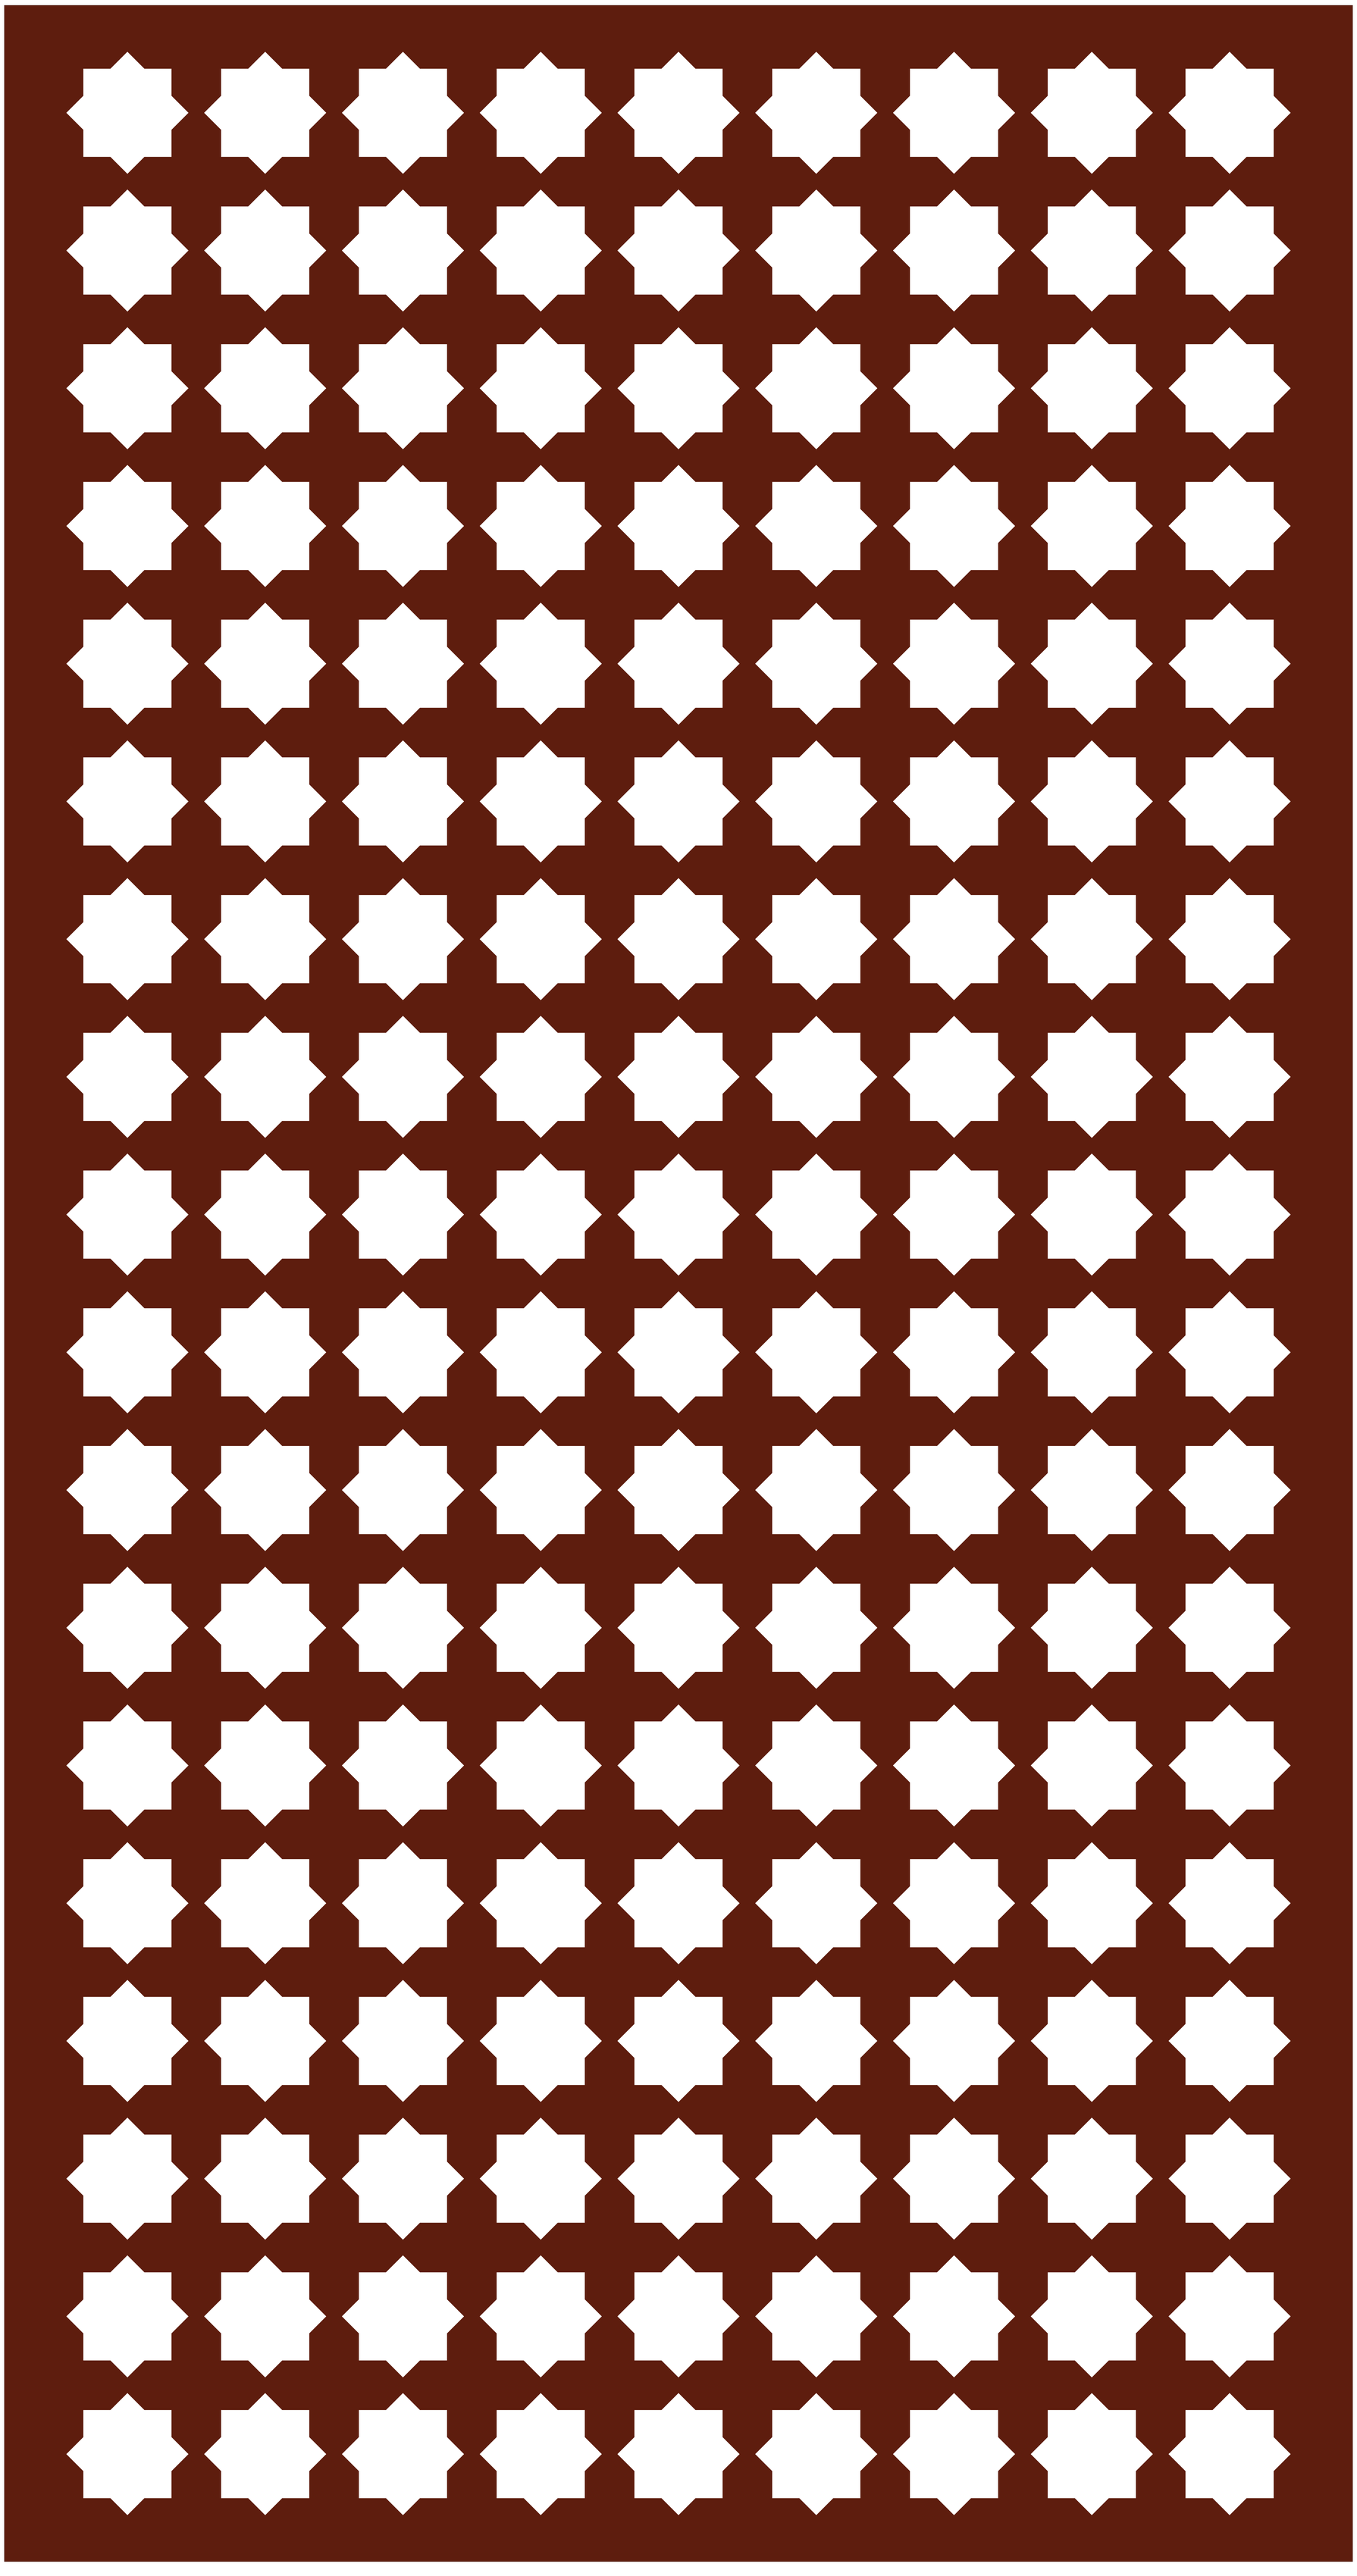

(4.0 3A64 5A110 3C181)

DESIGN 0056

(4.0 3A42 5A73 3C119)

DESIGN 0057

(4.0 3A81 5A140 3C229)

DESIGN 0058

(4.0 3A81 5A140 3C229)

DESIGN 0059

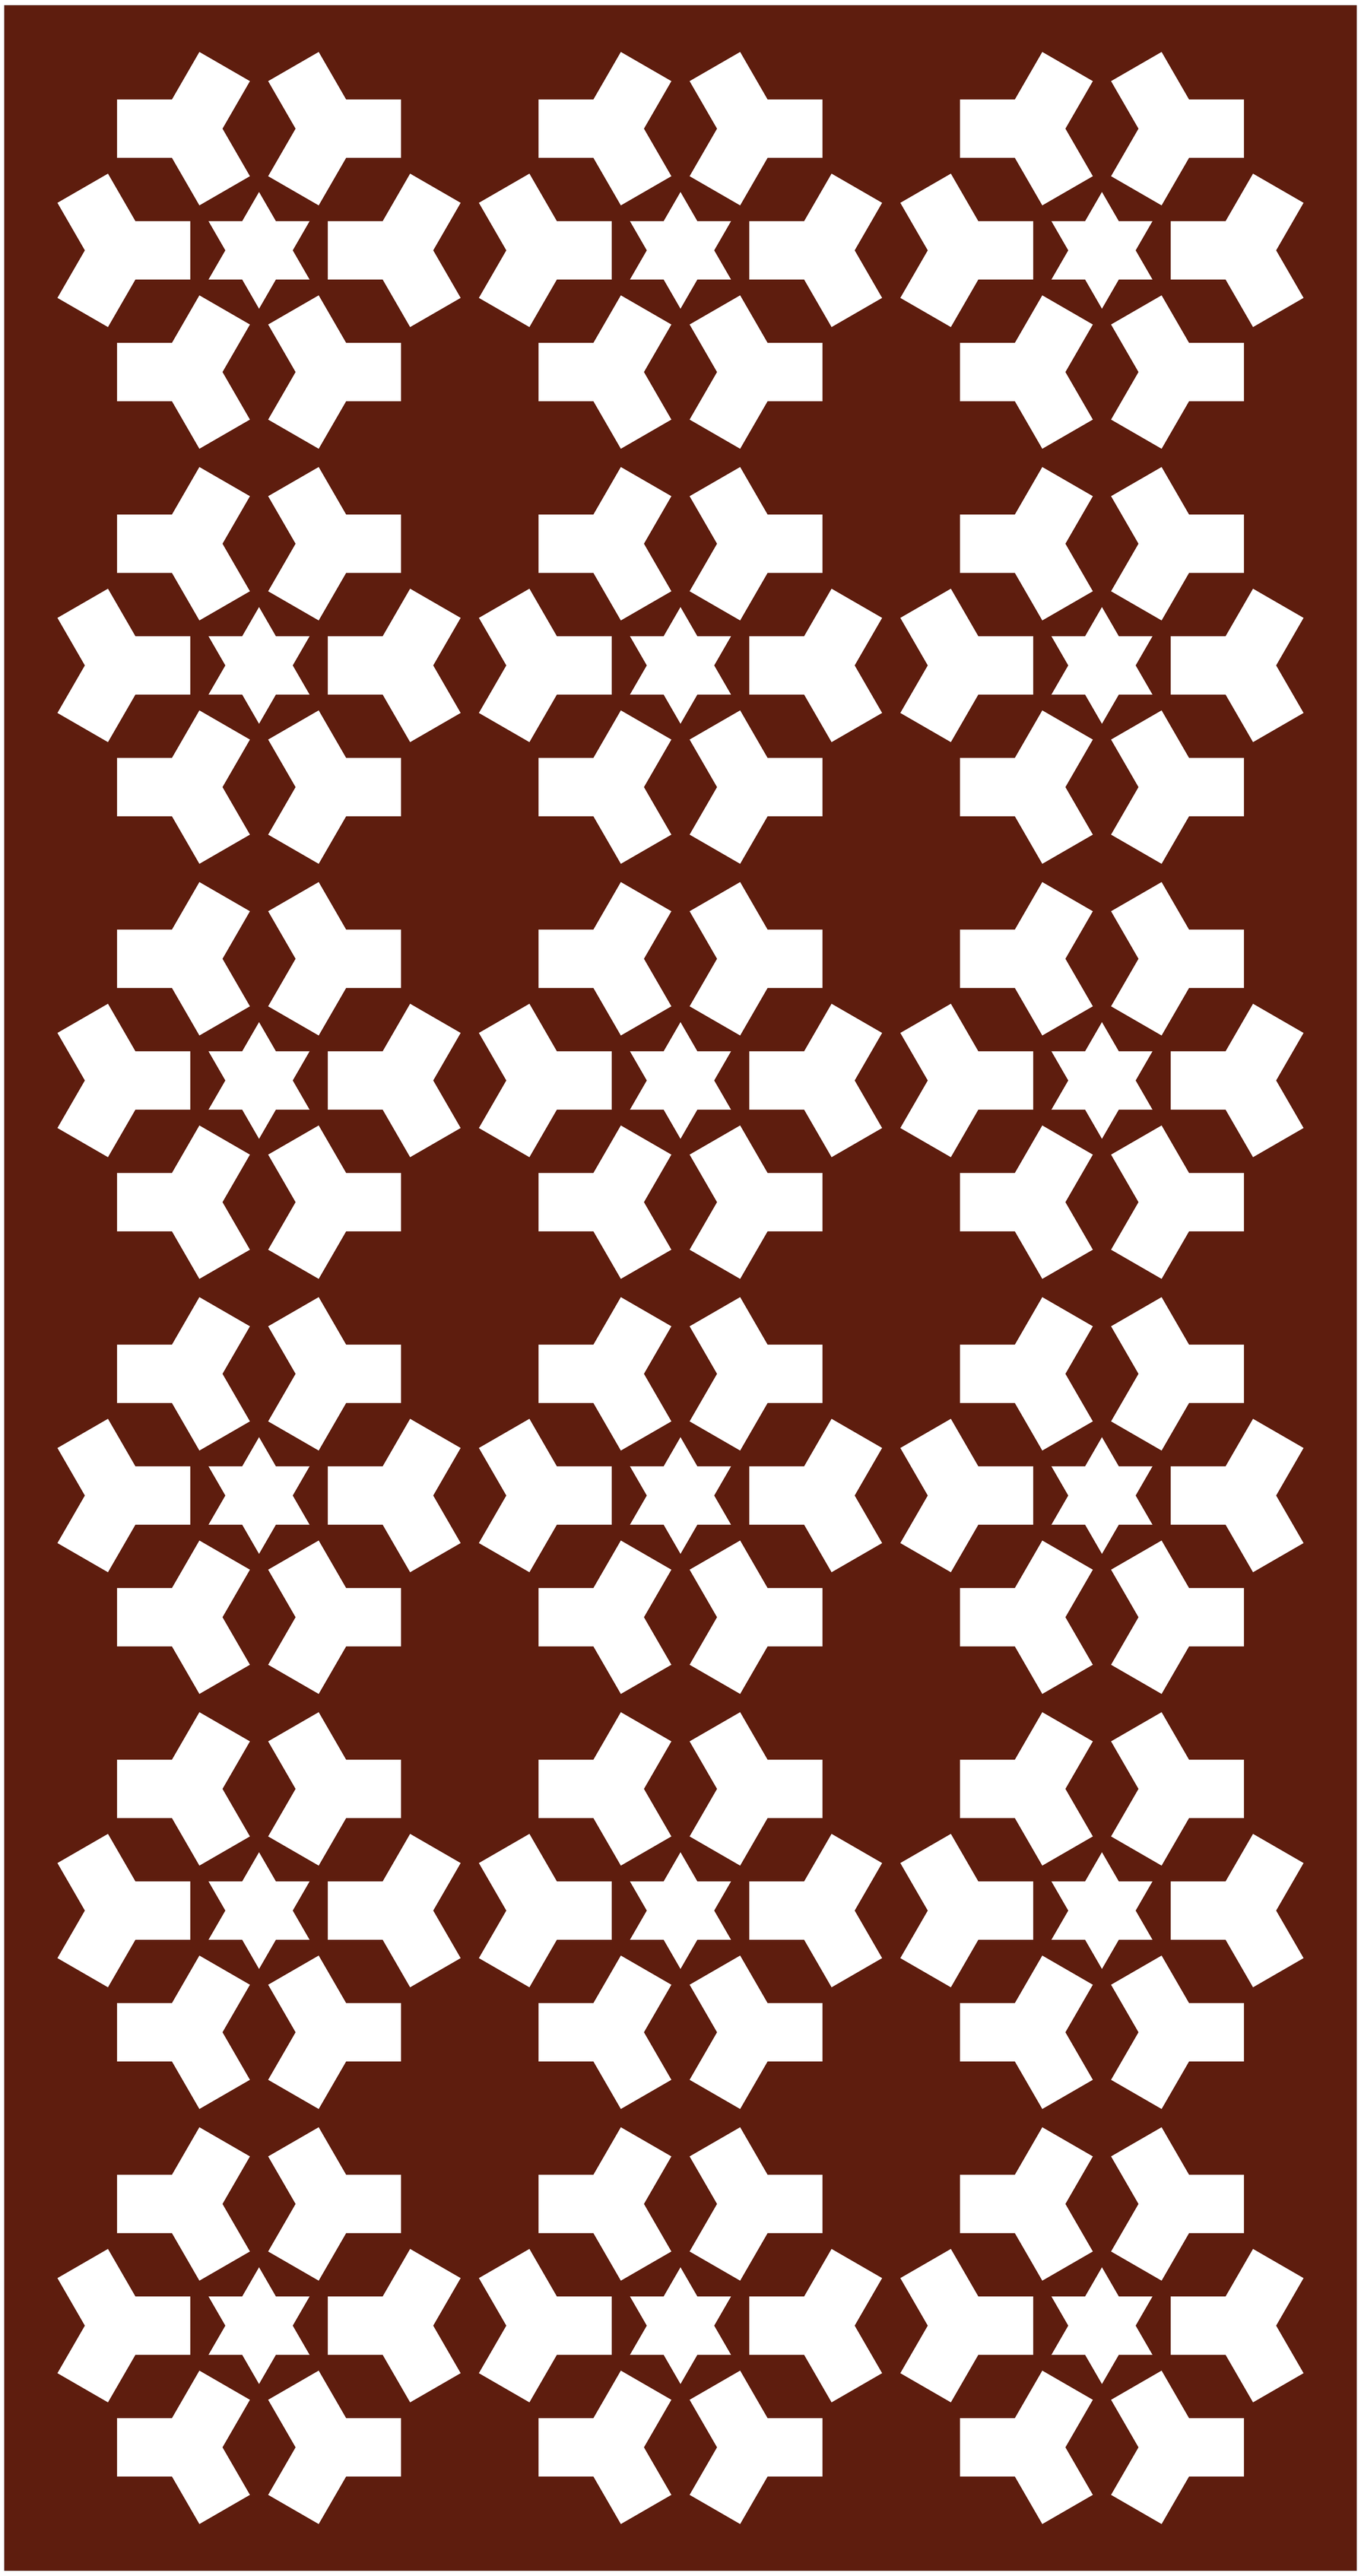

(4.0 3A60 5A103 3C170)

DESIGN 0060

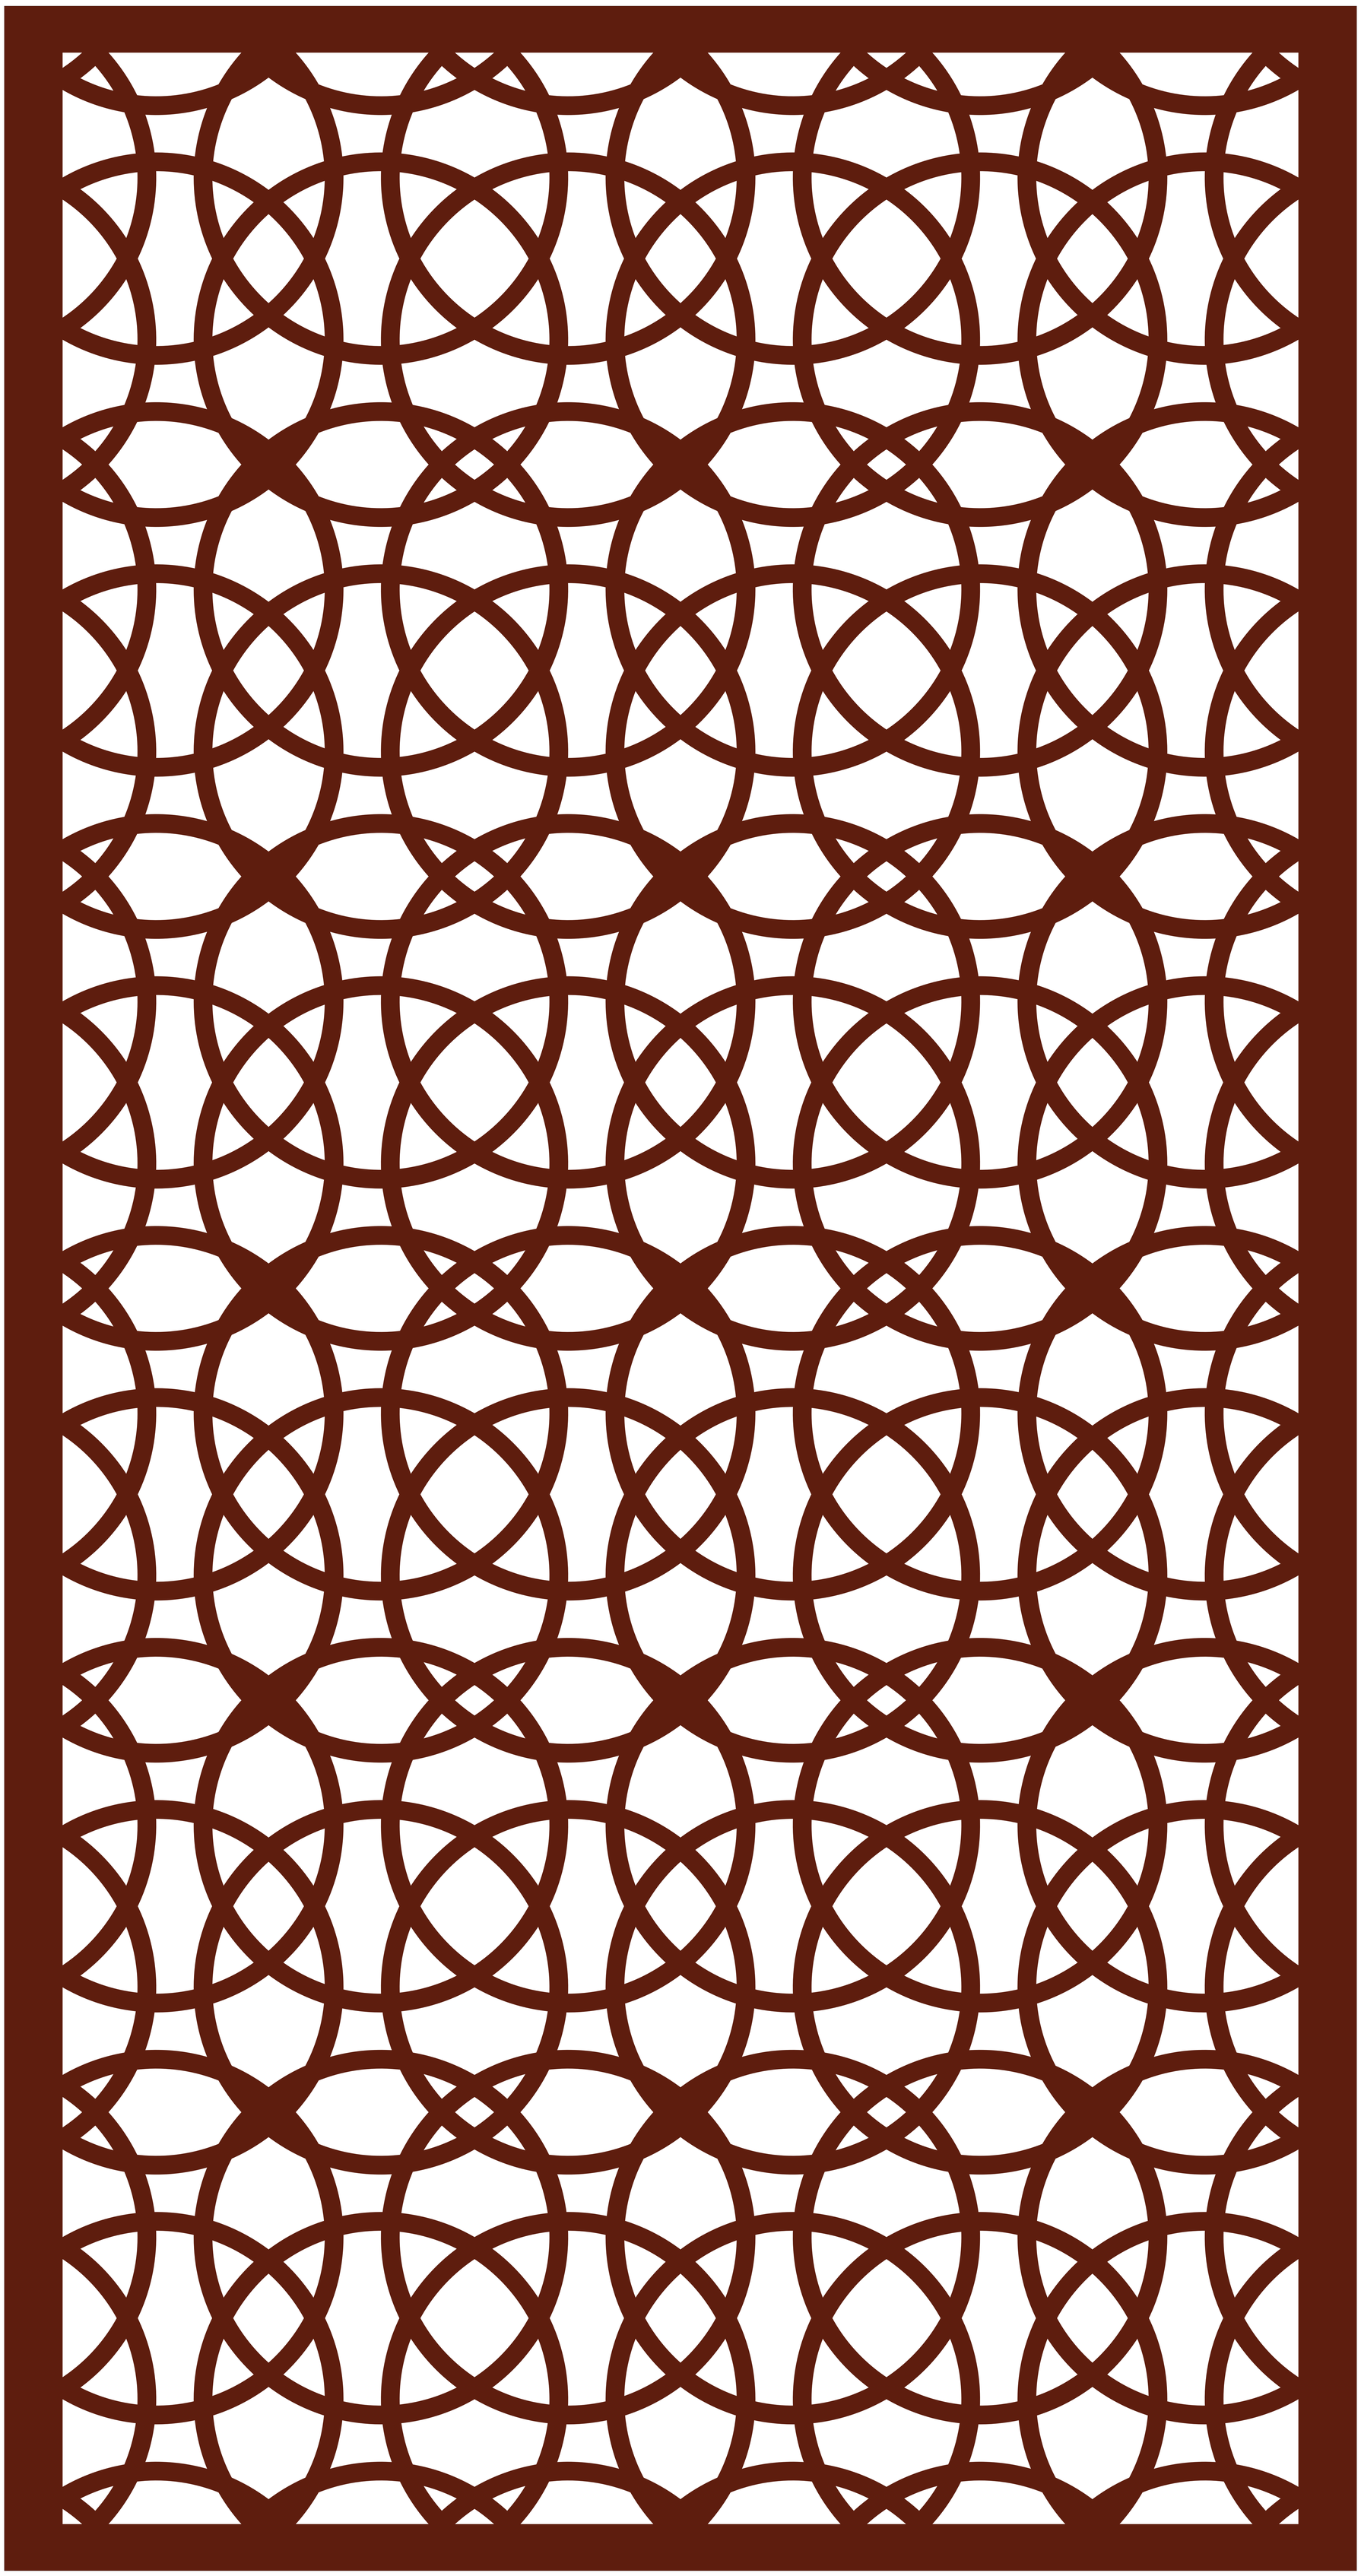

(4.0 3A115 5A198 3C325)

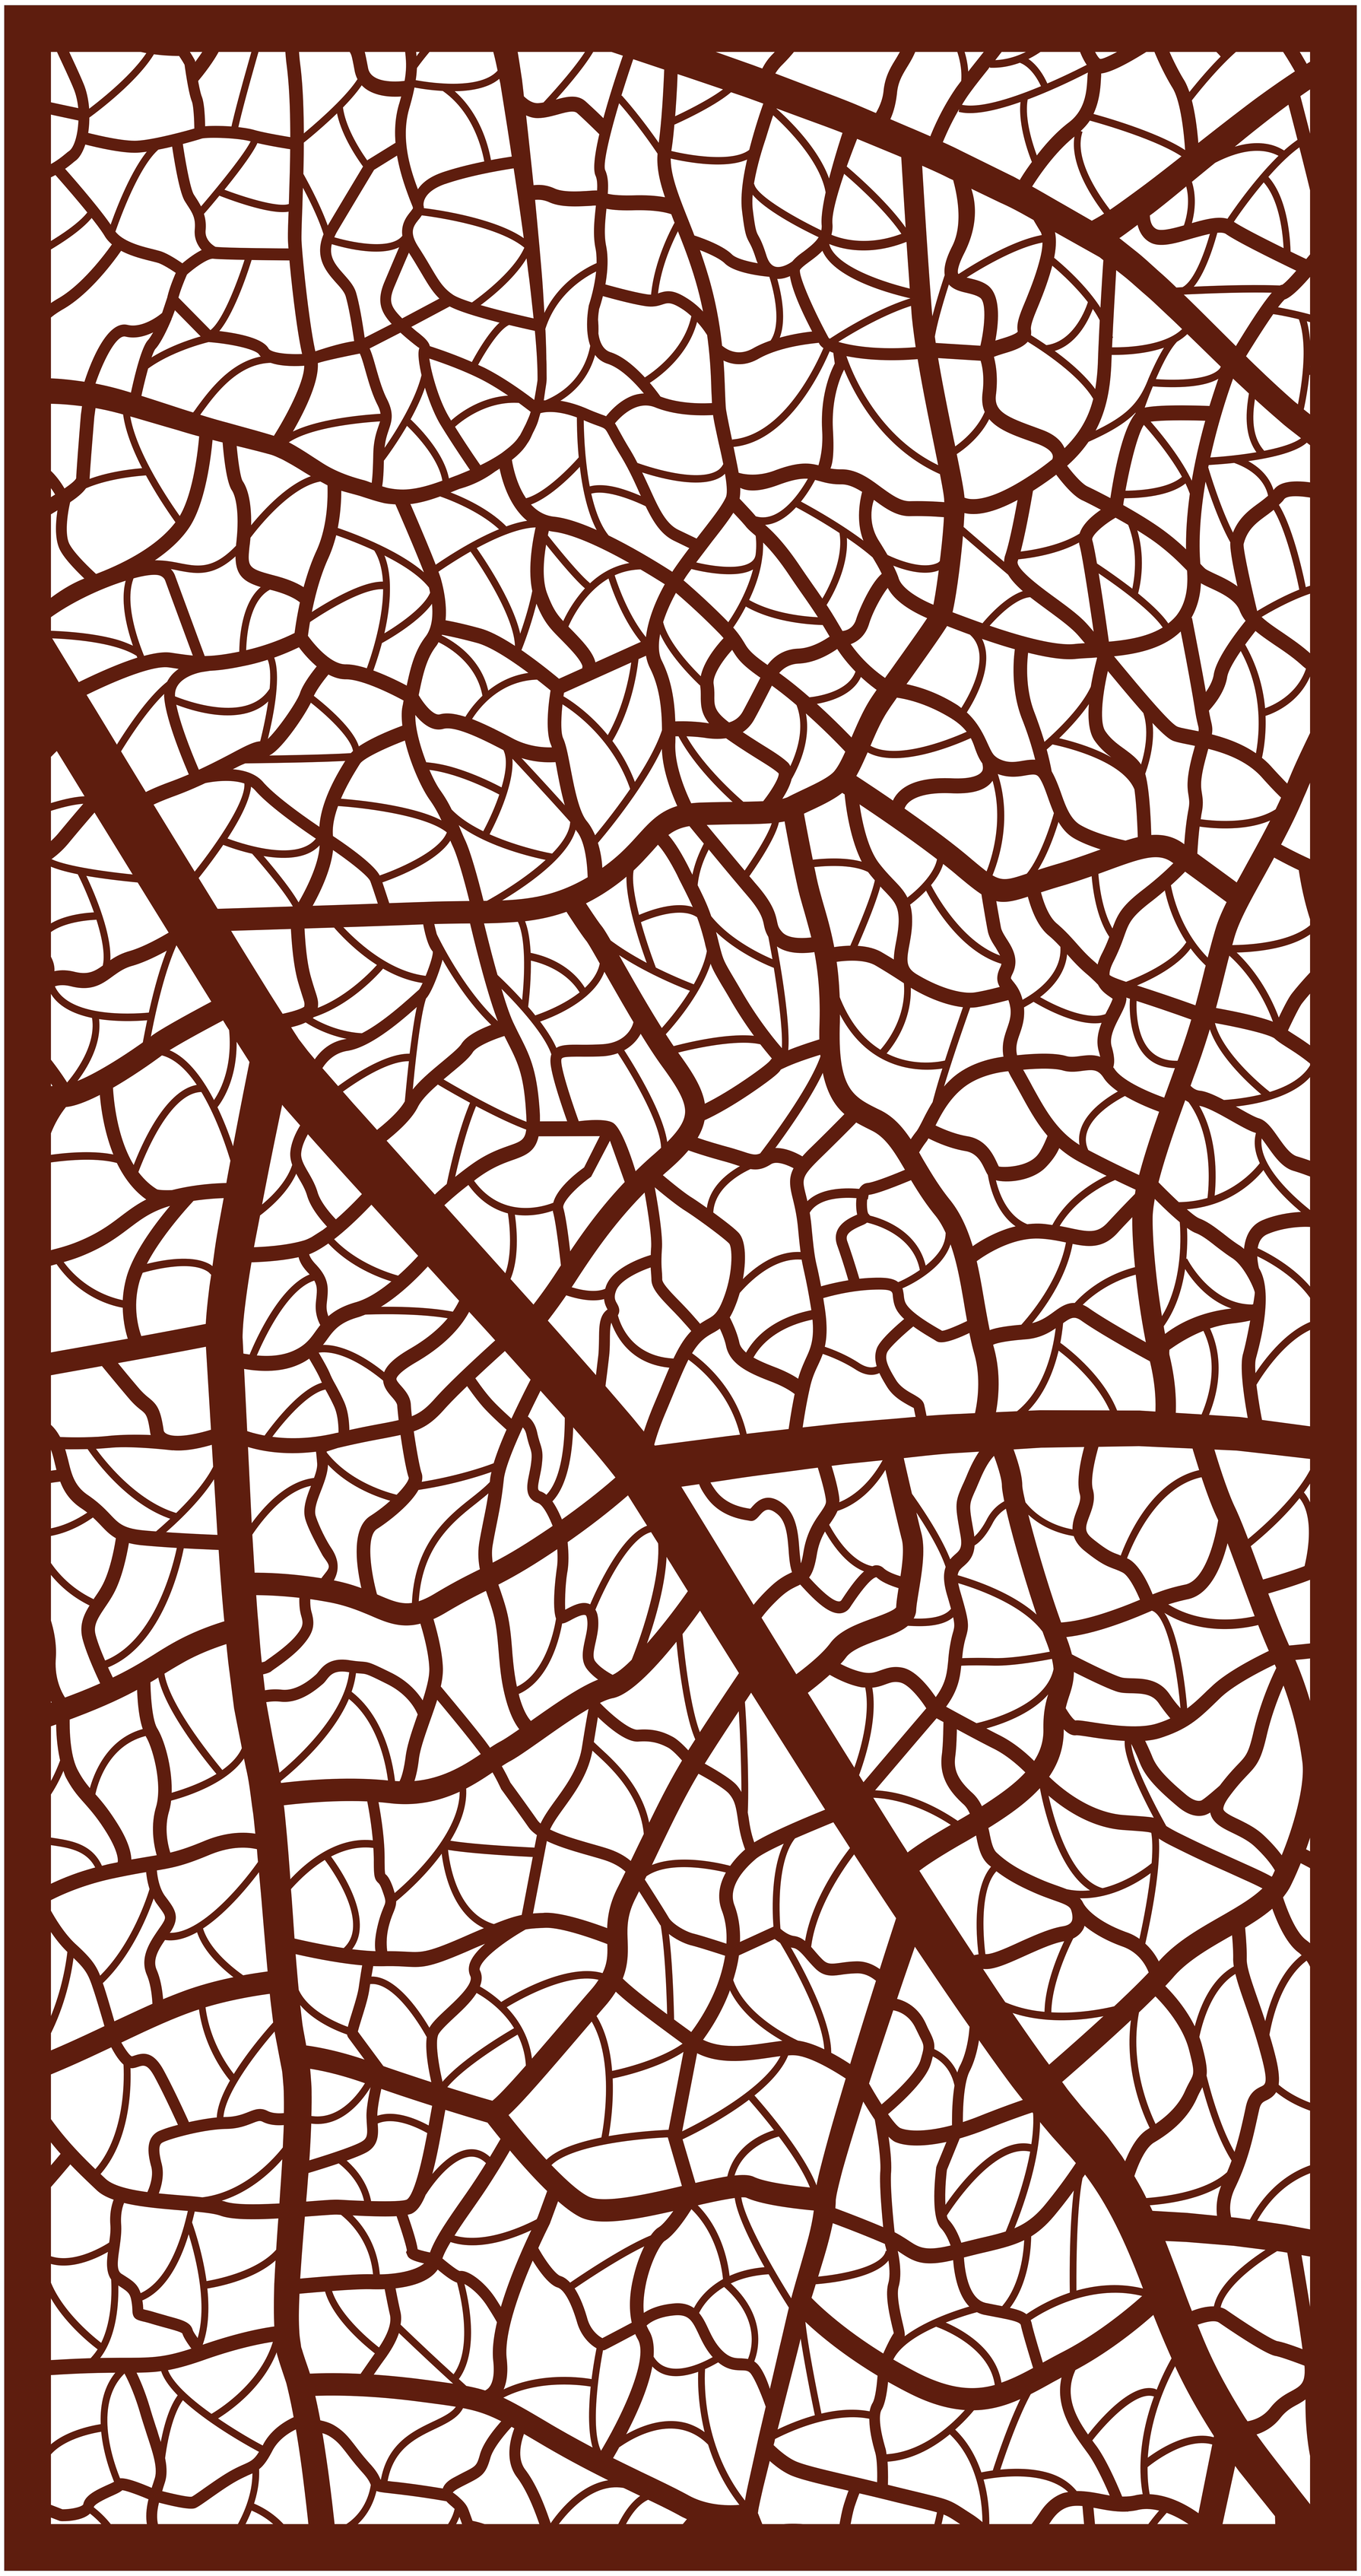

DESIGN 0062

(4.0 3A49 5A84 3C138)

DESIGN 0063

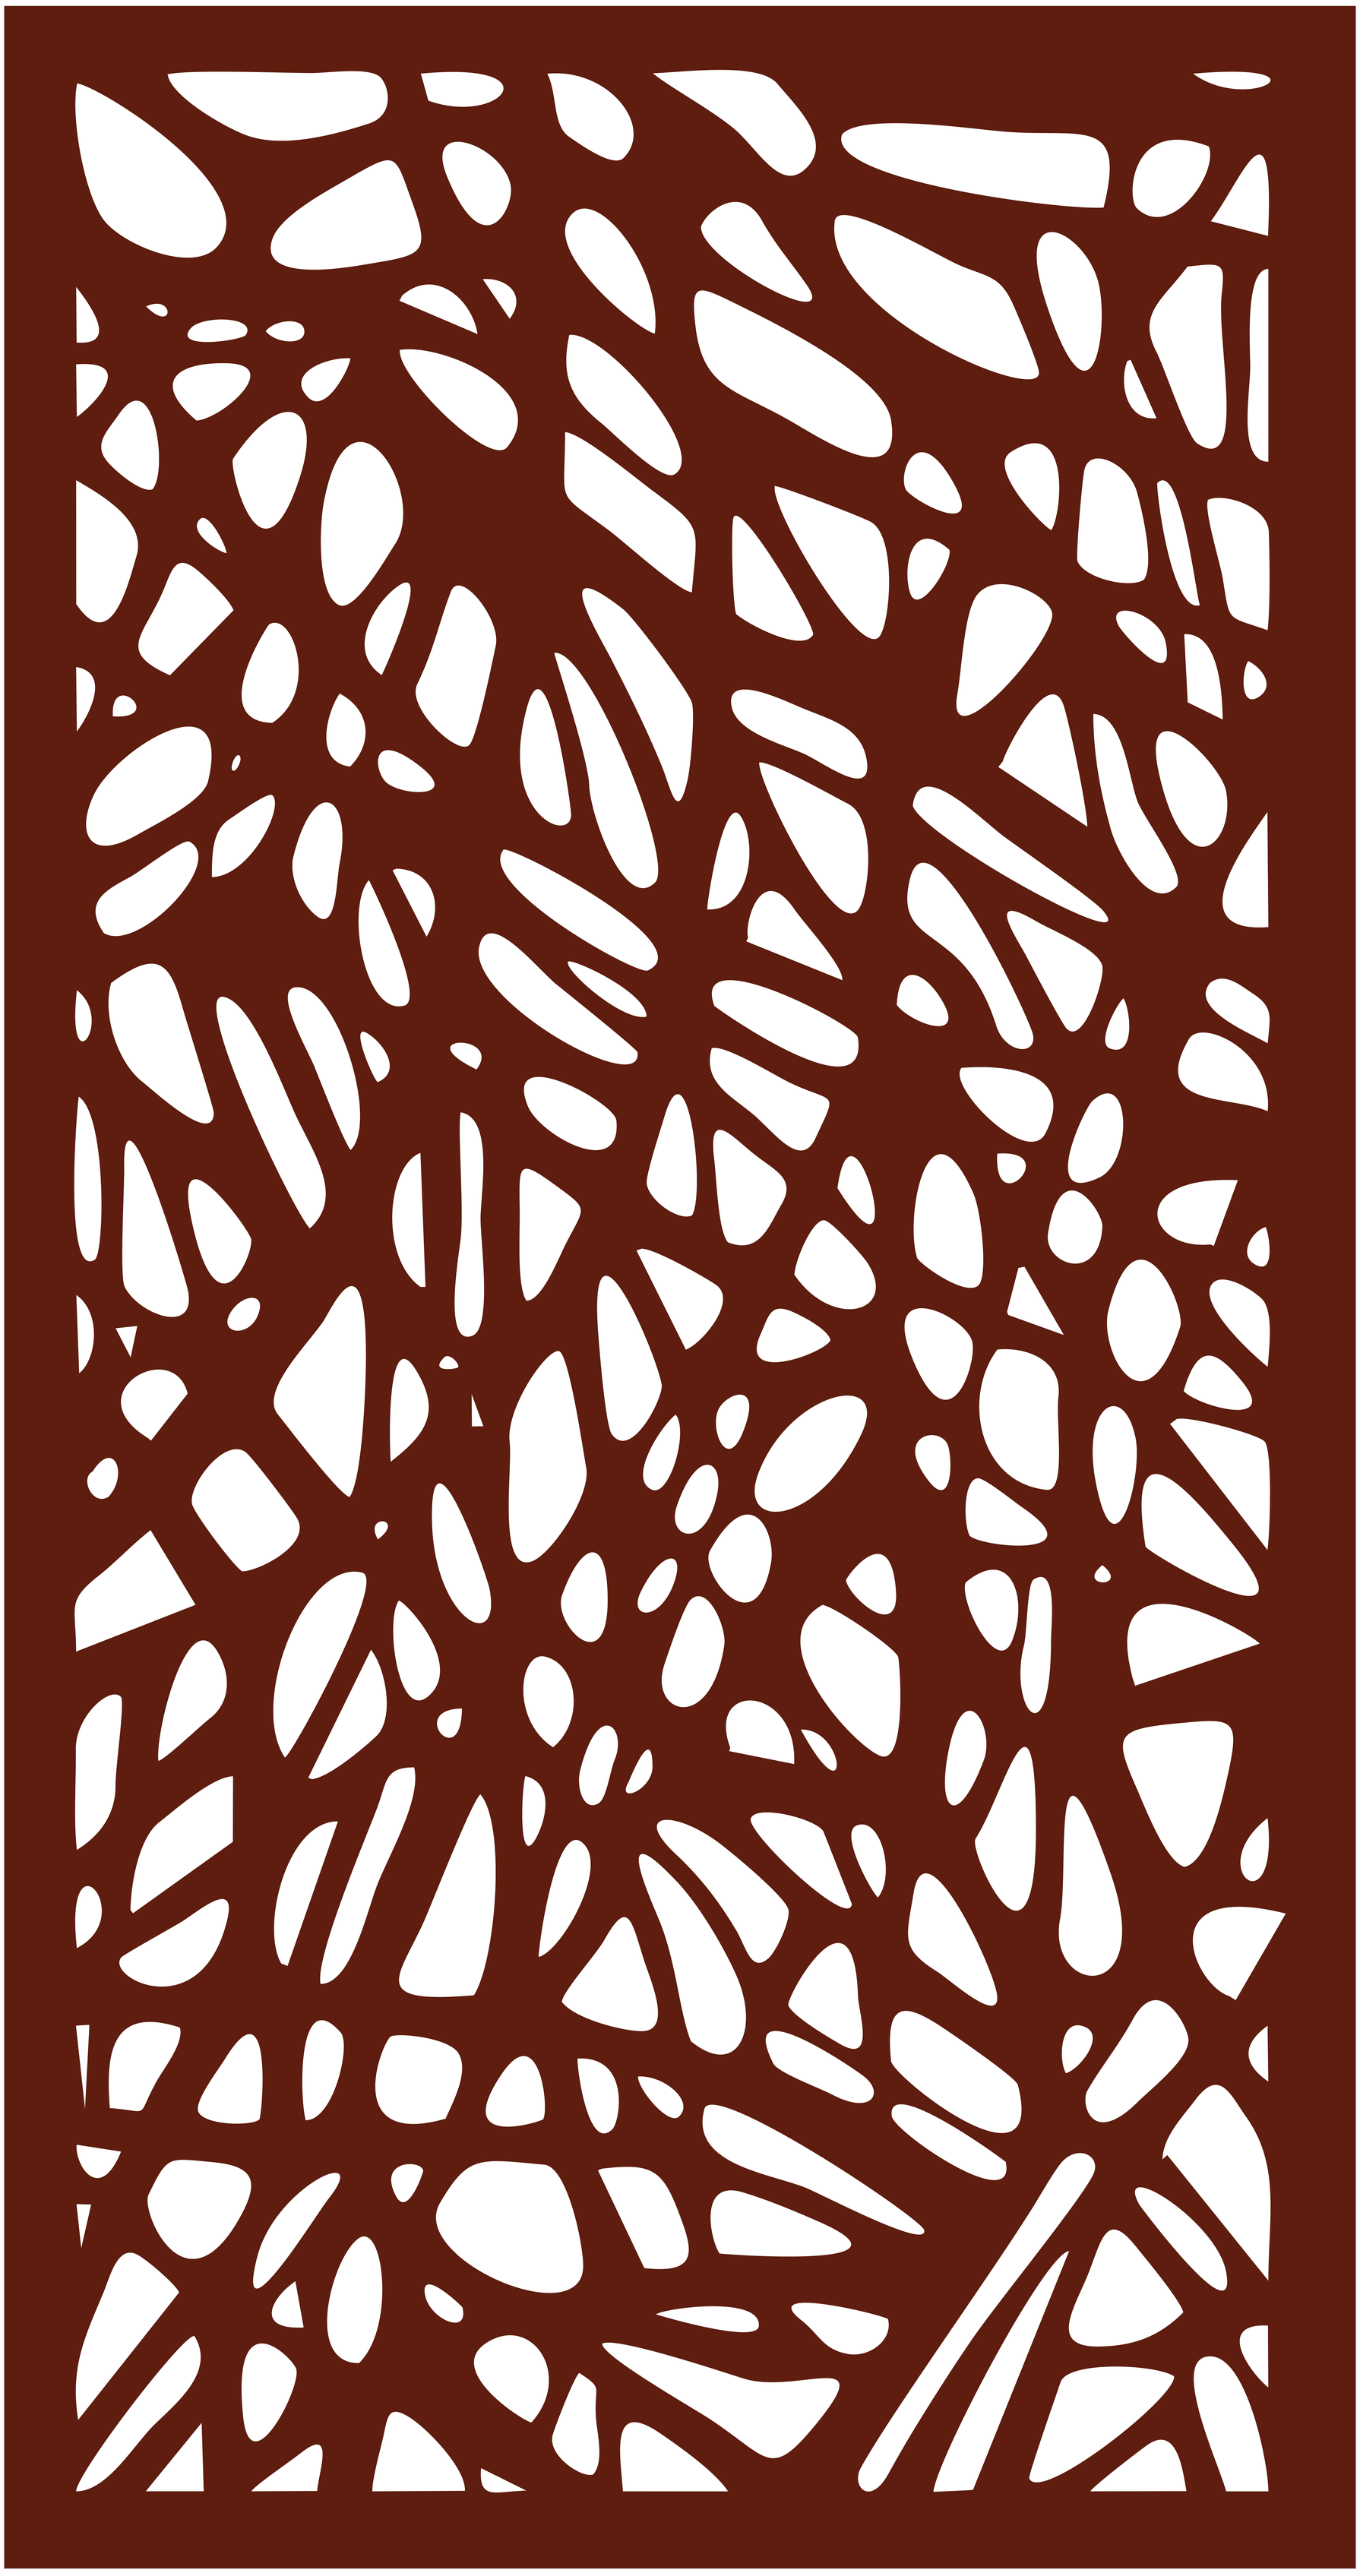

(4.0 3A65 5A112 3C184)

DESIGN 0064

(4.0 3A35 5A60 3C97)

DESIGN 0065

(4.0 3A23 5A40 3C65)

DESIGN 0066

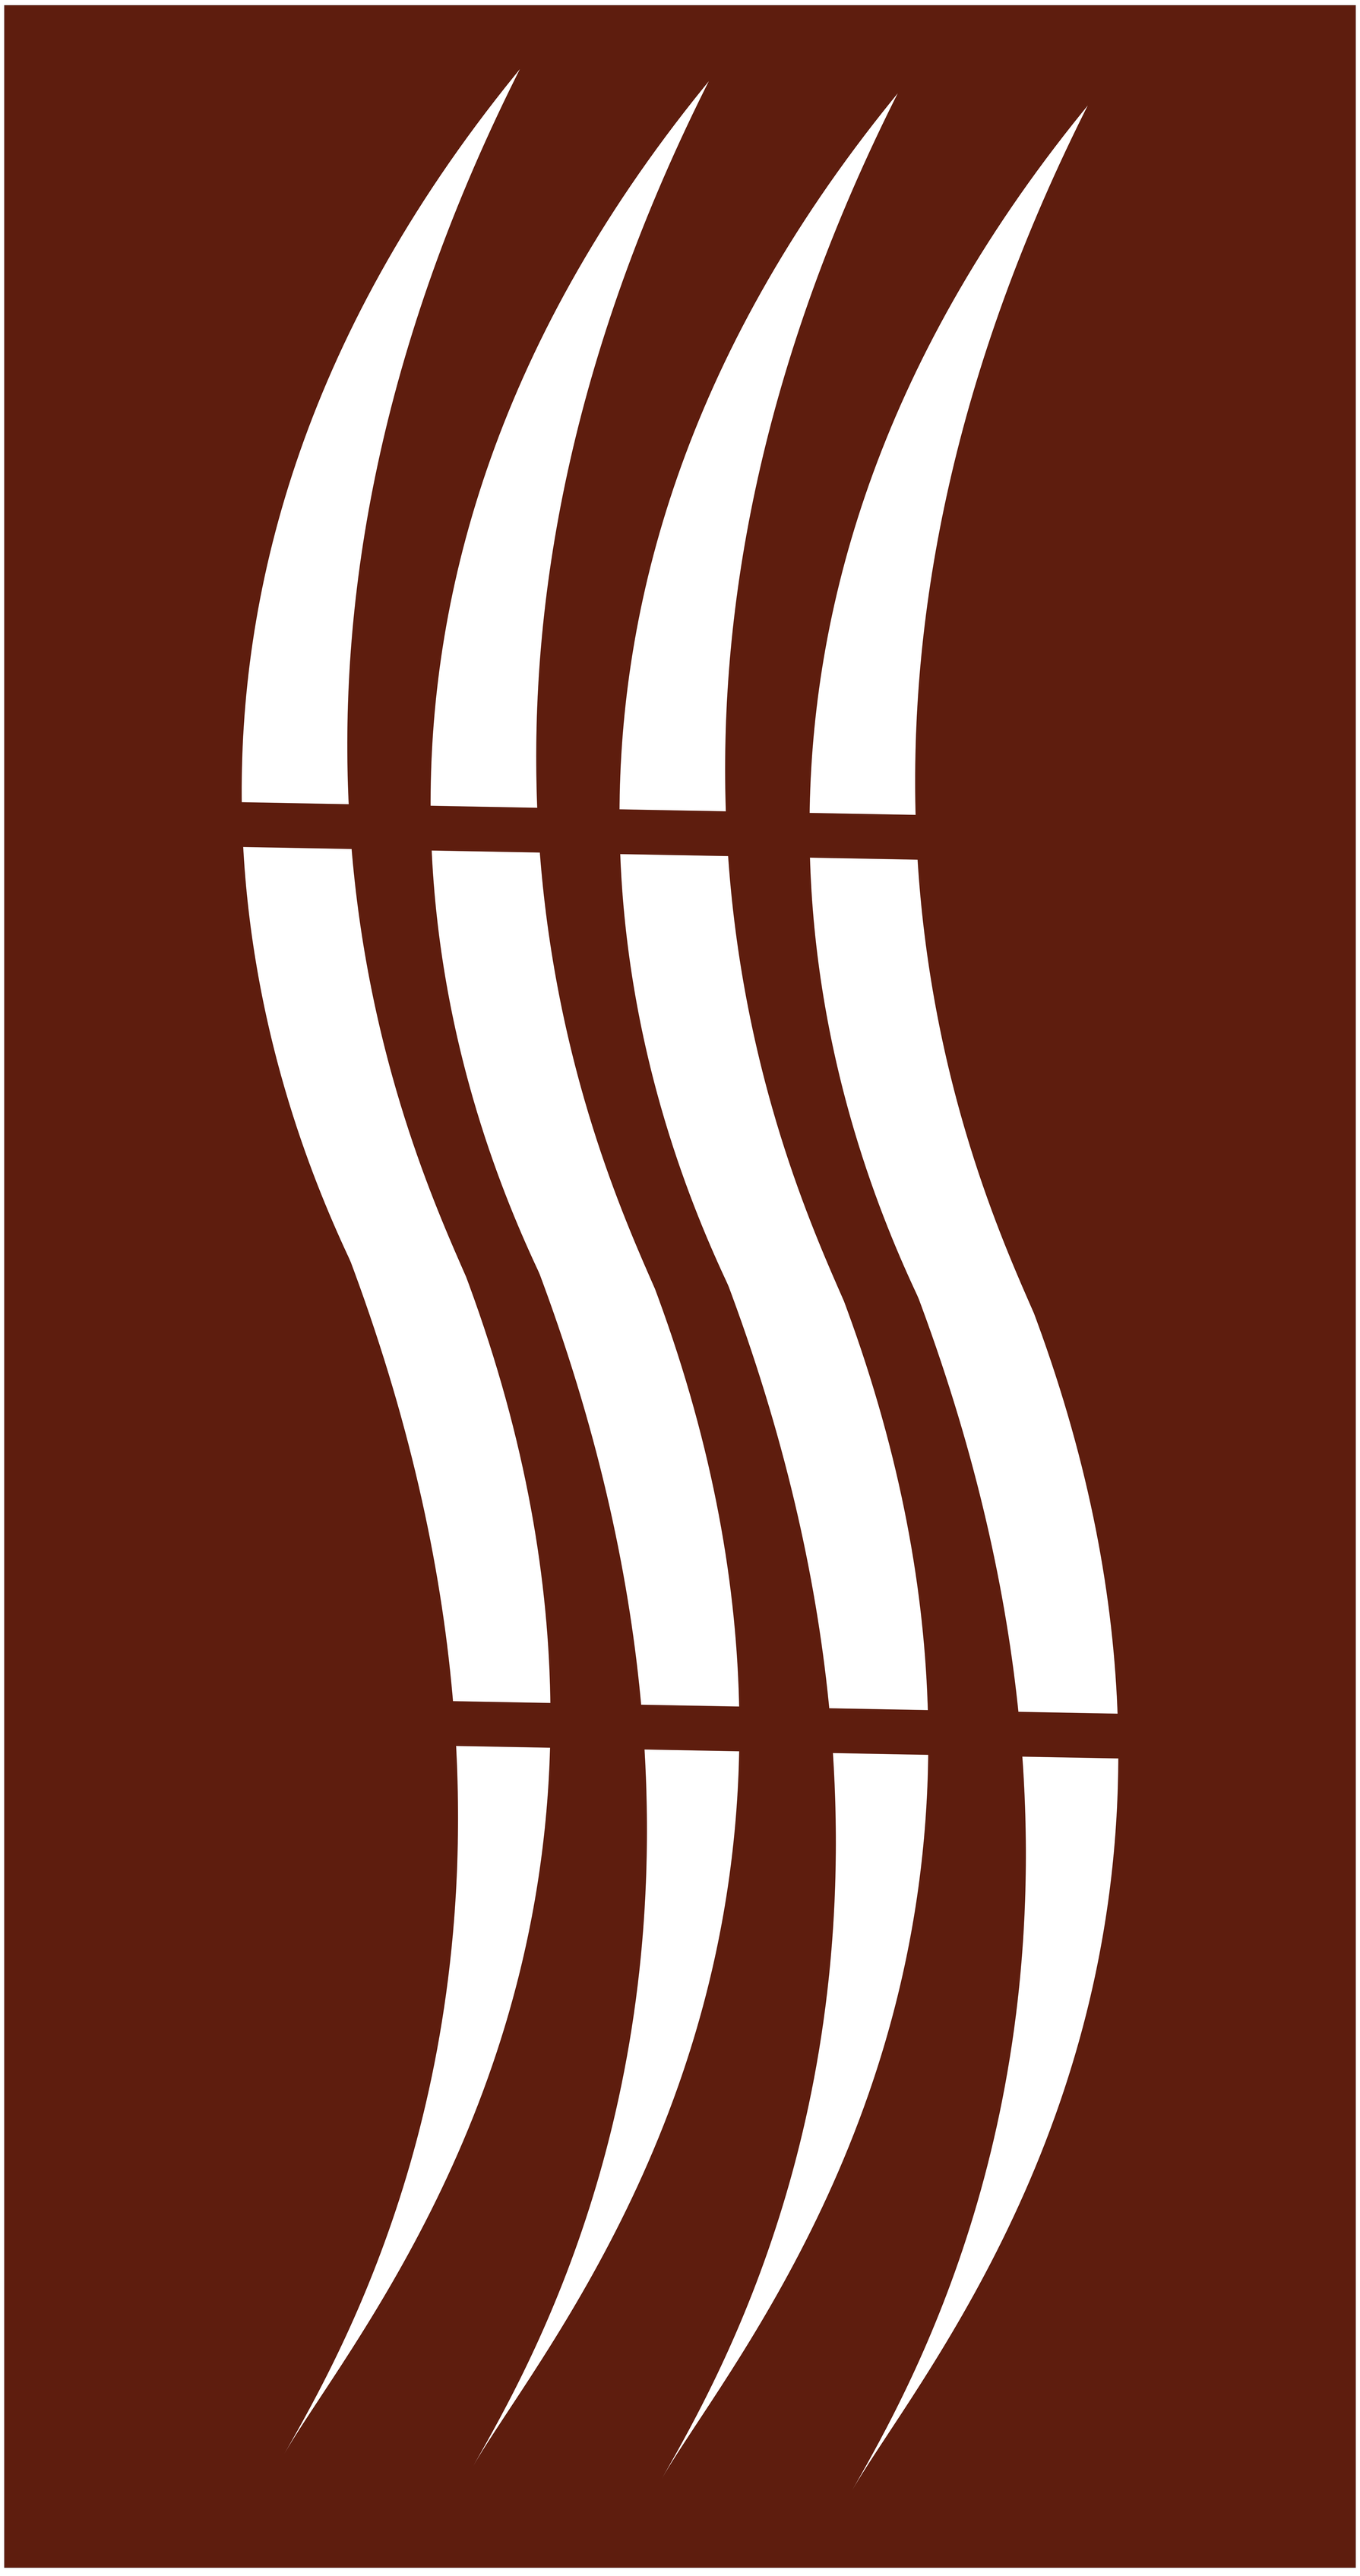

(4.0 3A23 5A40 3C65)

DESIGN 0067

(4.0 3A36 5A62 3C102)

DESIGN 0068

(4.0 3A36 5A62 3C102)

DESIGN 0069

(4.0 3A36 5A62 3C102)

DESIGN 0070

(4.0 3A36 5A62 3C102)

DESIGN 0071

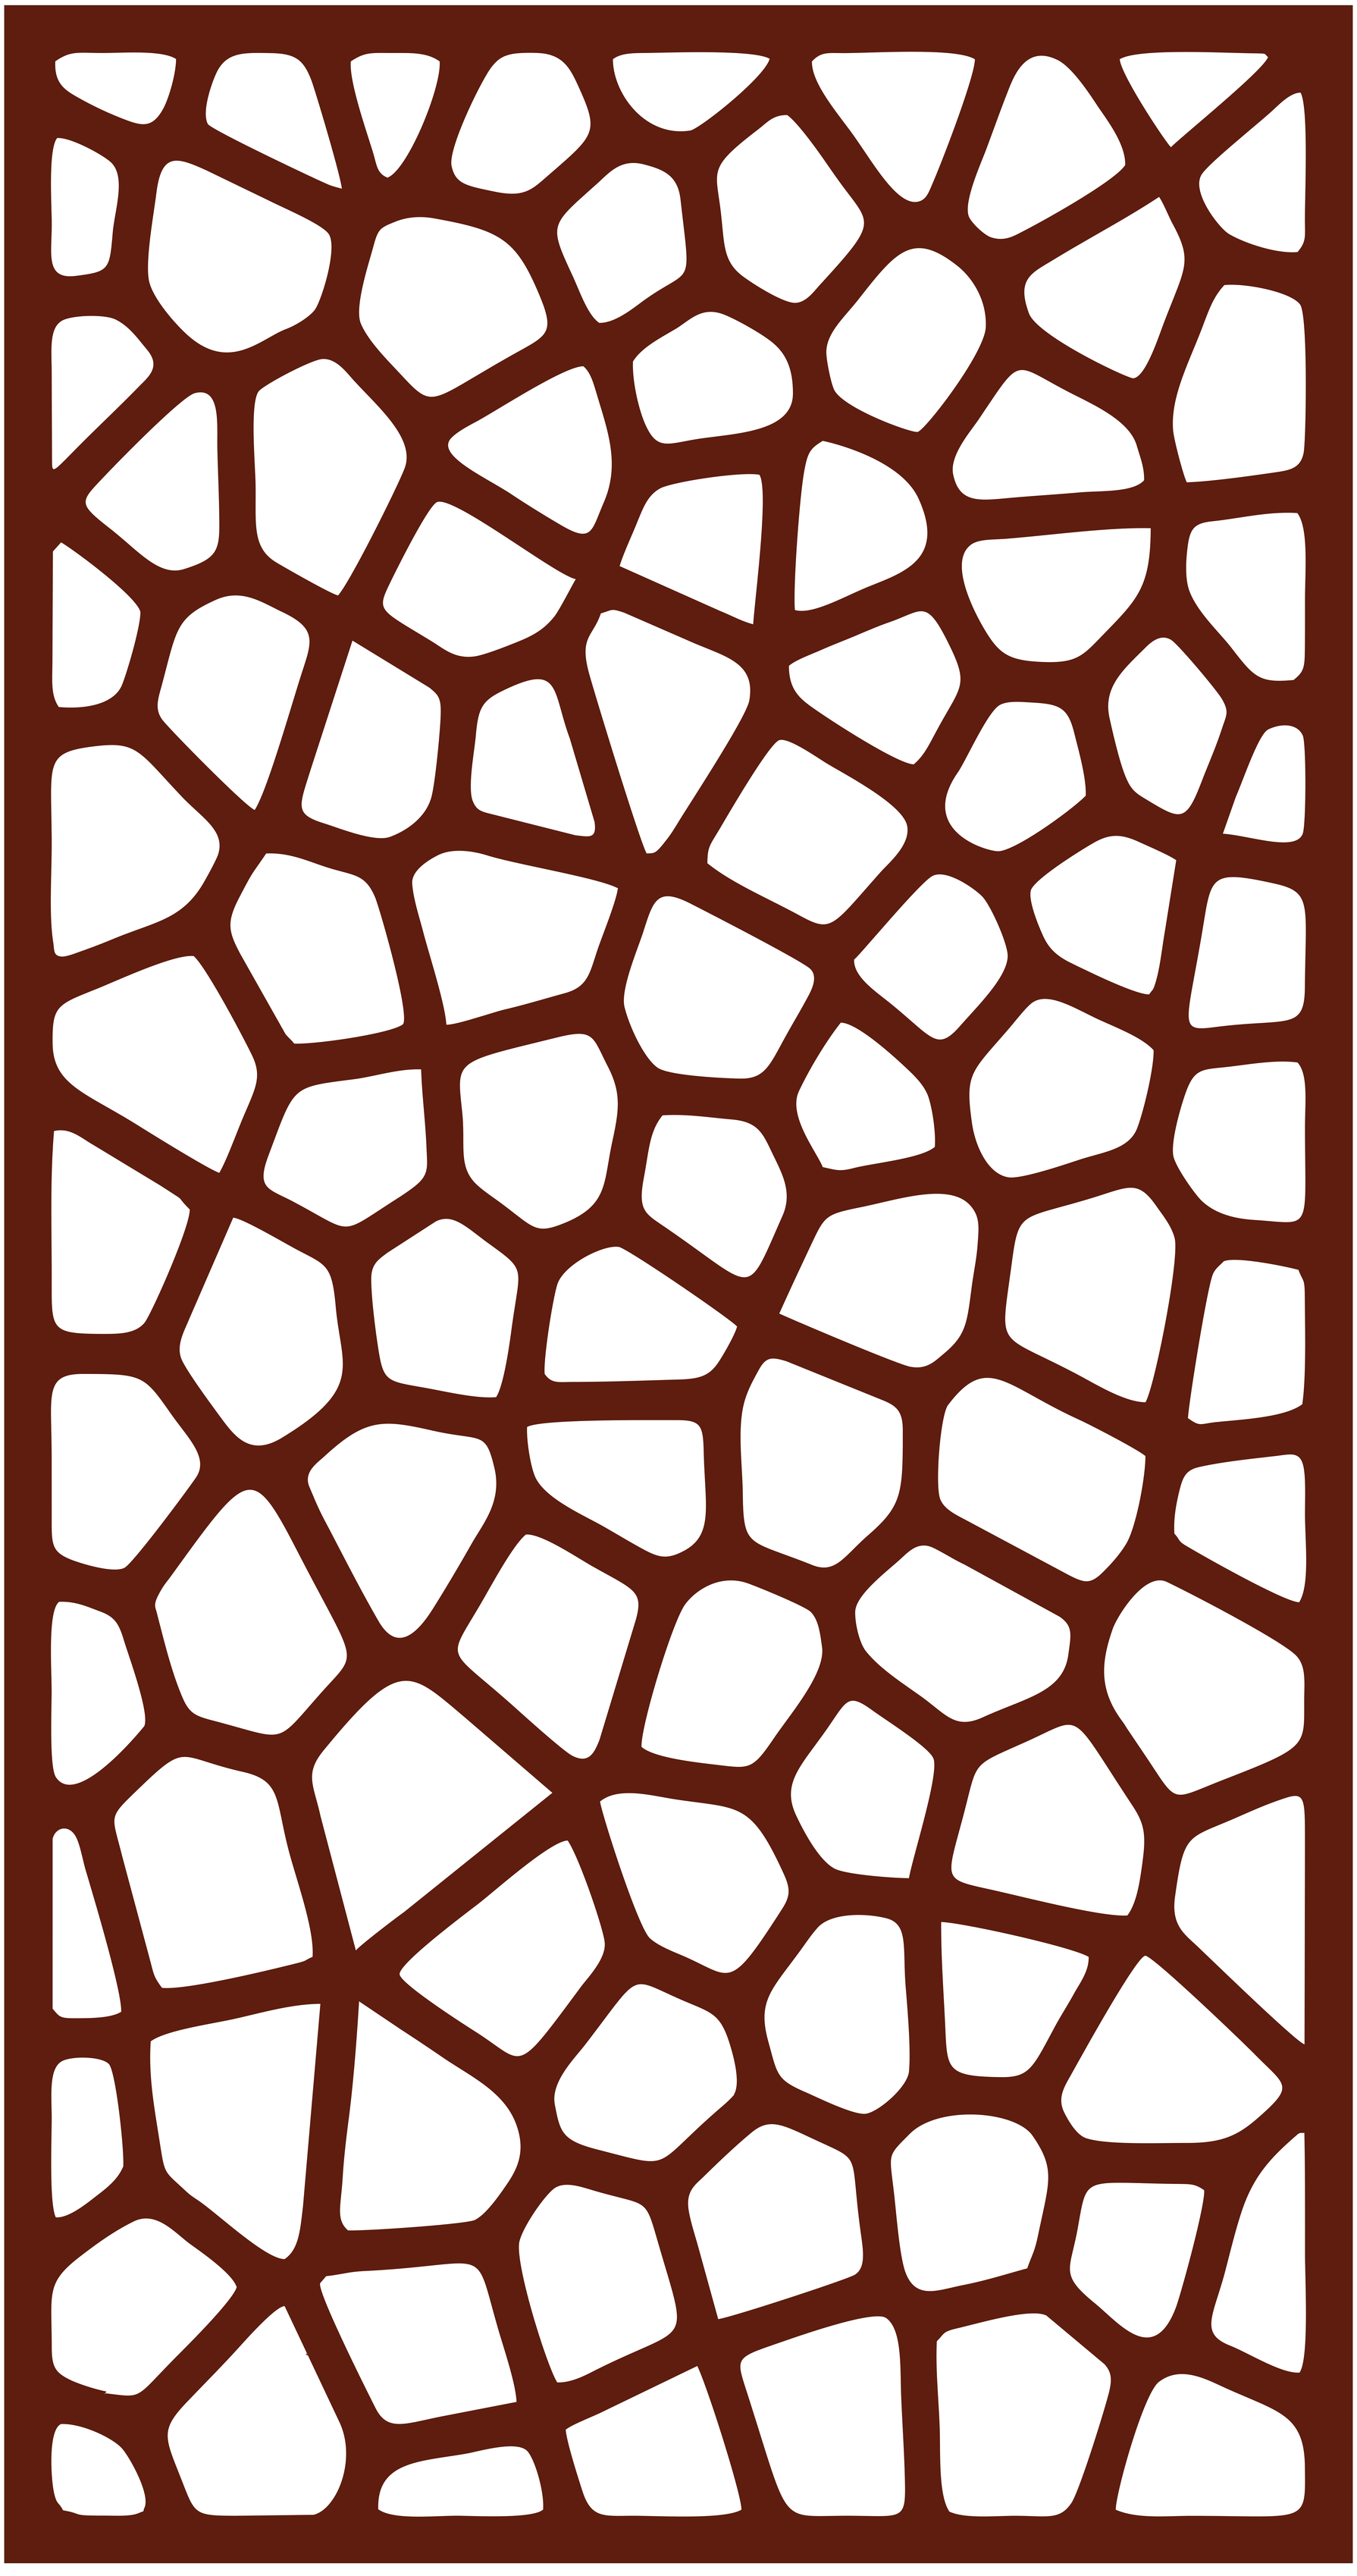

(4.0 3A59 5A105 3C157)

DESIGN 0072

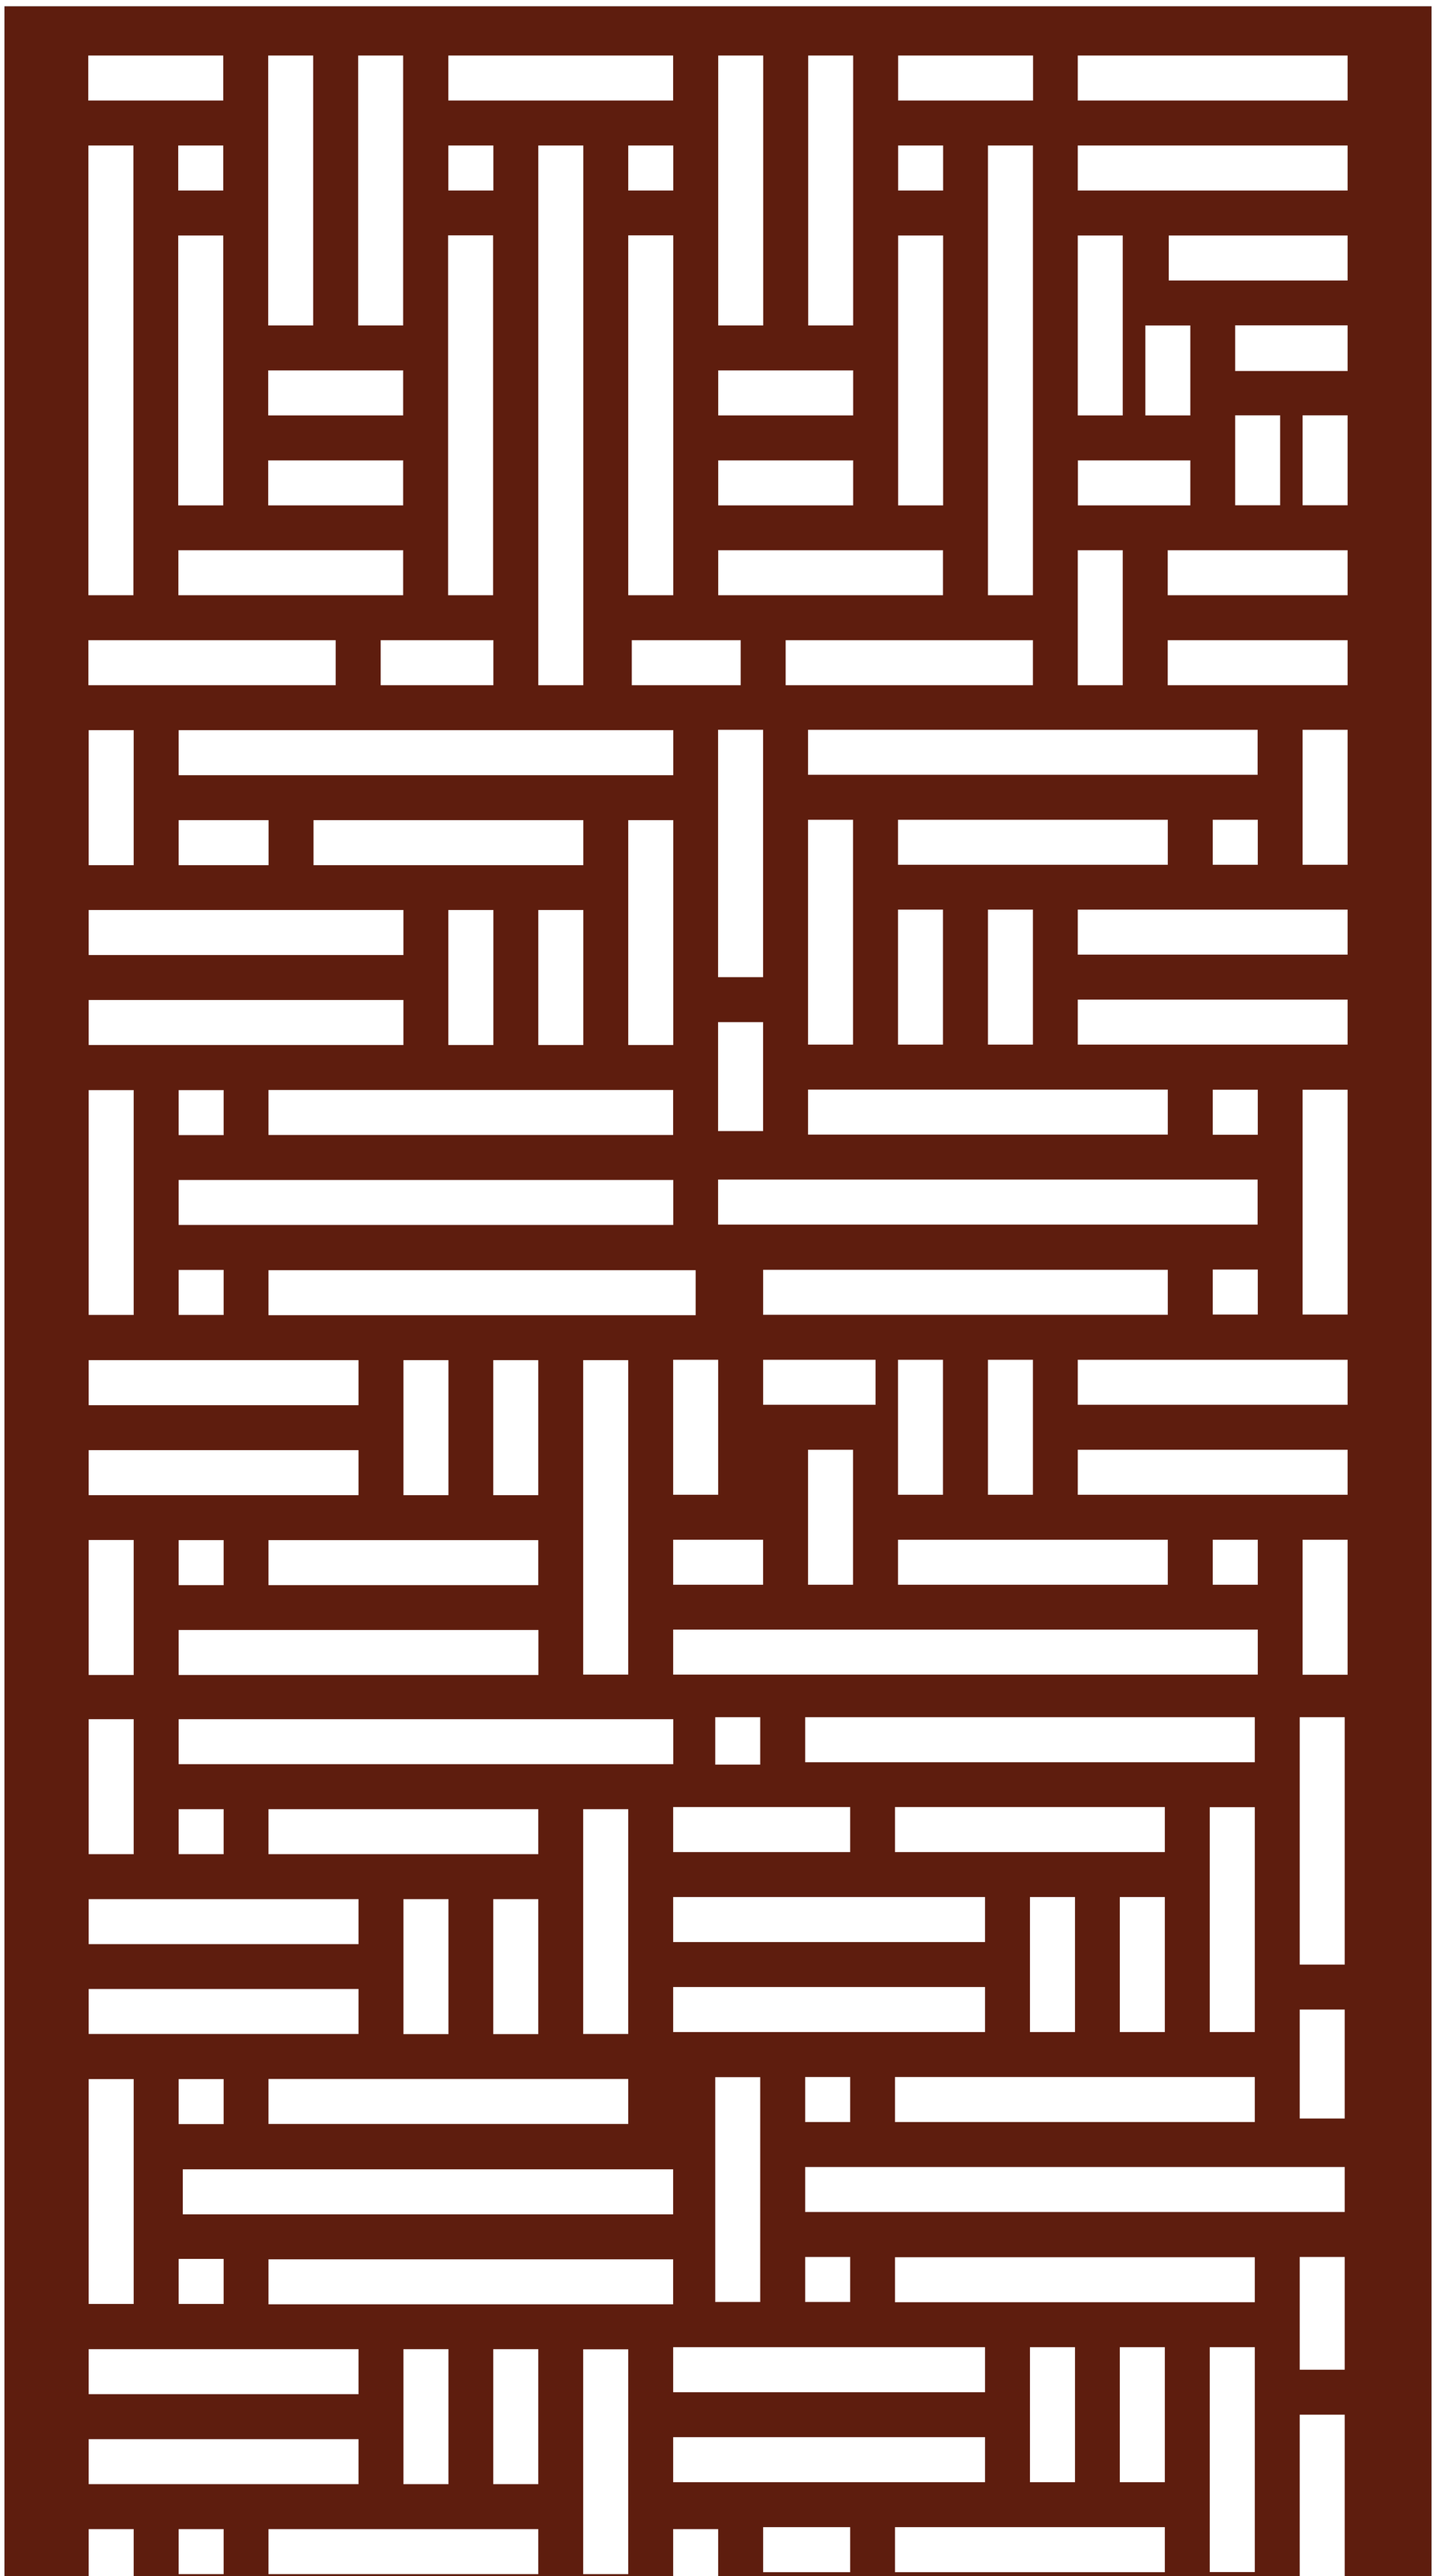

(4.0 3A69 5A119 3C195)

DESIGN 0073

(4.0 3A38 5A66 3C108)

DESIGN 0074

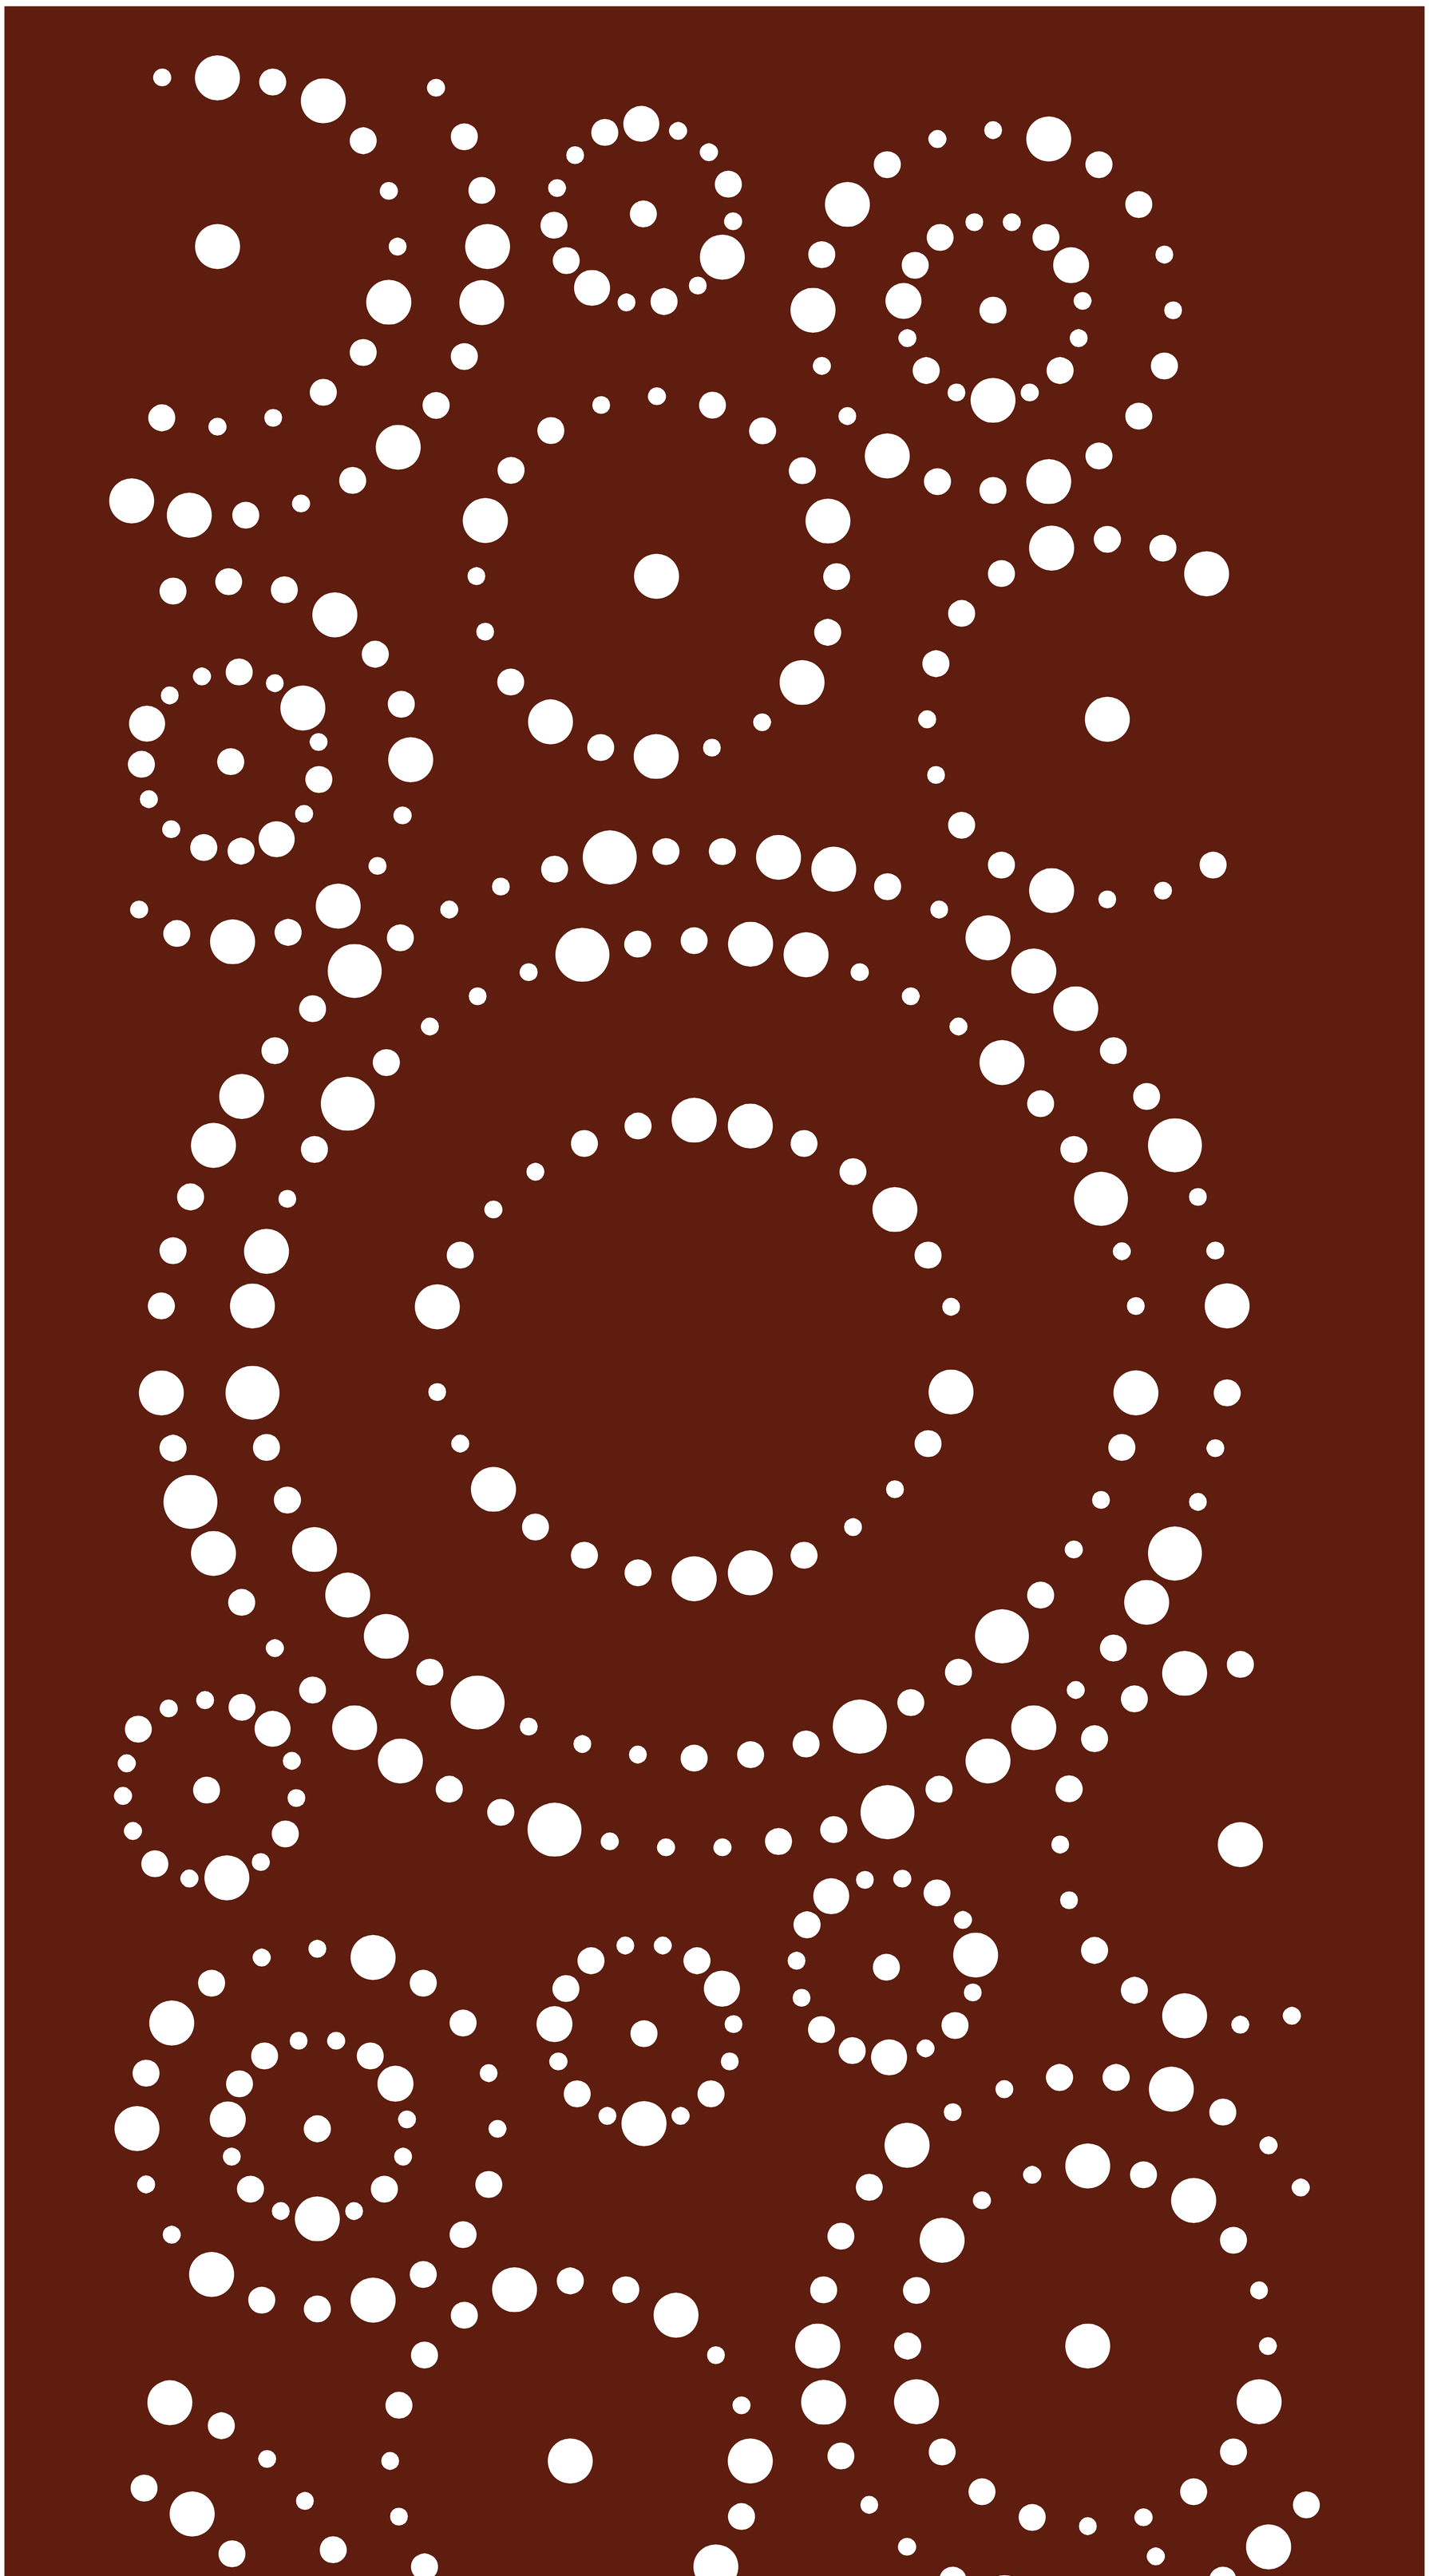

(4.0 3A53 5A92 3C150)

DESIGN 0075

(4.0 3A30 5A52 3C85)

DESIGN 0076

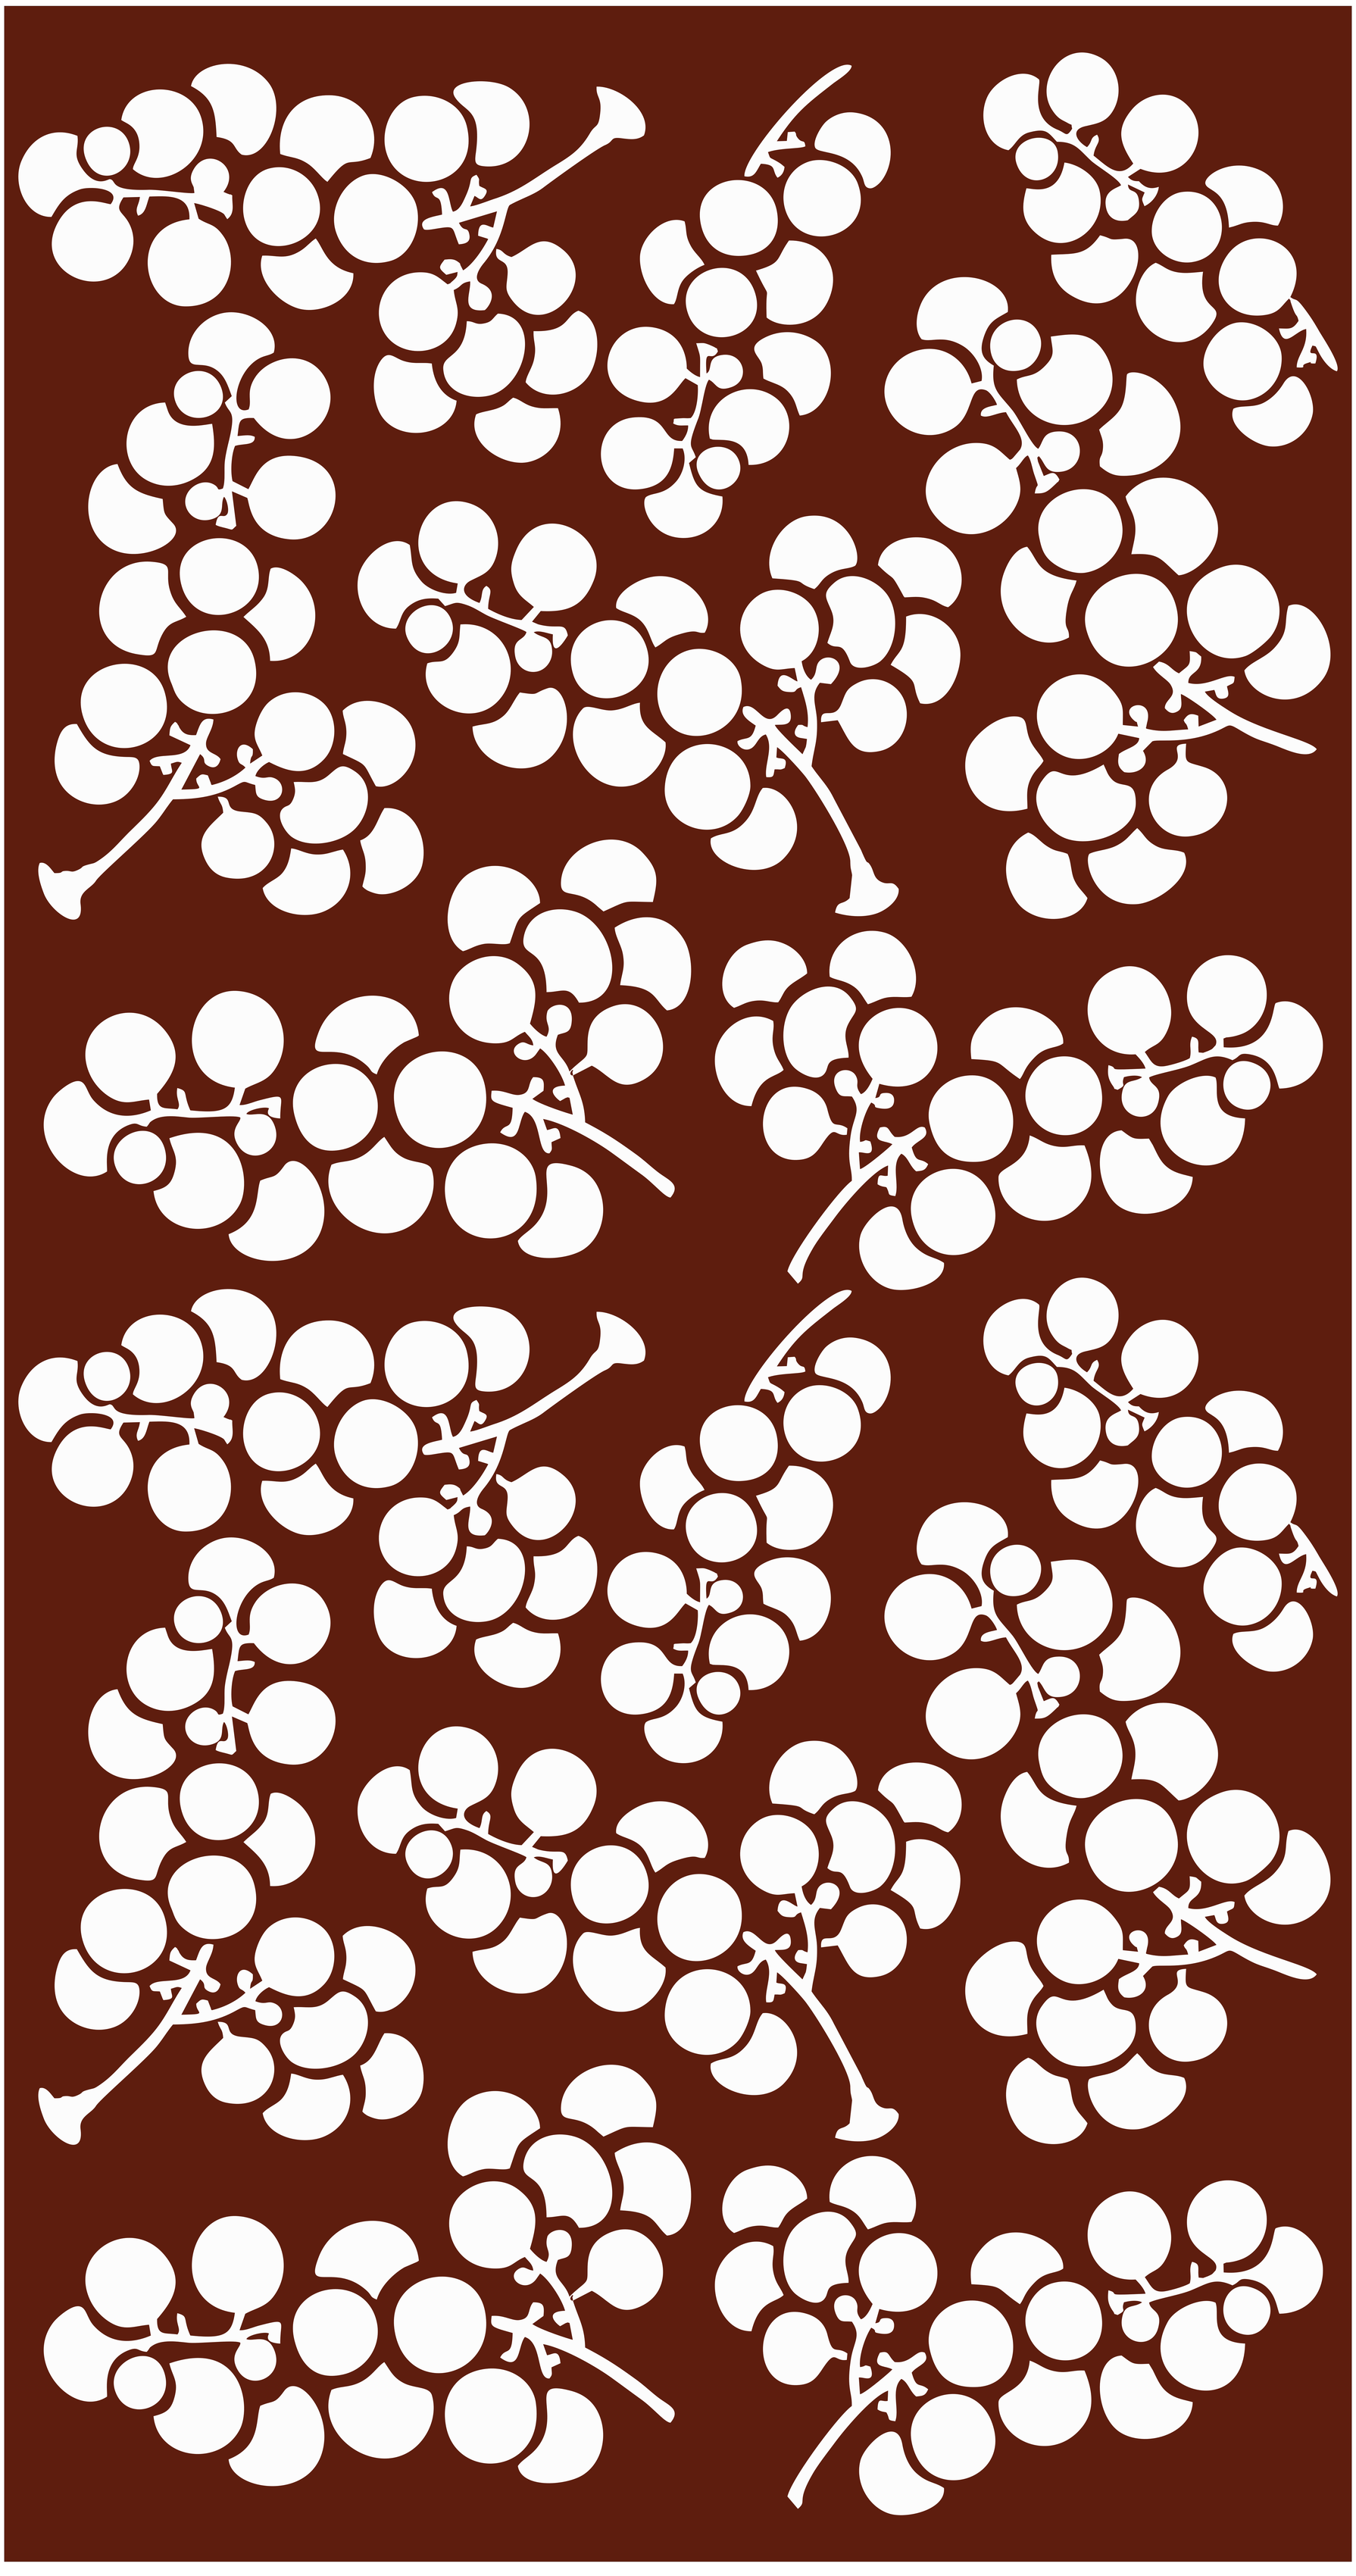

(4.0 3A85 5A147 3C240)

DESIGN 0077

(4.0 3A180 5A310 3C508)

DESIGN 0078

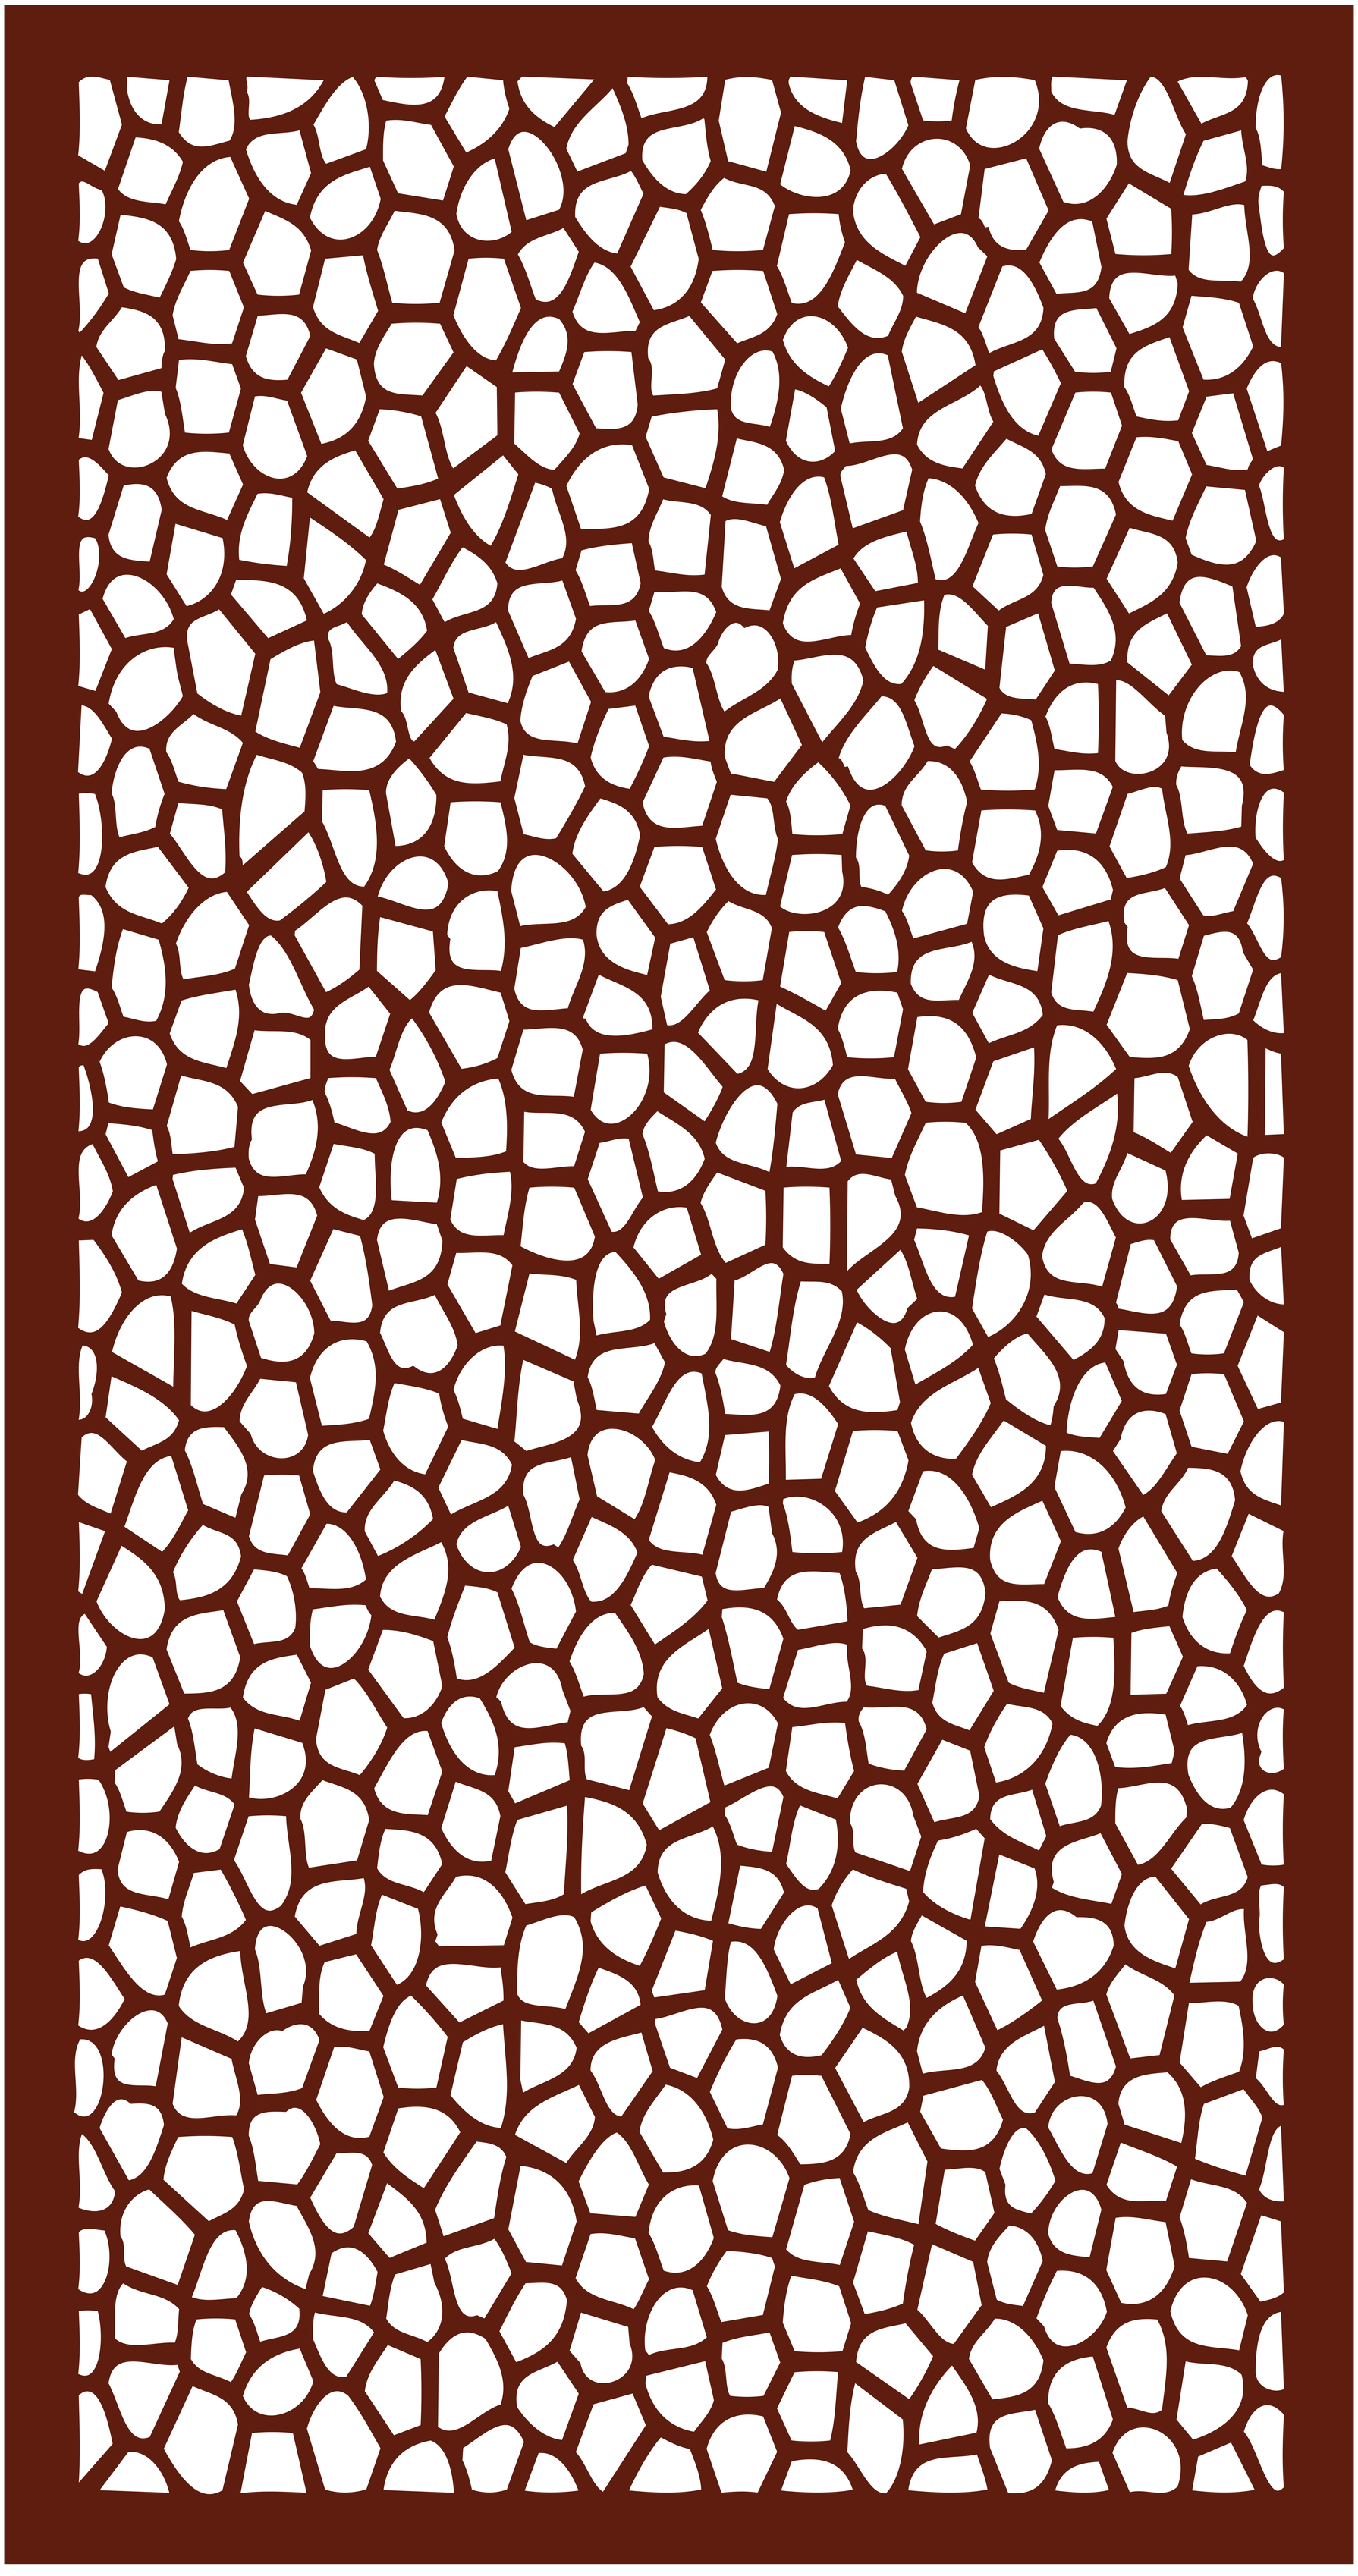

(4.0 3A120 5A207 3C339)

DESIGN 0079

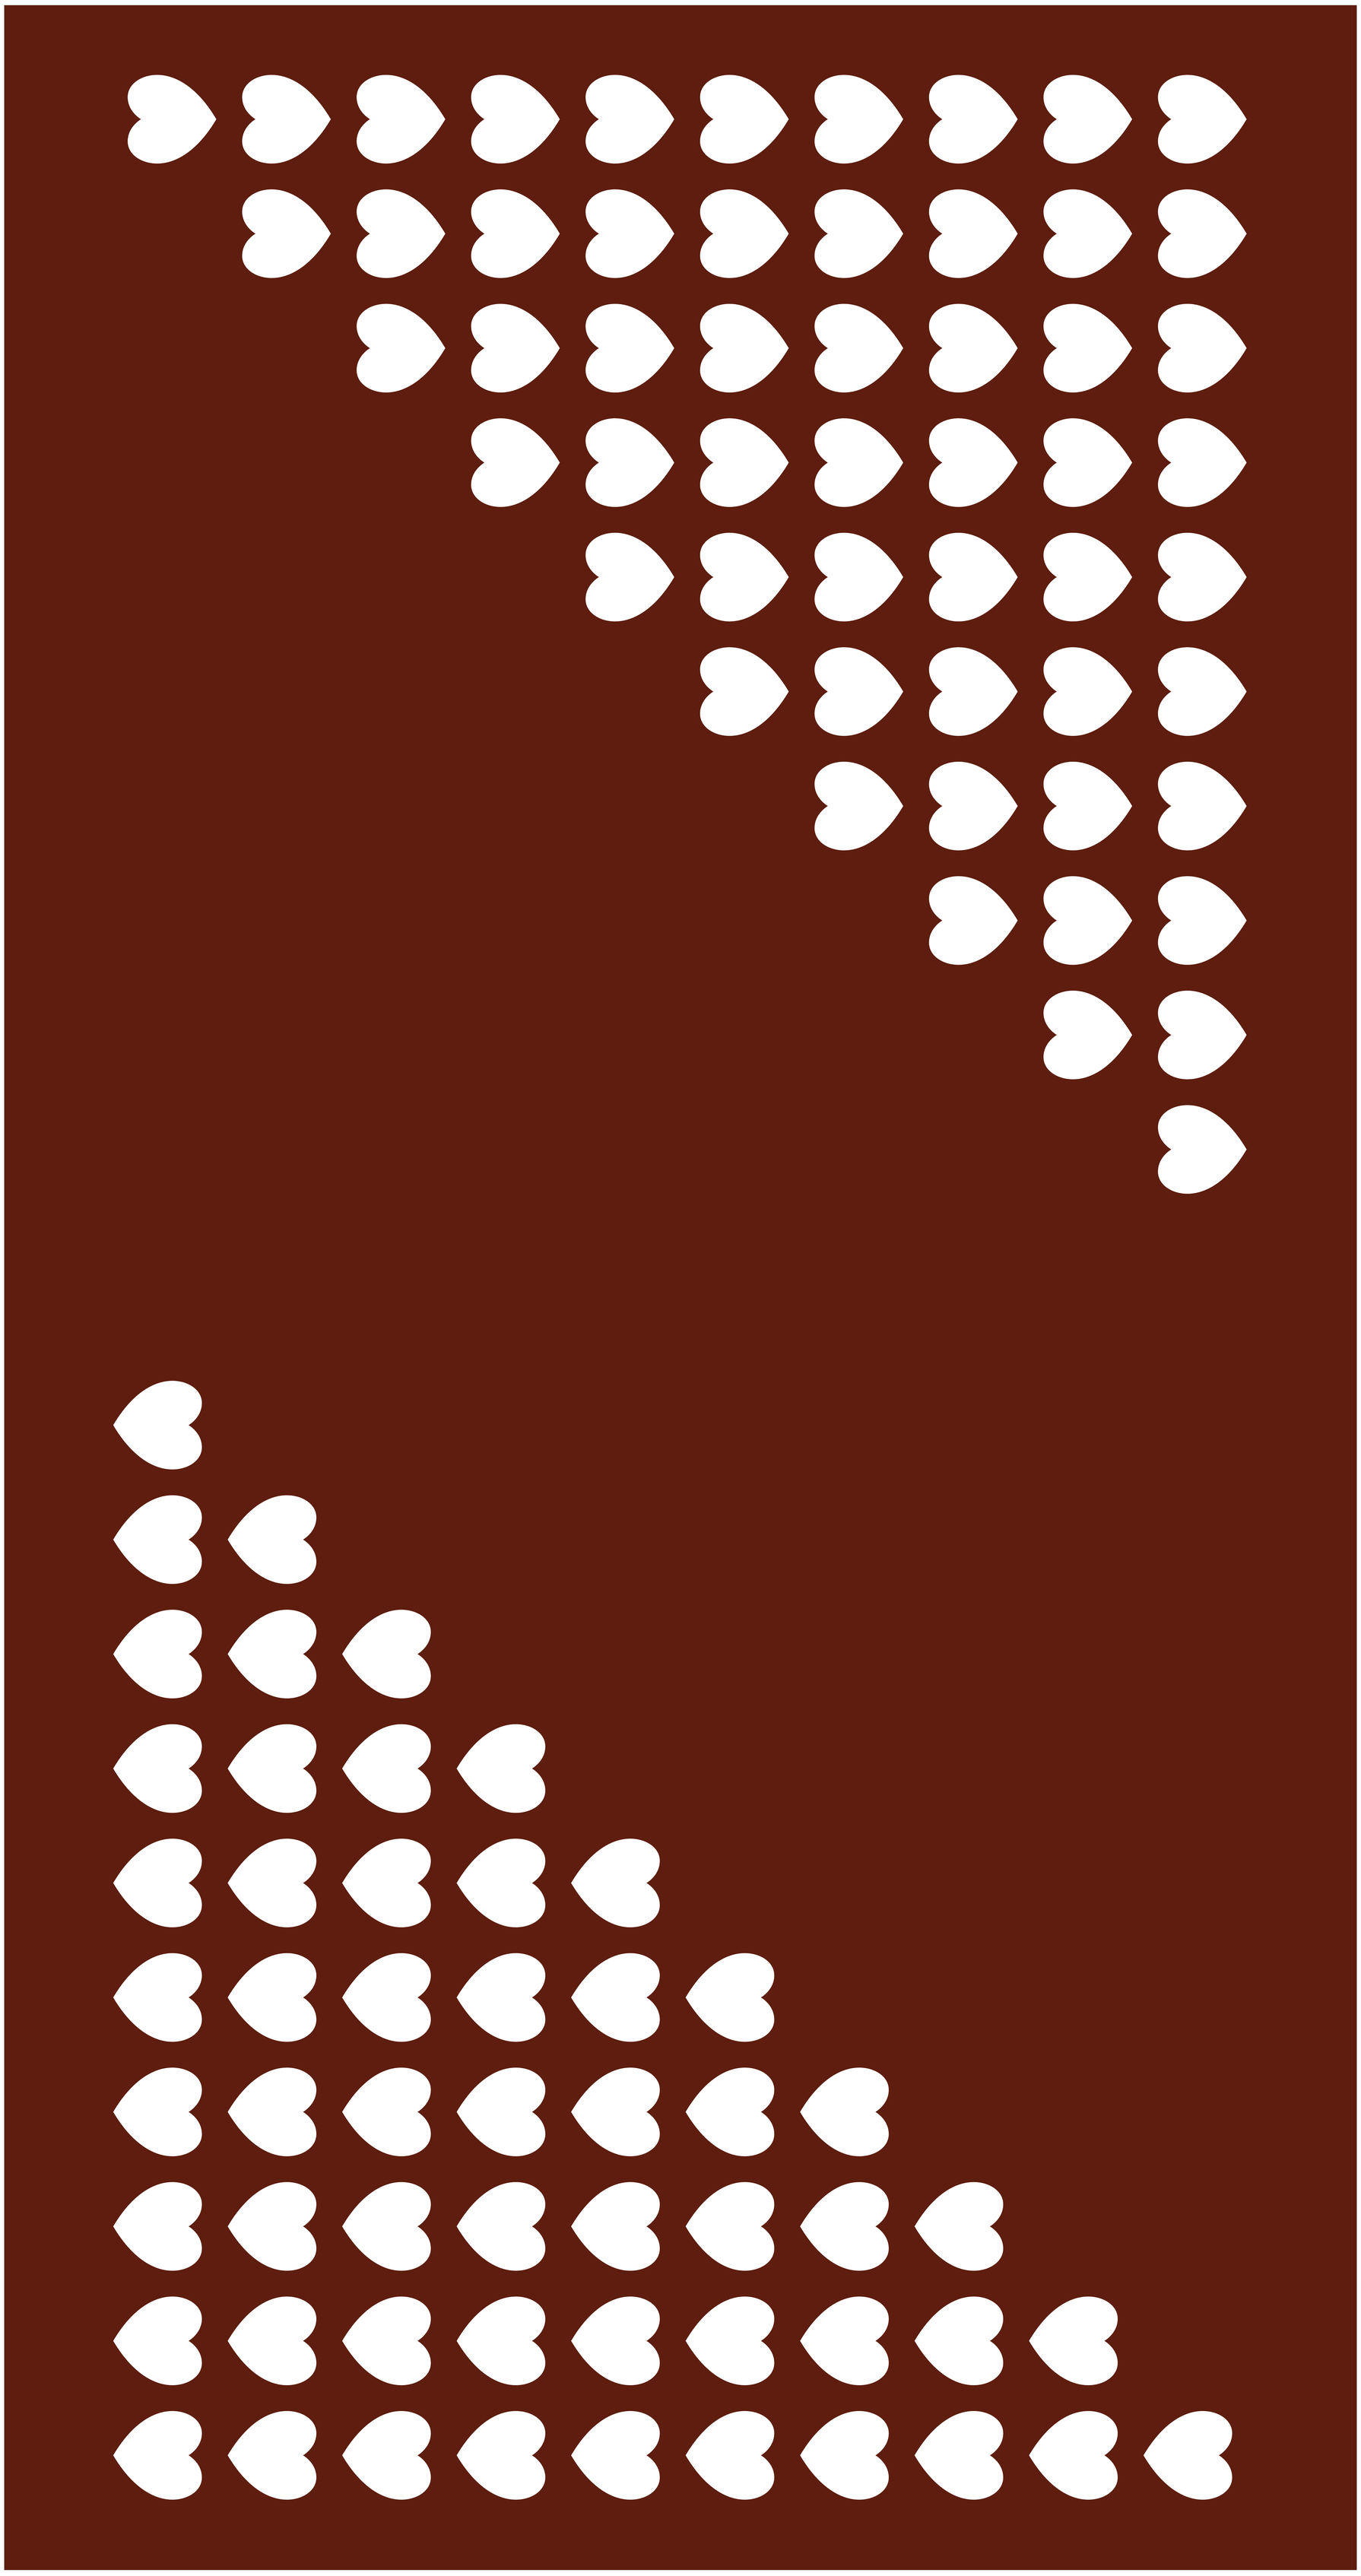

(4.0 3A36 5A62 3C82)

DESIGN 0080

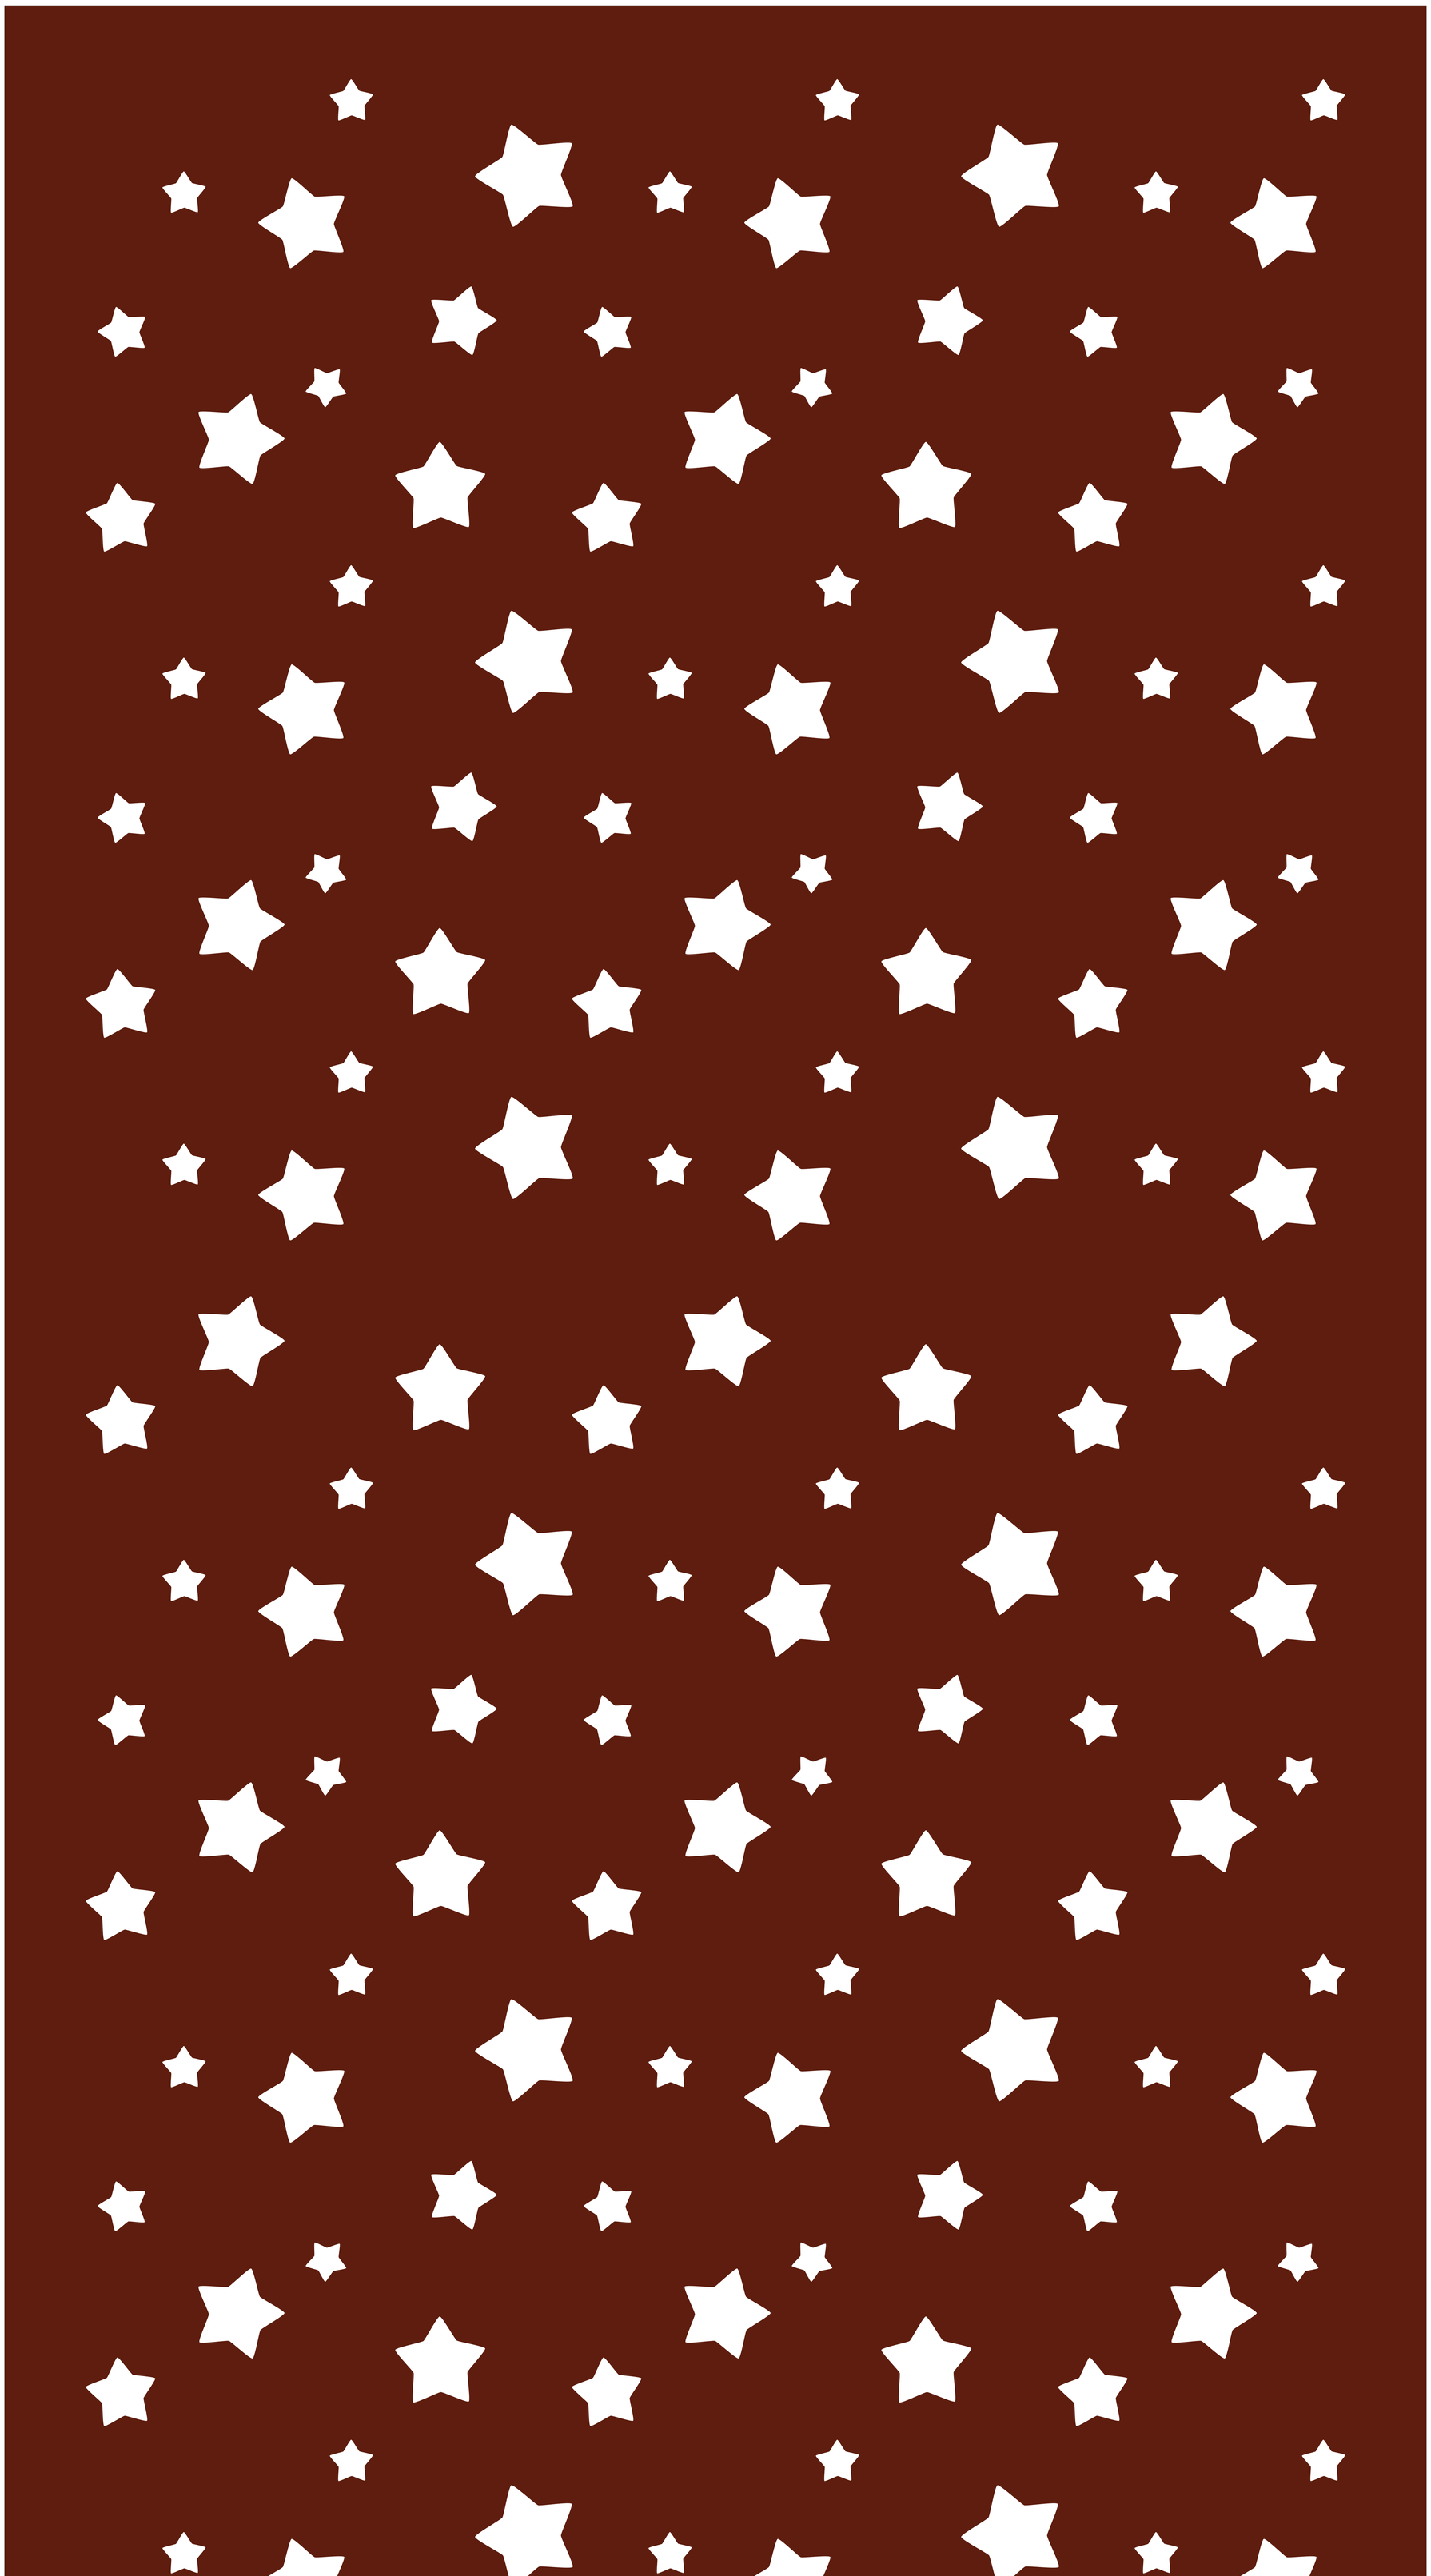

(4.0 3A36 5A62 3C82)

DESIGN 0081

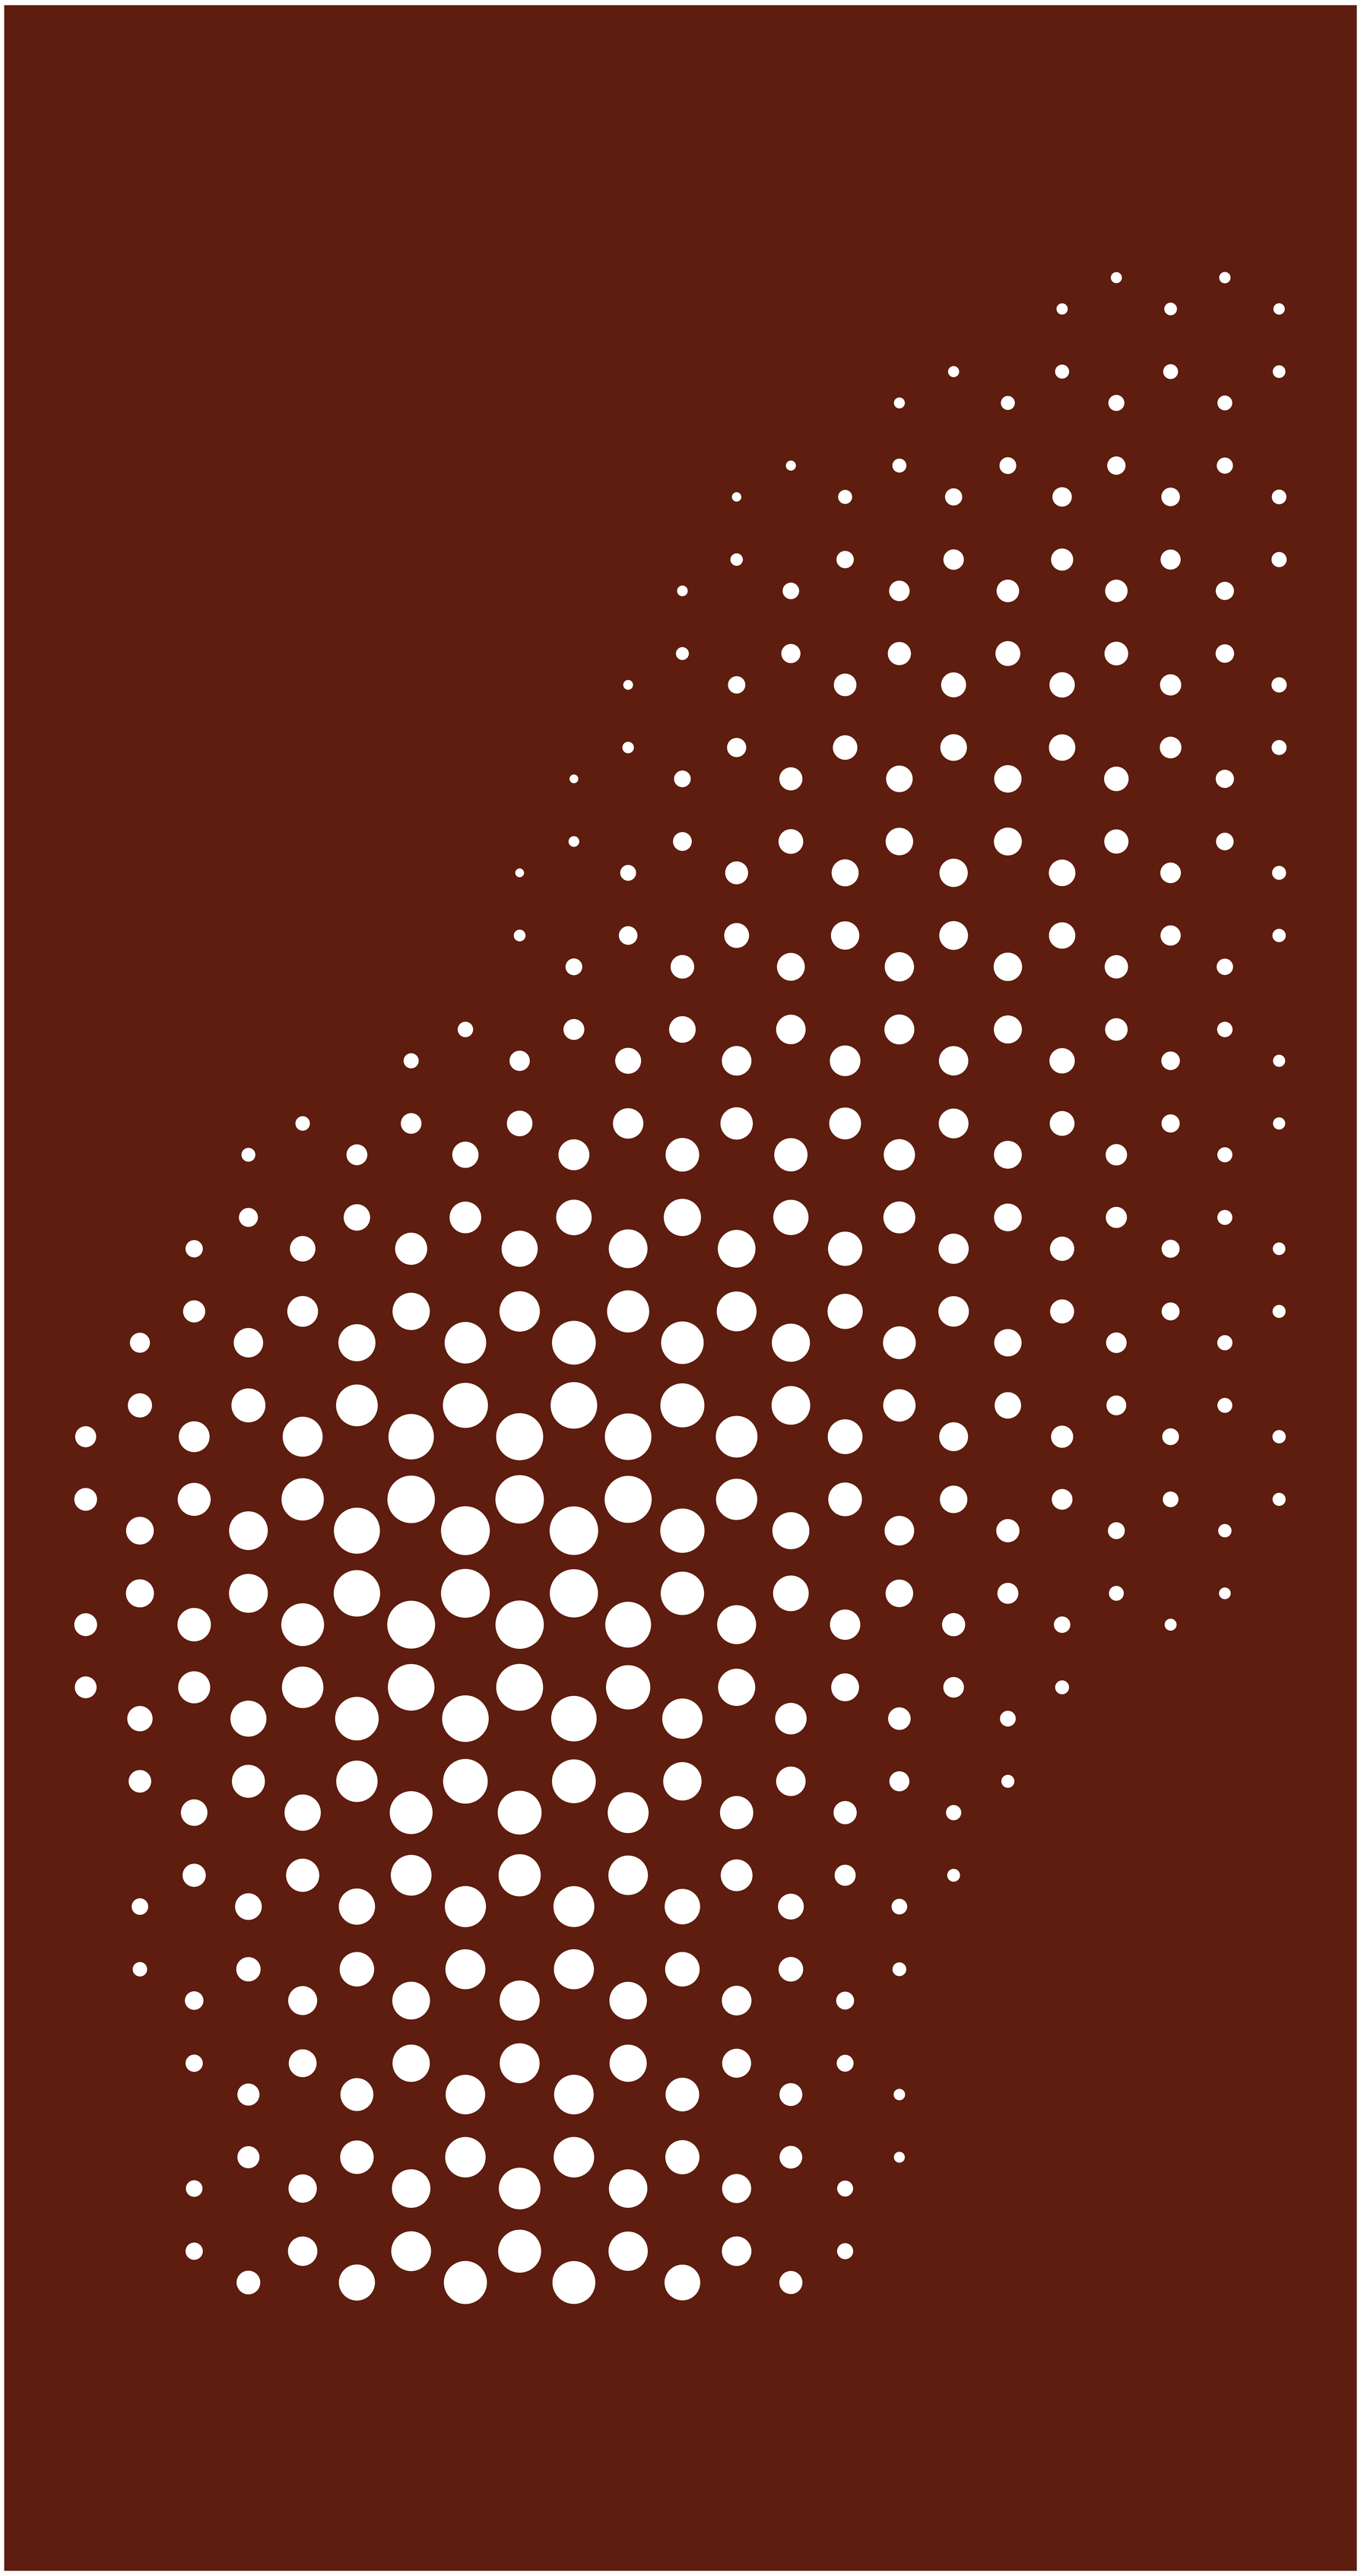

(4.0 3A42 5A75 3C119)

DESIGN 0082

(4.0 3A44 5A79 3C124)

DESIGN 0083

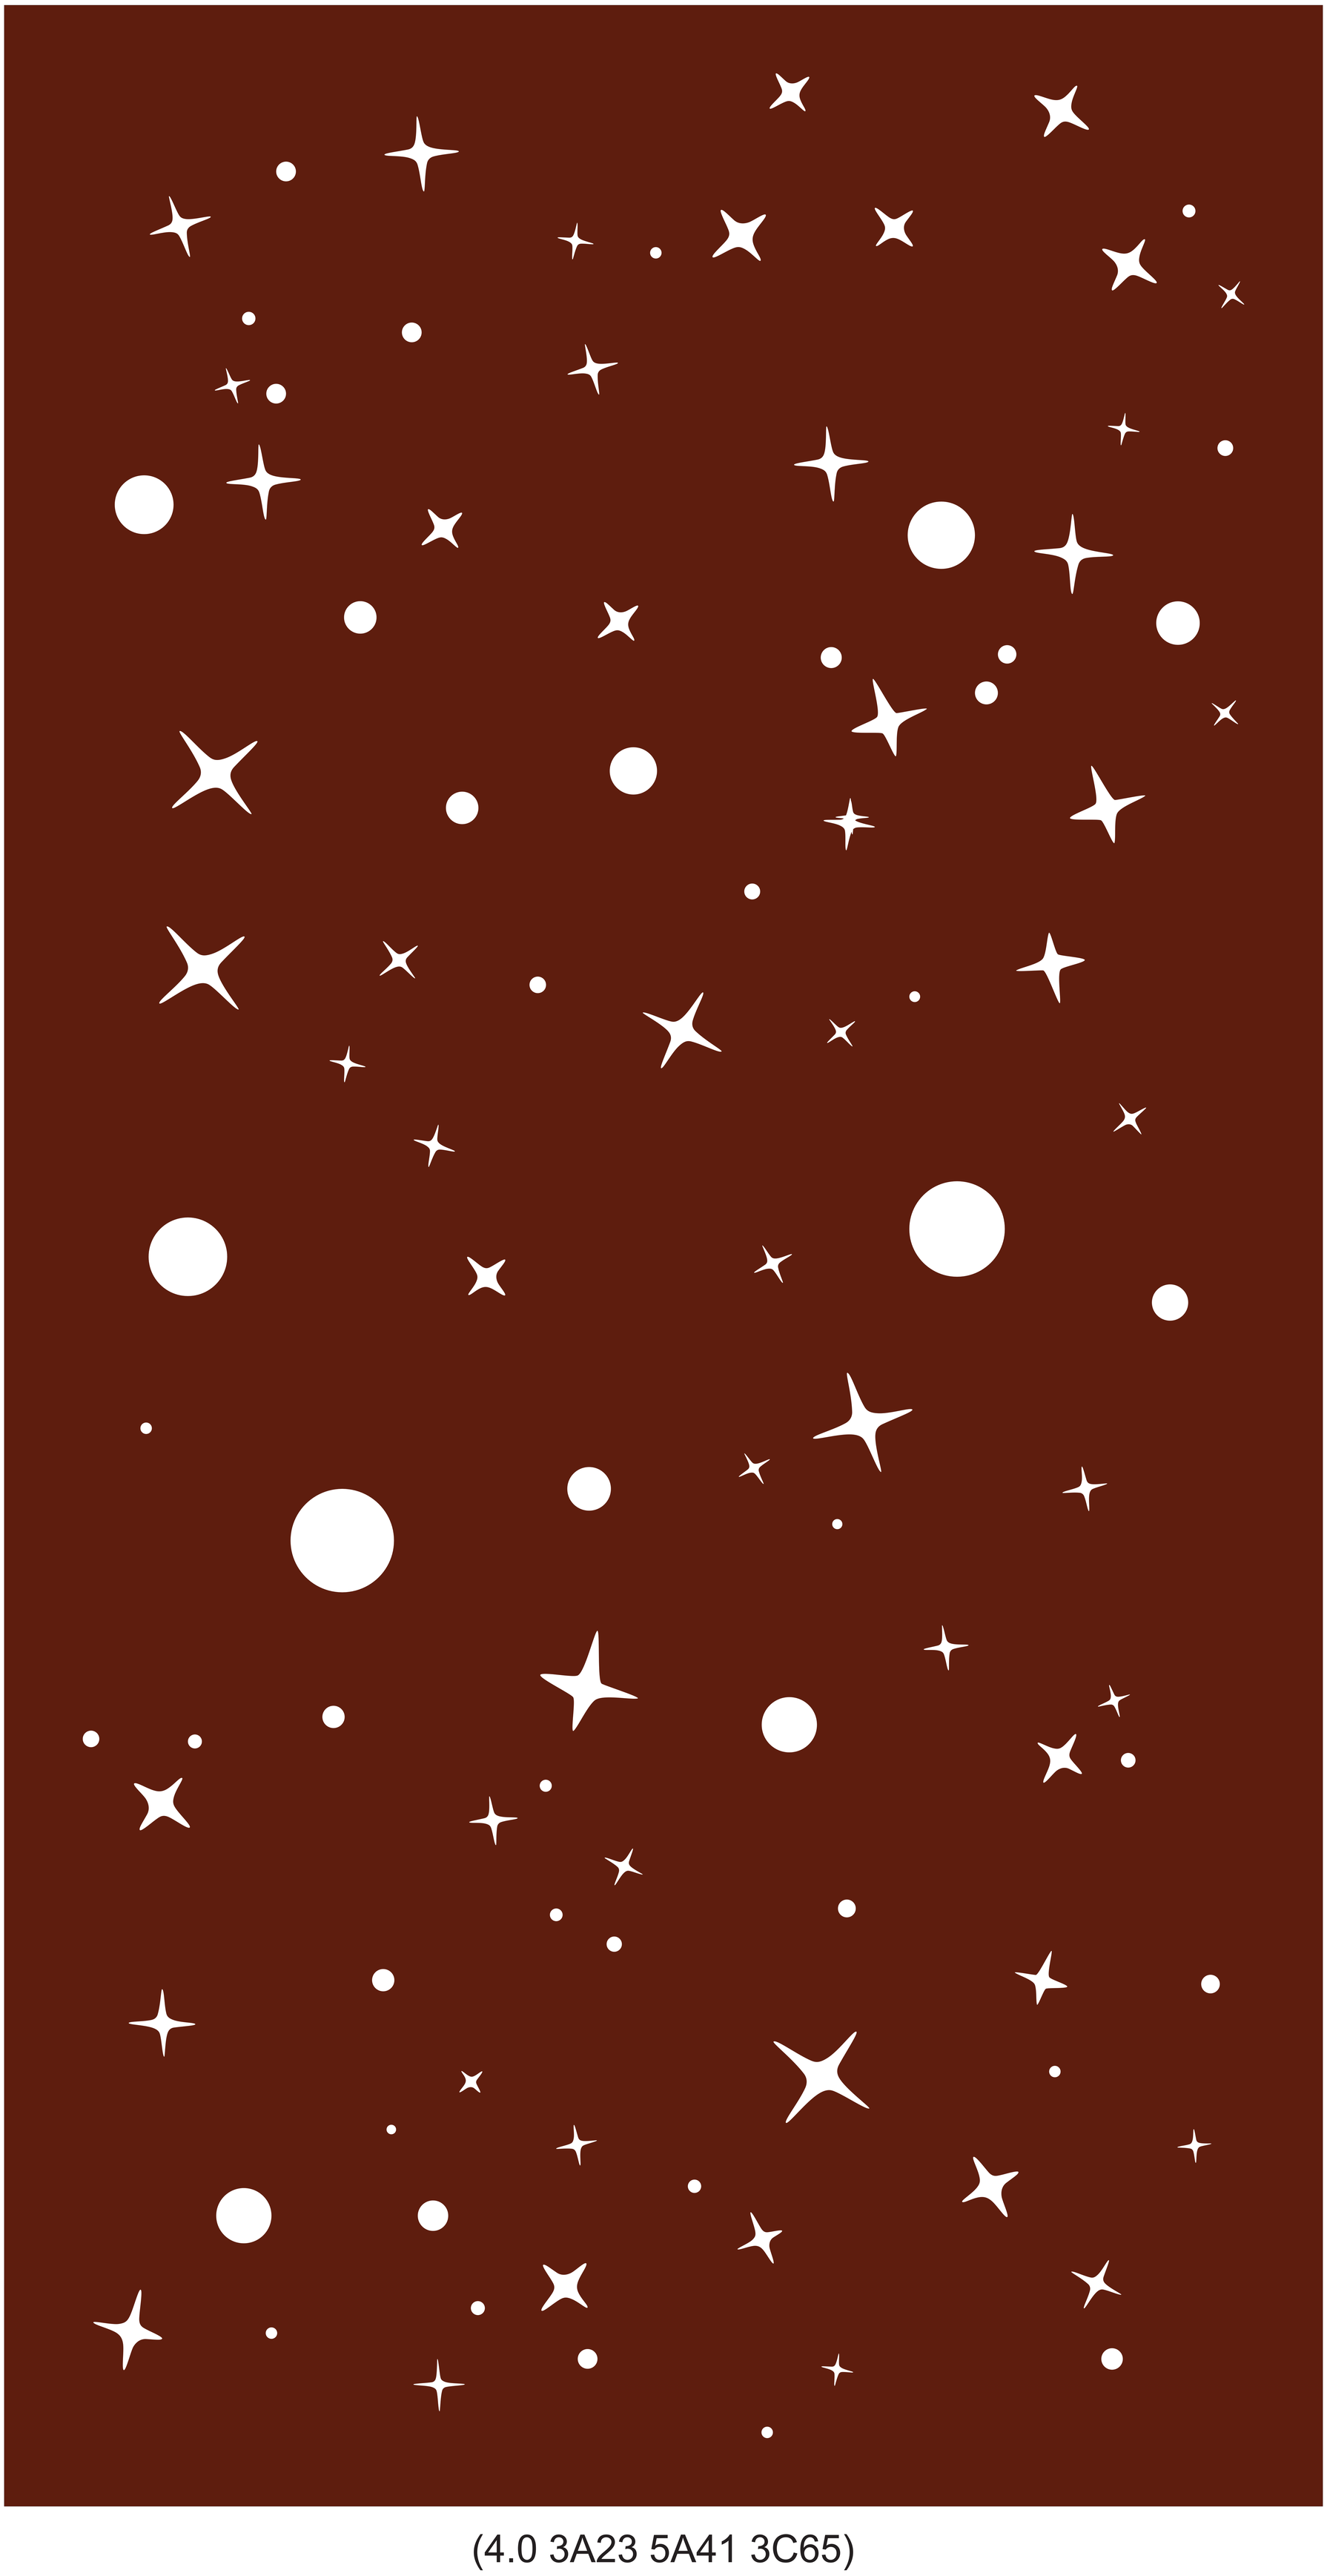

(4.0 3A23 5A41 3C65)

DESIGN 0084

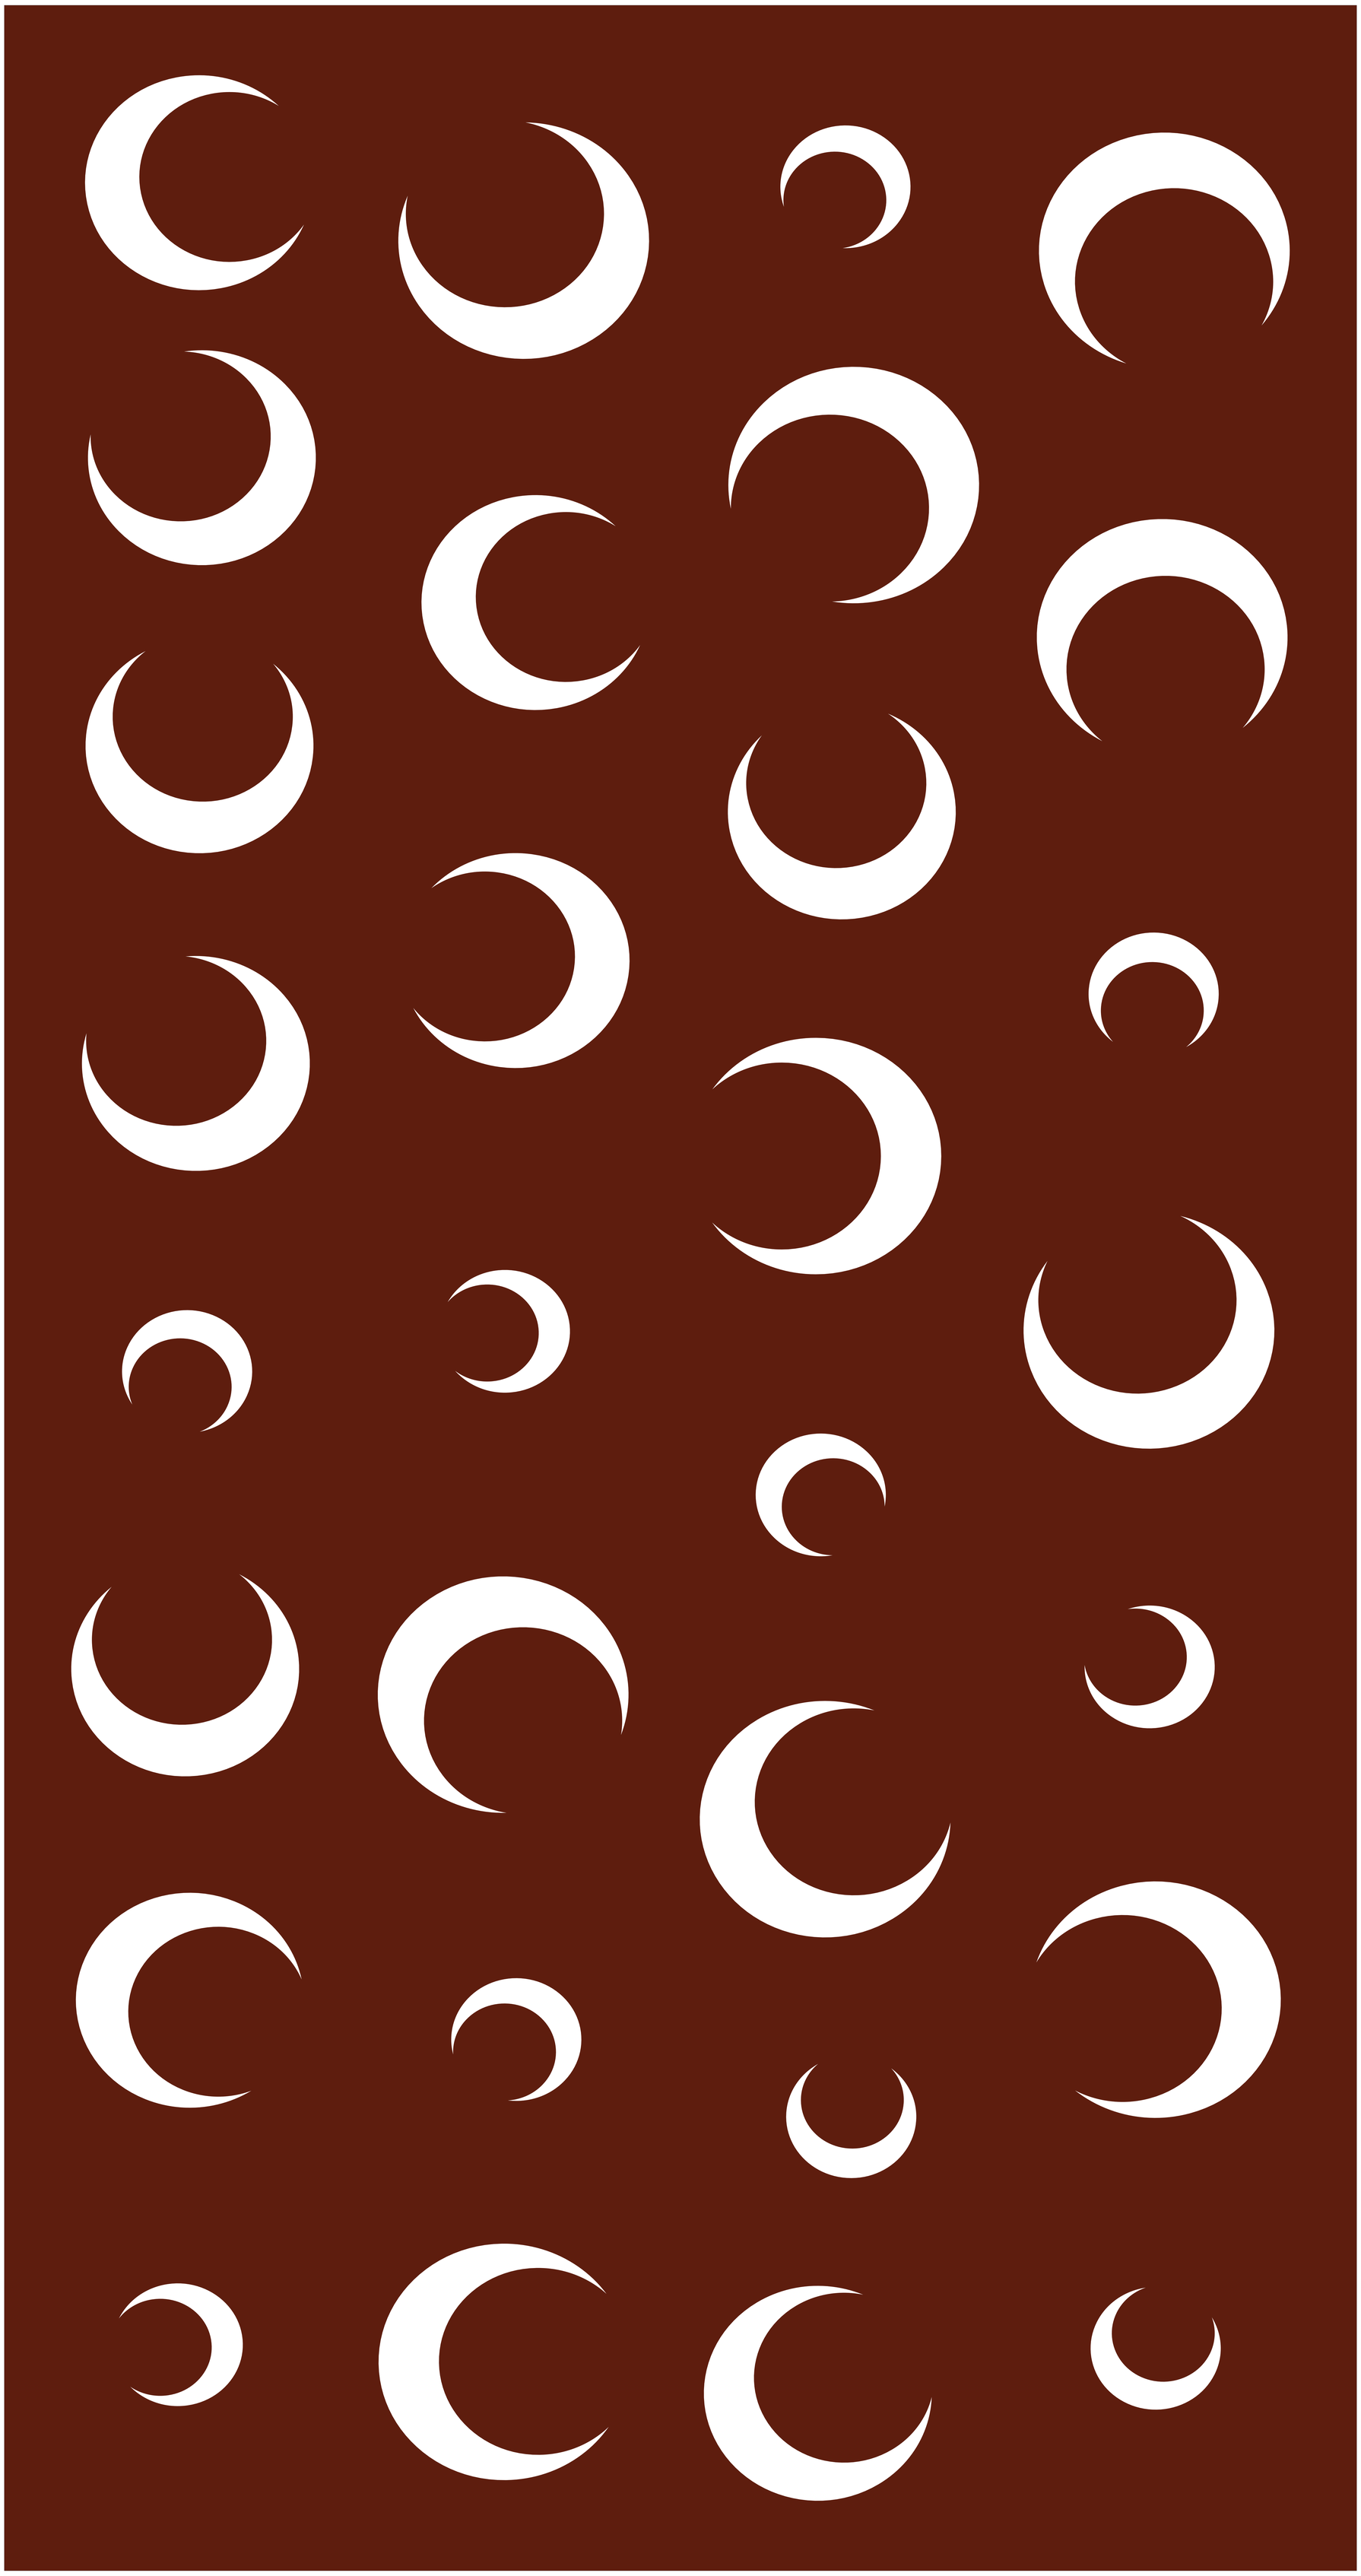

(4.0 3A28 5A50 3C79)

DESIGN 0085

(4.0 3A85 5A147 3C240)

DESIGN 0086

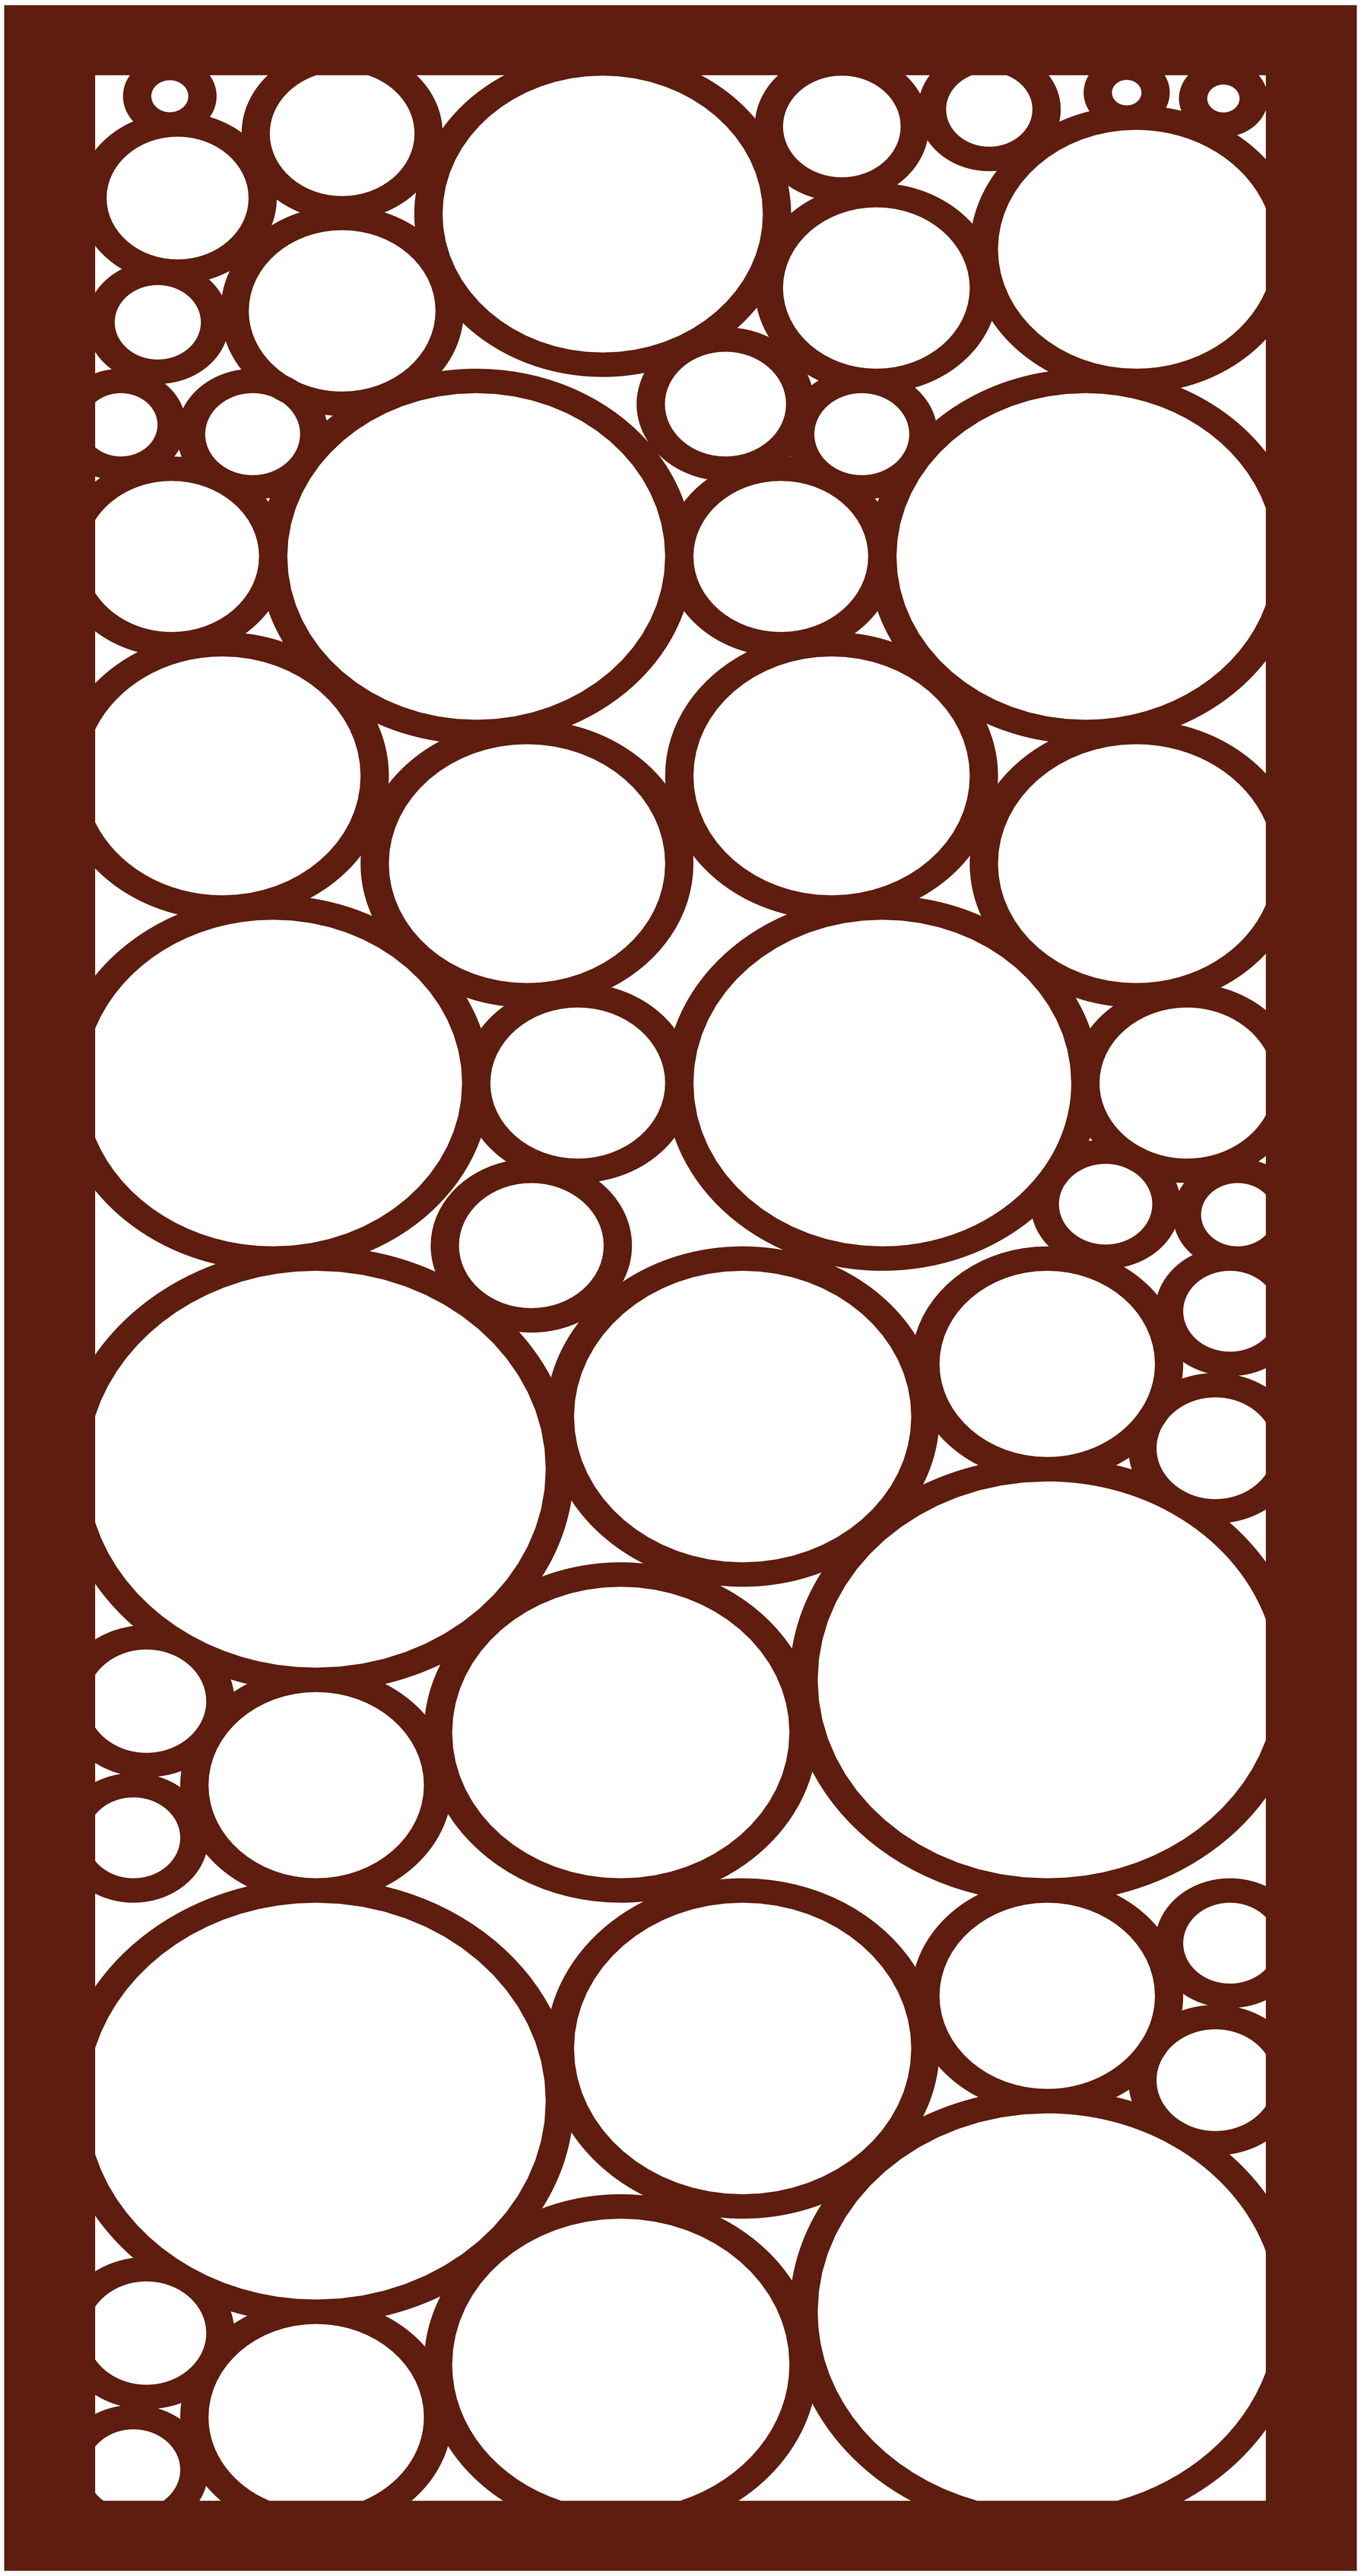

(4.0 3A48 5A86 3C136)

DESIGN 0087

(4.0 3A59 5A105 3C157)

DESIGN 0088

(4.0 3A62 5A111 3C175)

DESIGN 0089

(4.0 3A36 5A64 3C102)

DESIGN 0090

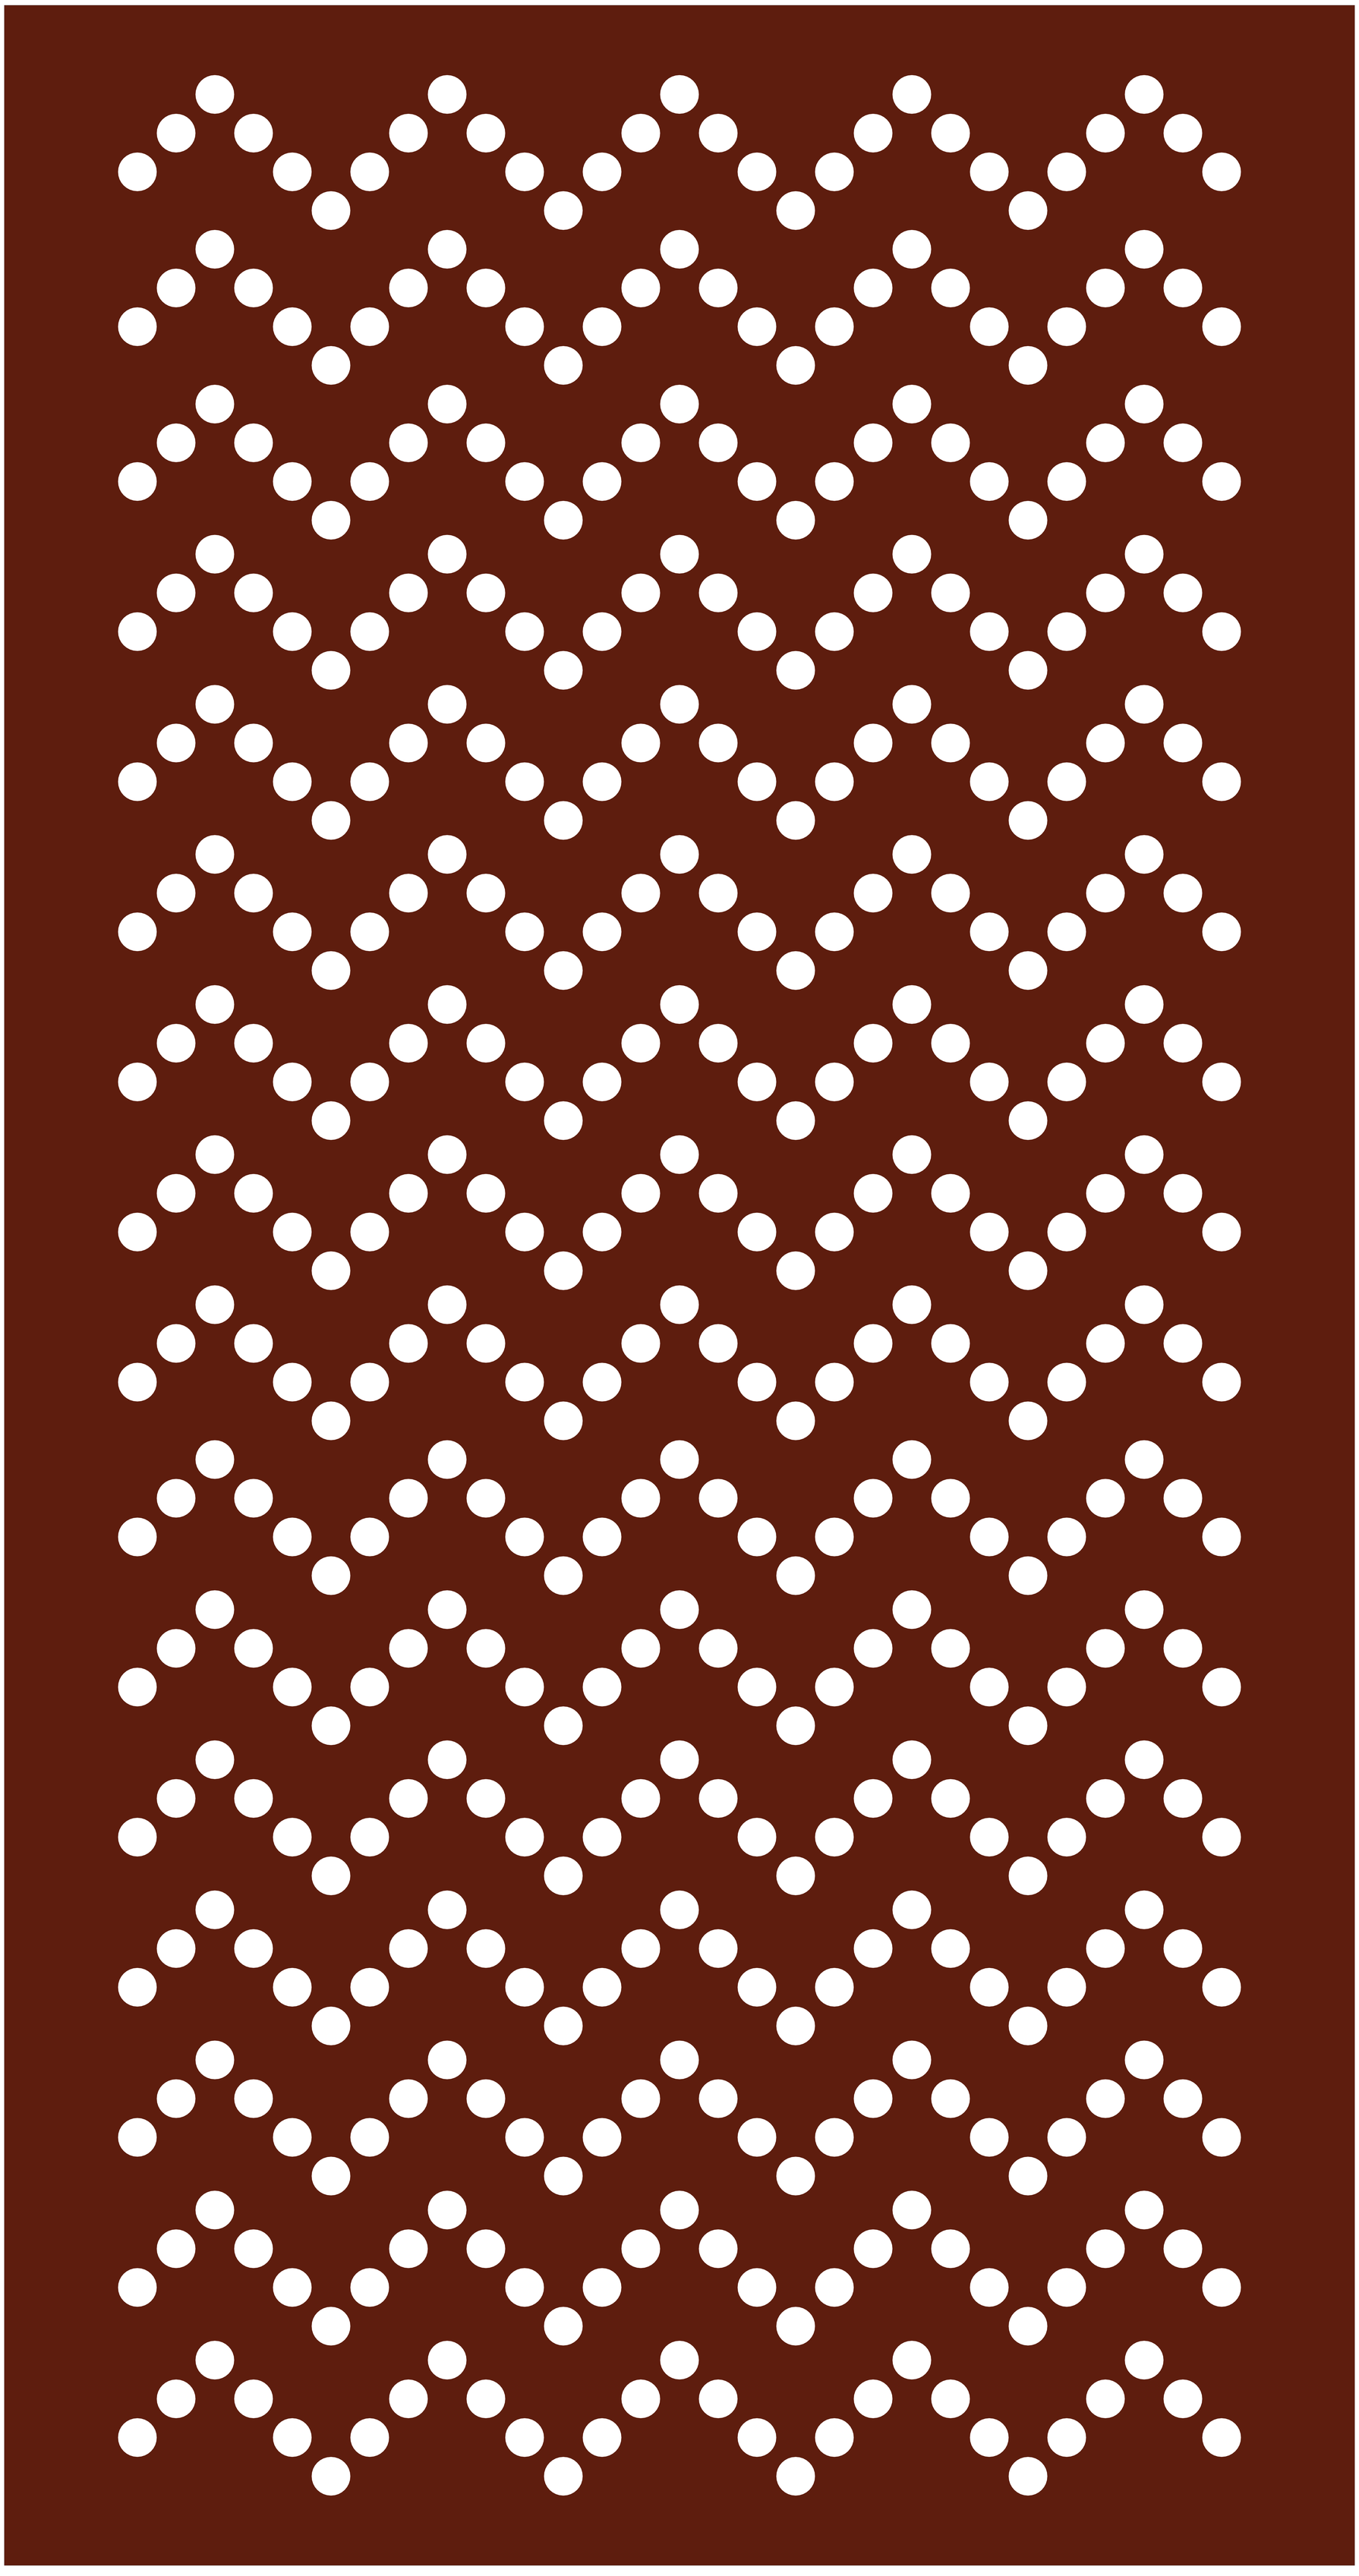

(4.0 3A67 5A120 3C189)

DESIGN 0091

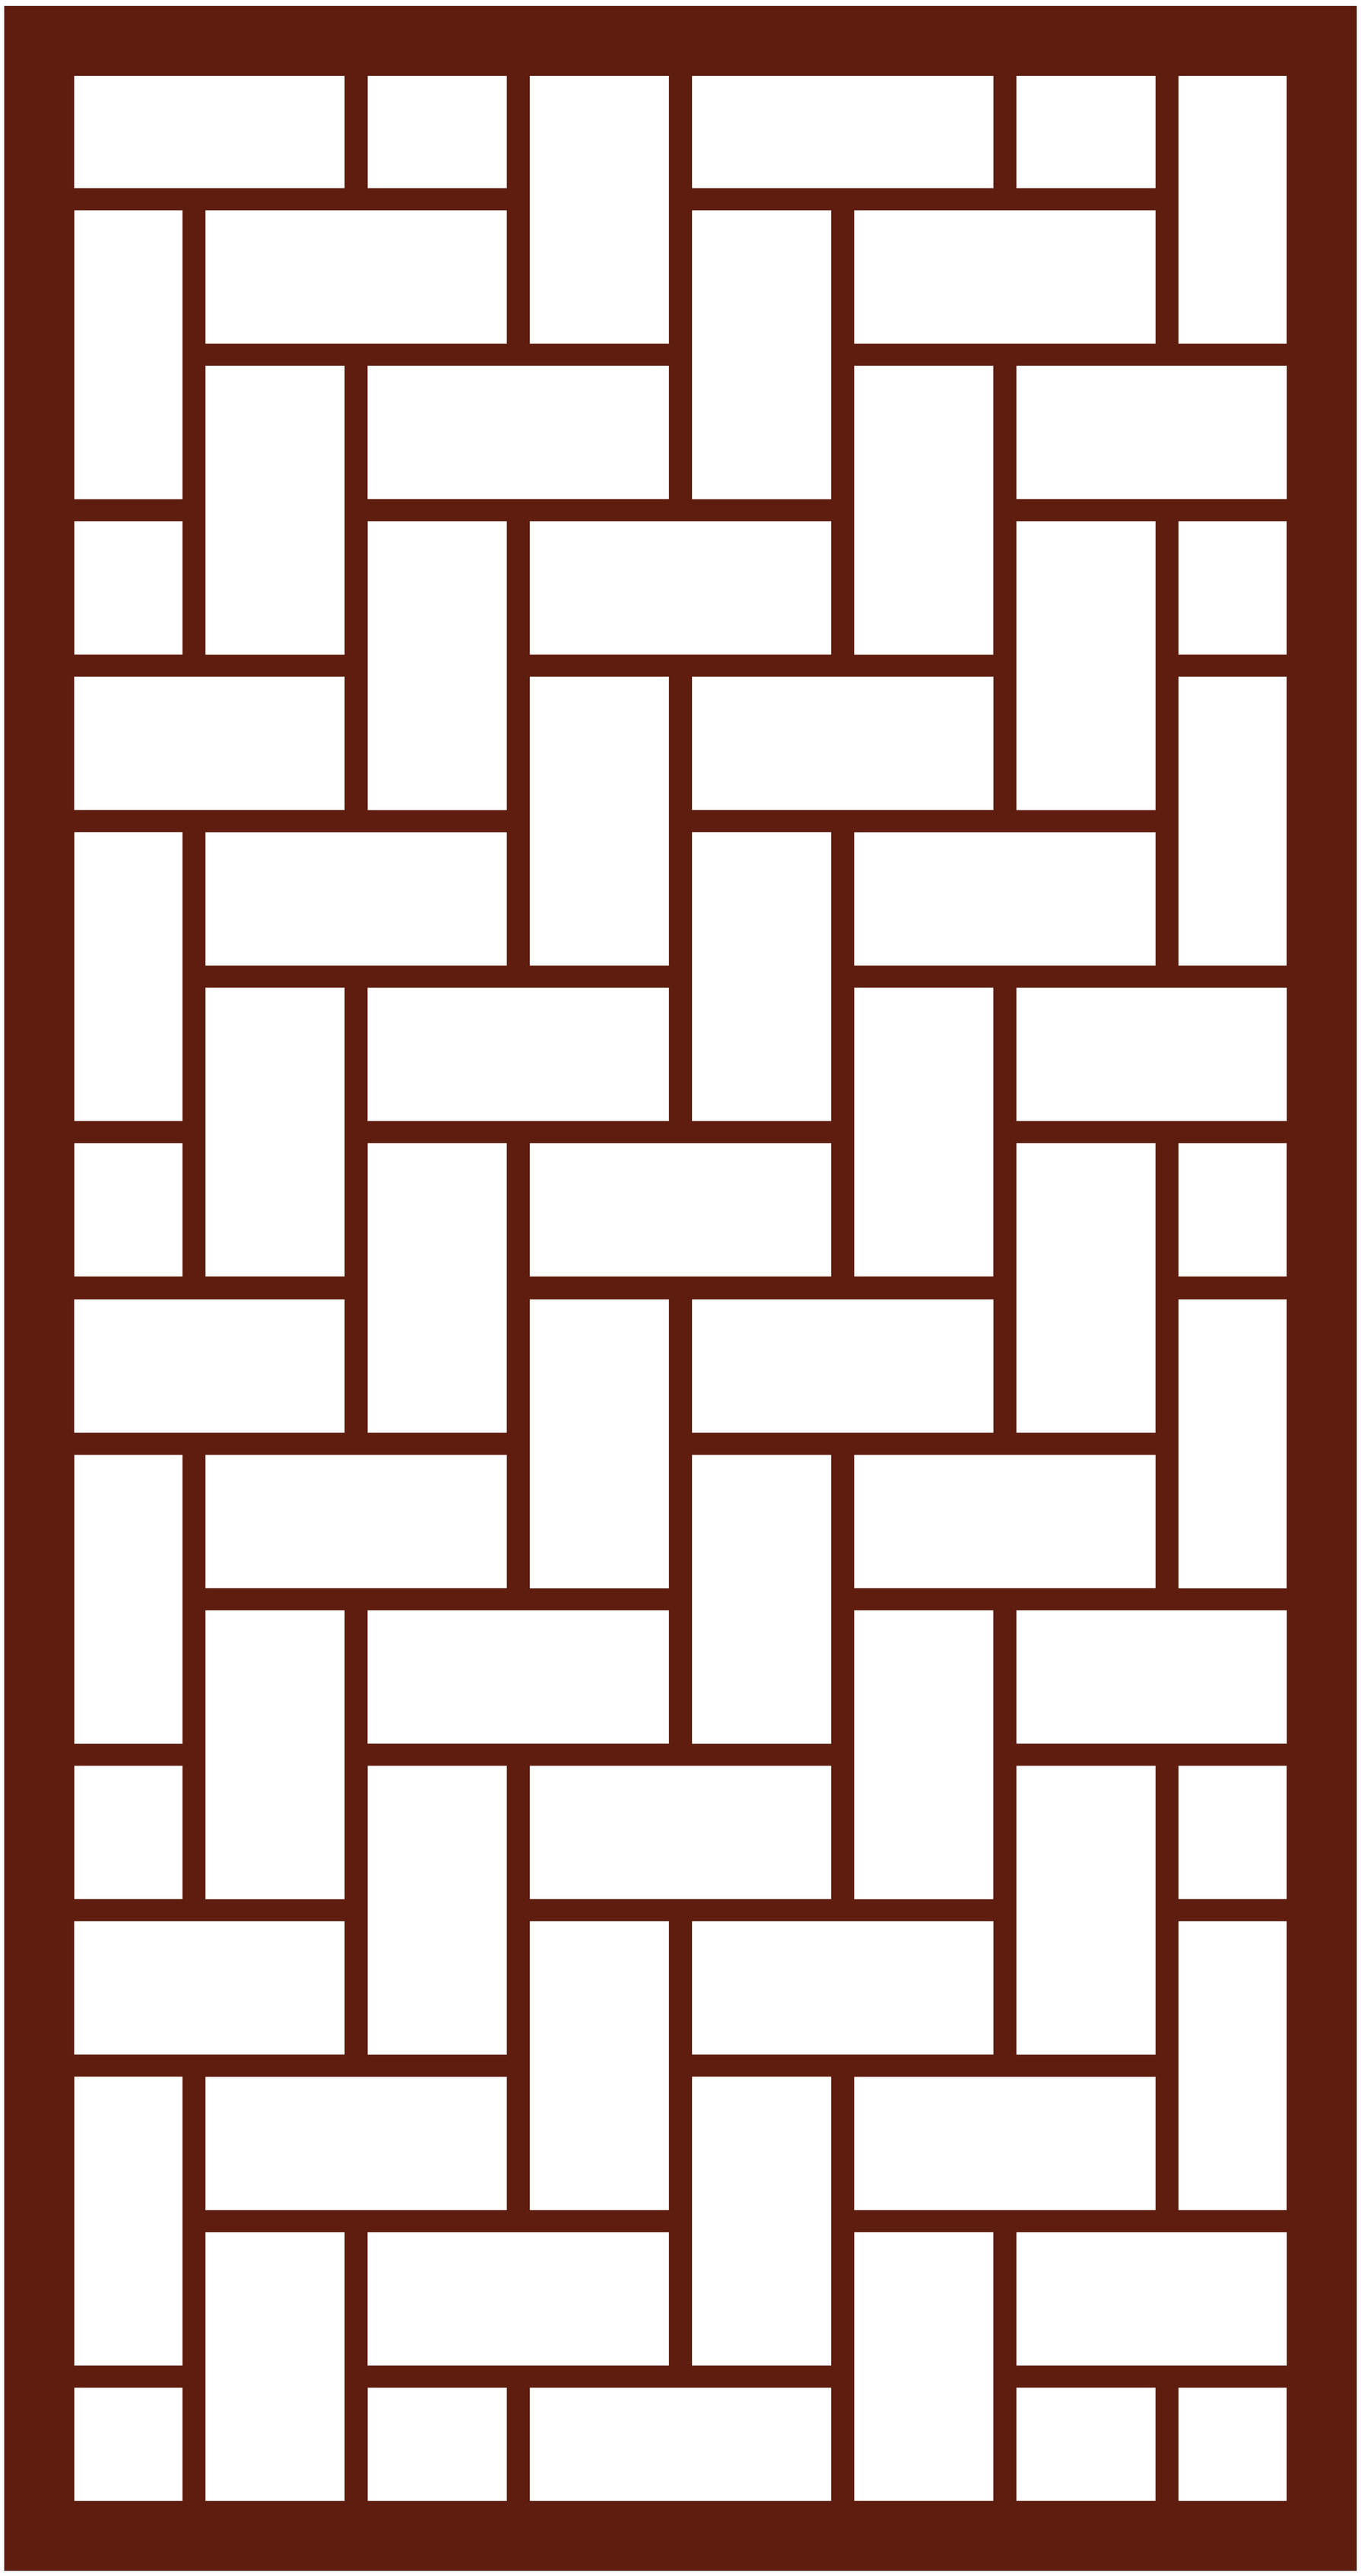

(4.0 3A52 5A93 3C147)

DESIGN 0092

(4.0 3A75 5A134 3C212)

DESIGN 0093

(4.0 3A11 5A19 3C31)

DESIGN 0094

(4.0 3A15 5A26 3C42)

DESIGN 0095

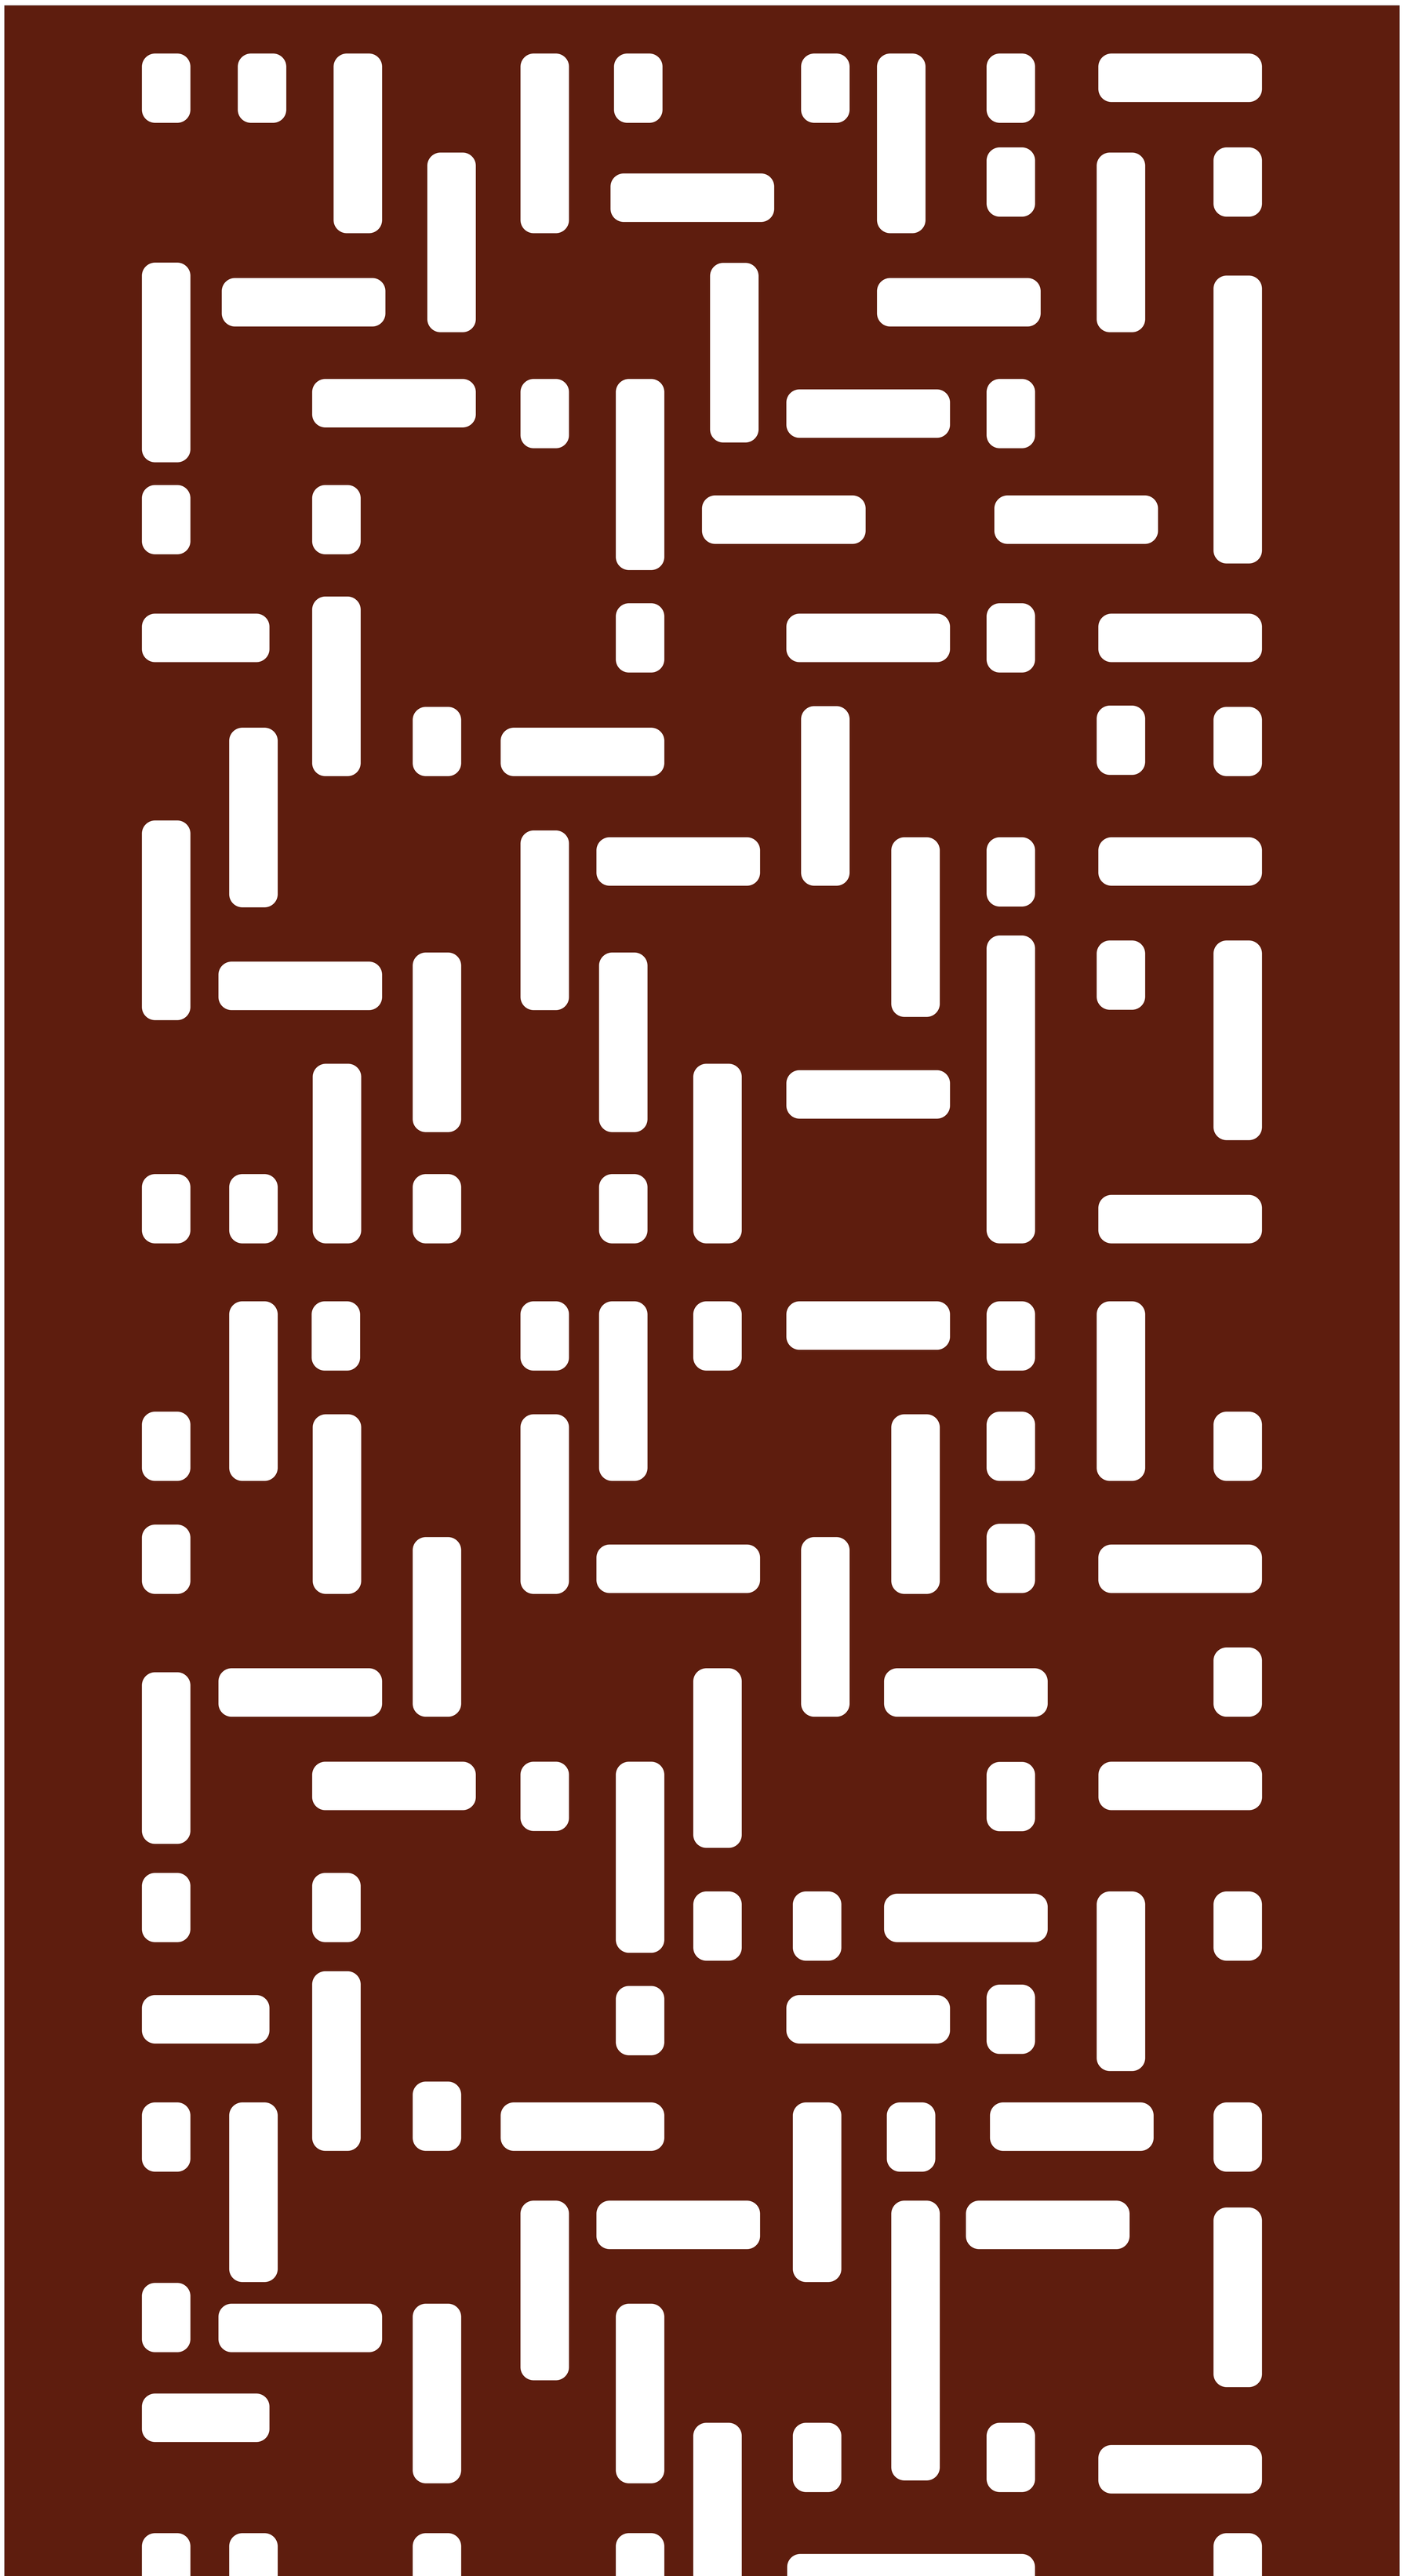

(4.0 3A45 5A78 3C127)

DESIGN 0096

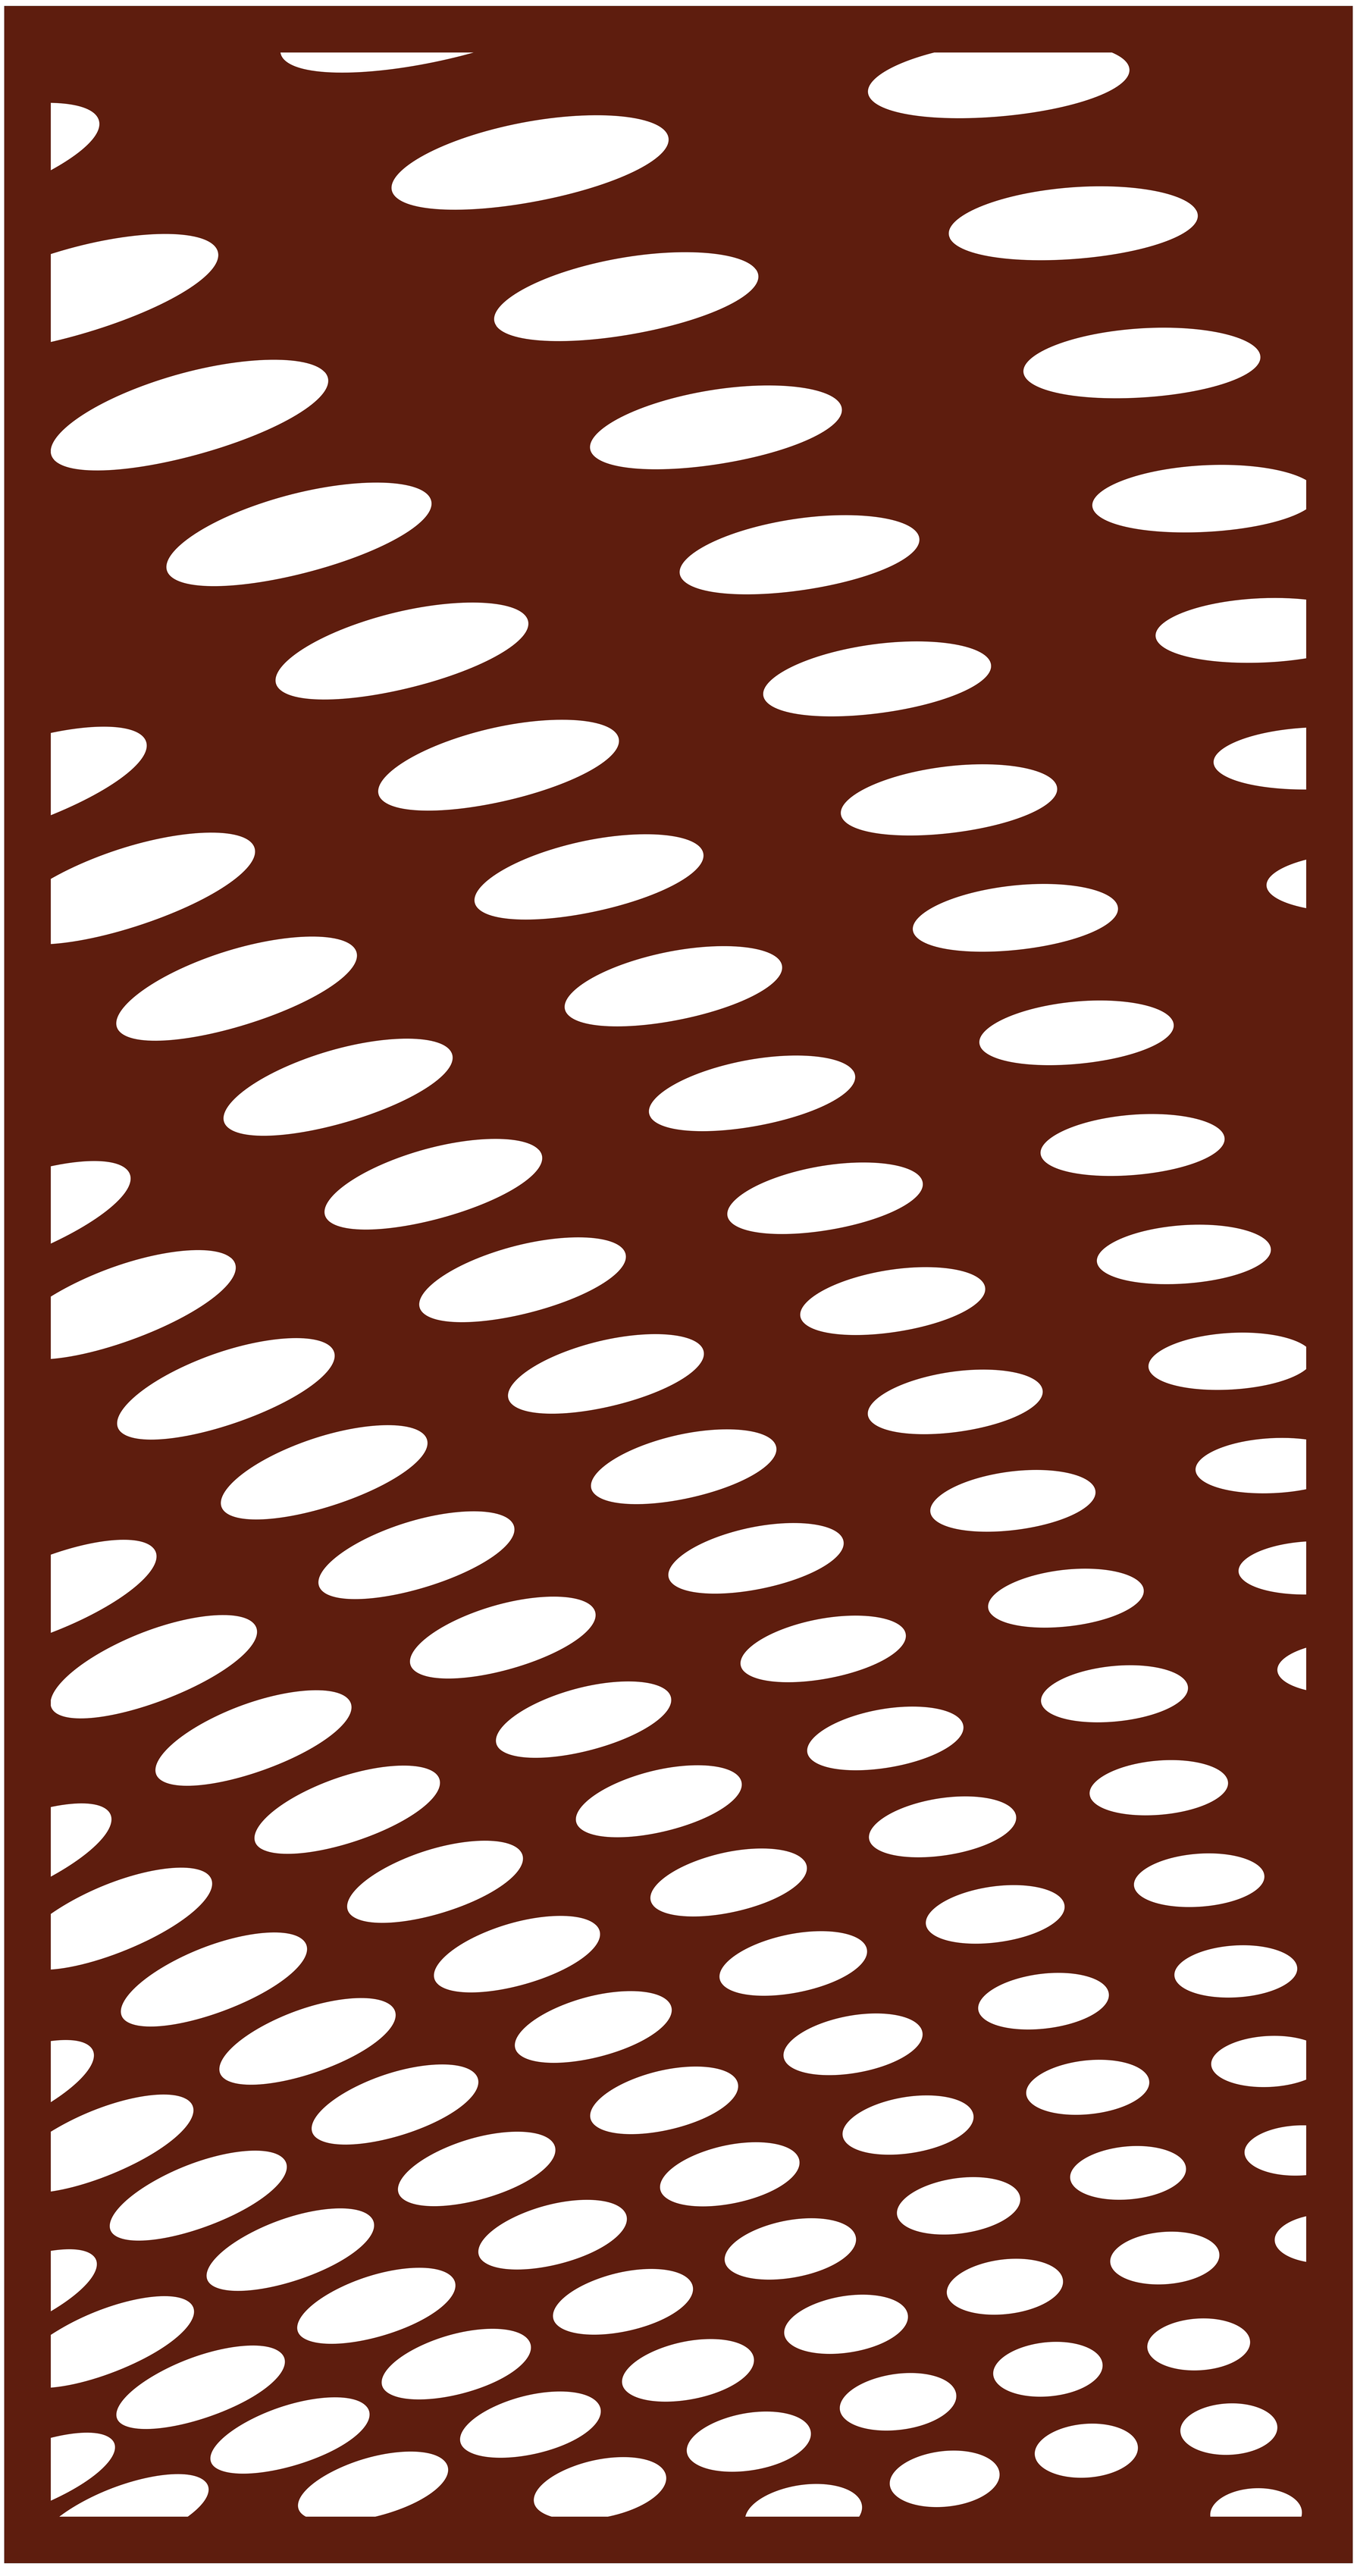

(4.0 3A46 5A79 3C130)

DESIGN 0097

(4.0 3A64 5A110 3C181)

DESIGN 0098

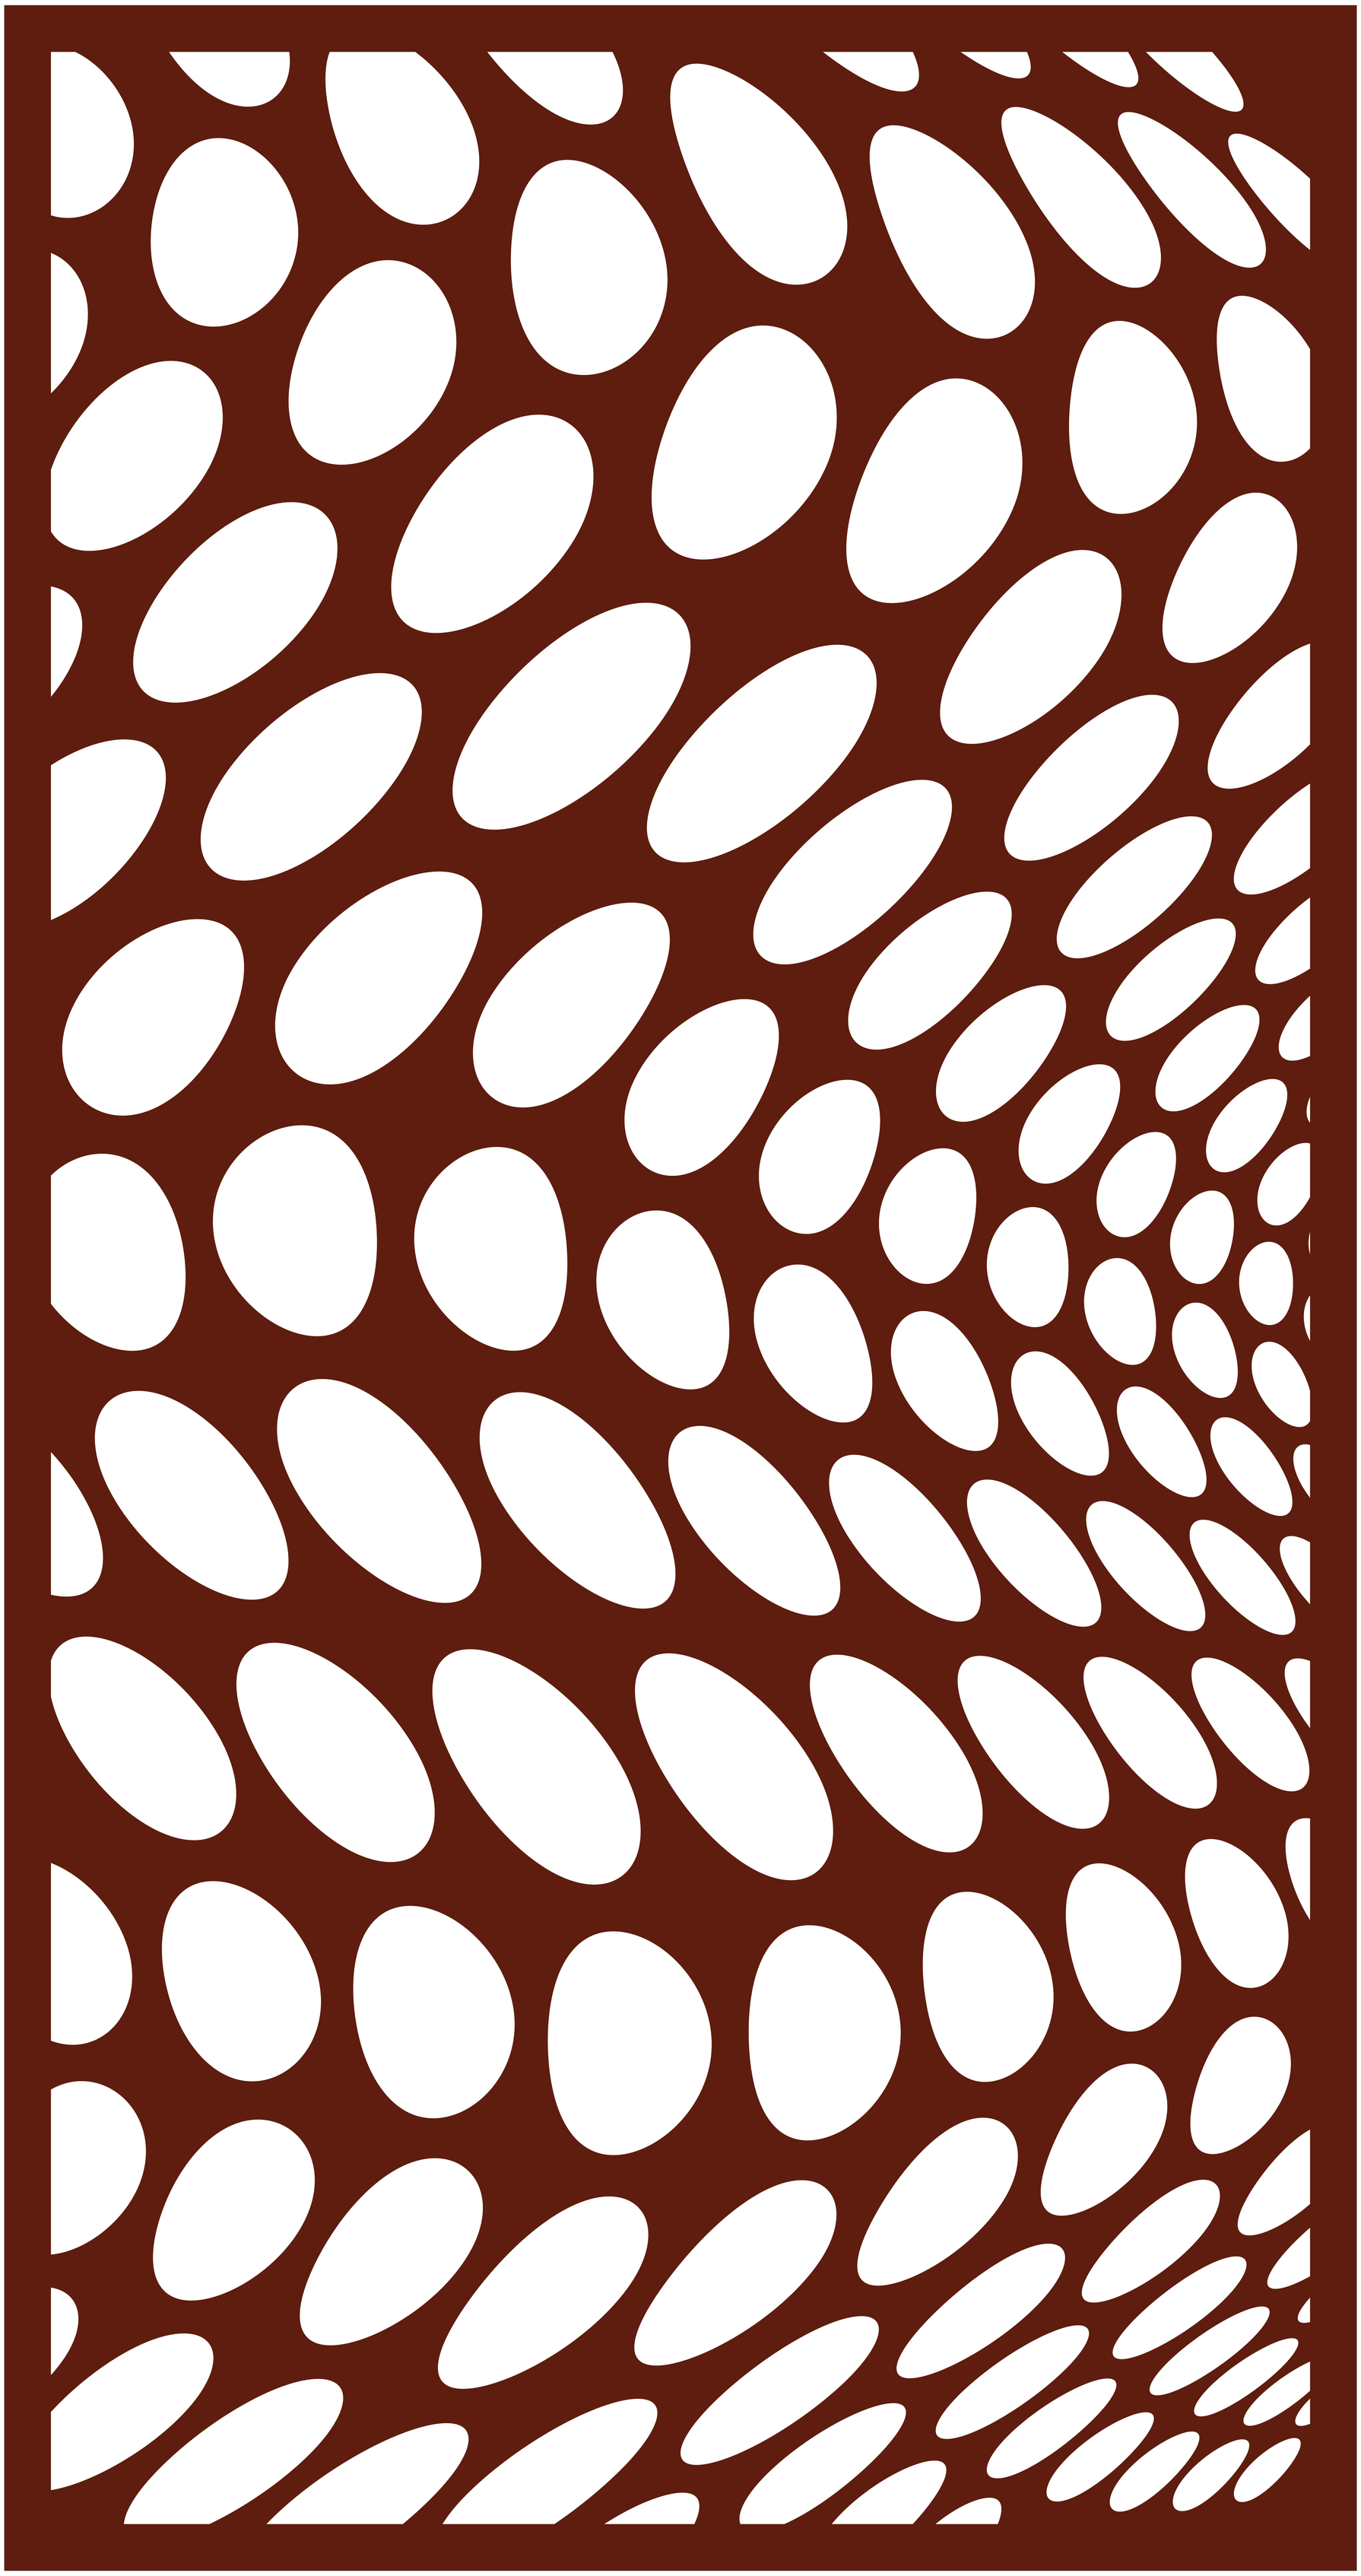

(4.0 3A54 5A93 3C152)

DESIGN 0099

(4.0 3A33 5A57 3C93)

DESIGN 0100

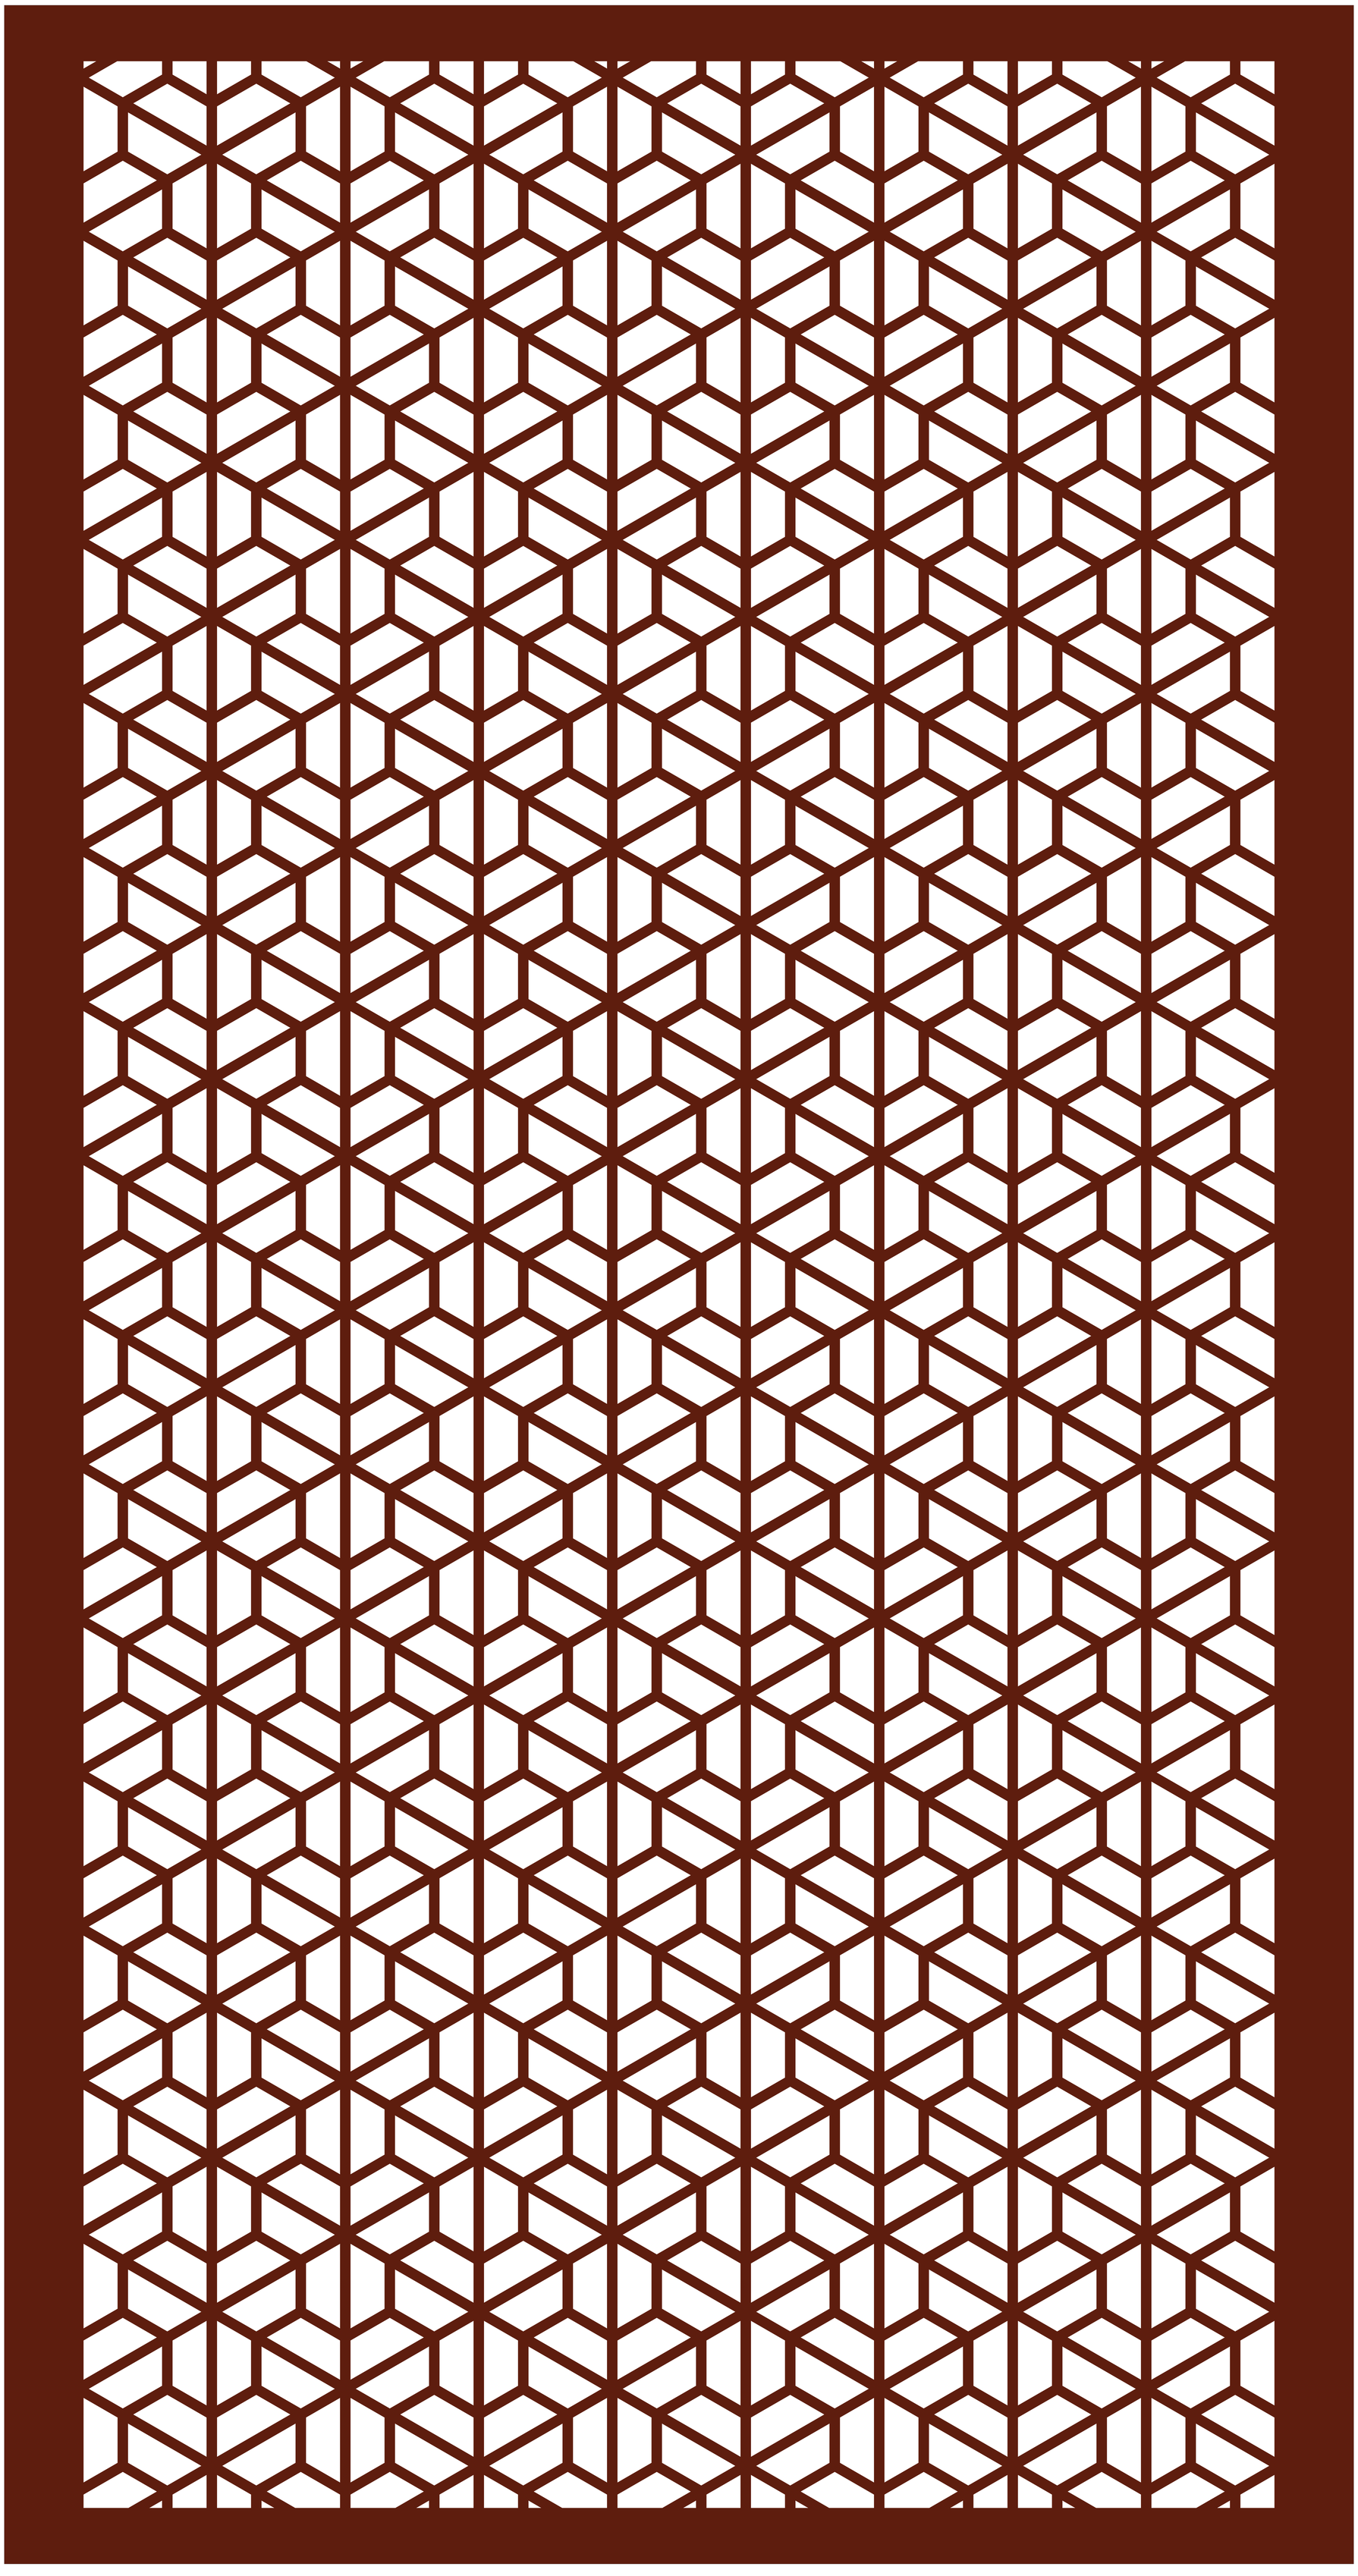

(4.0 3A180 5A300 3C487)

DESIGN 0101

(4.0 3A69 5A119 3C195)

DESIGN 0102

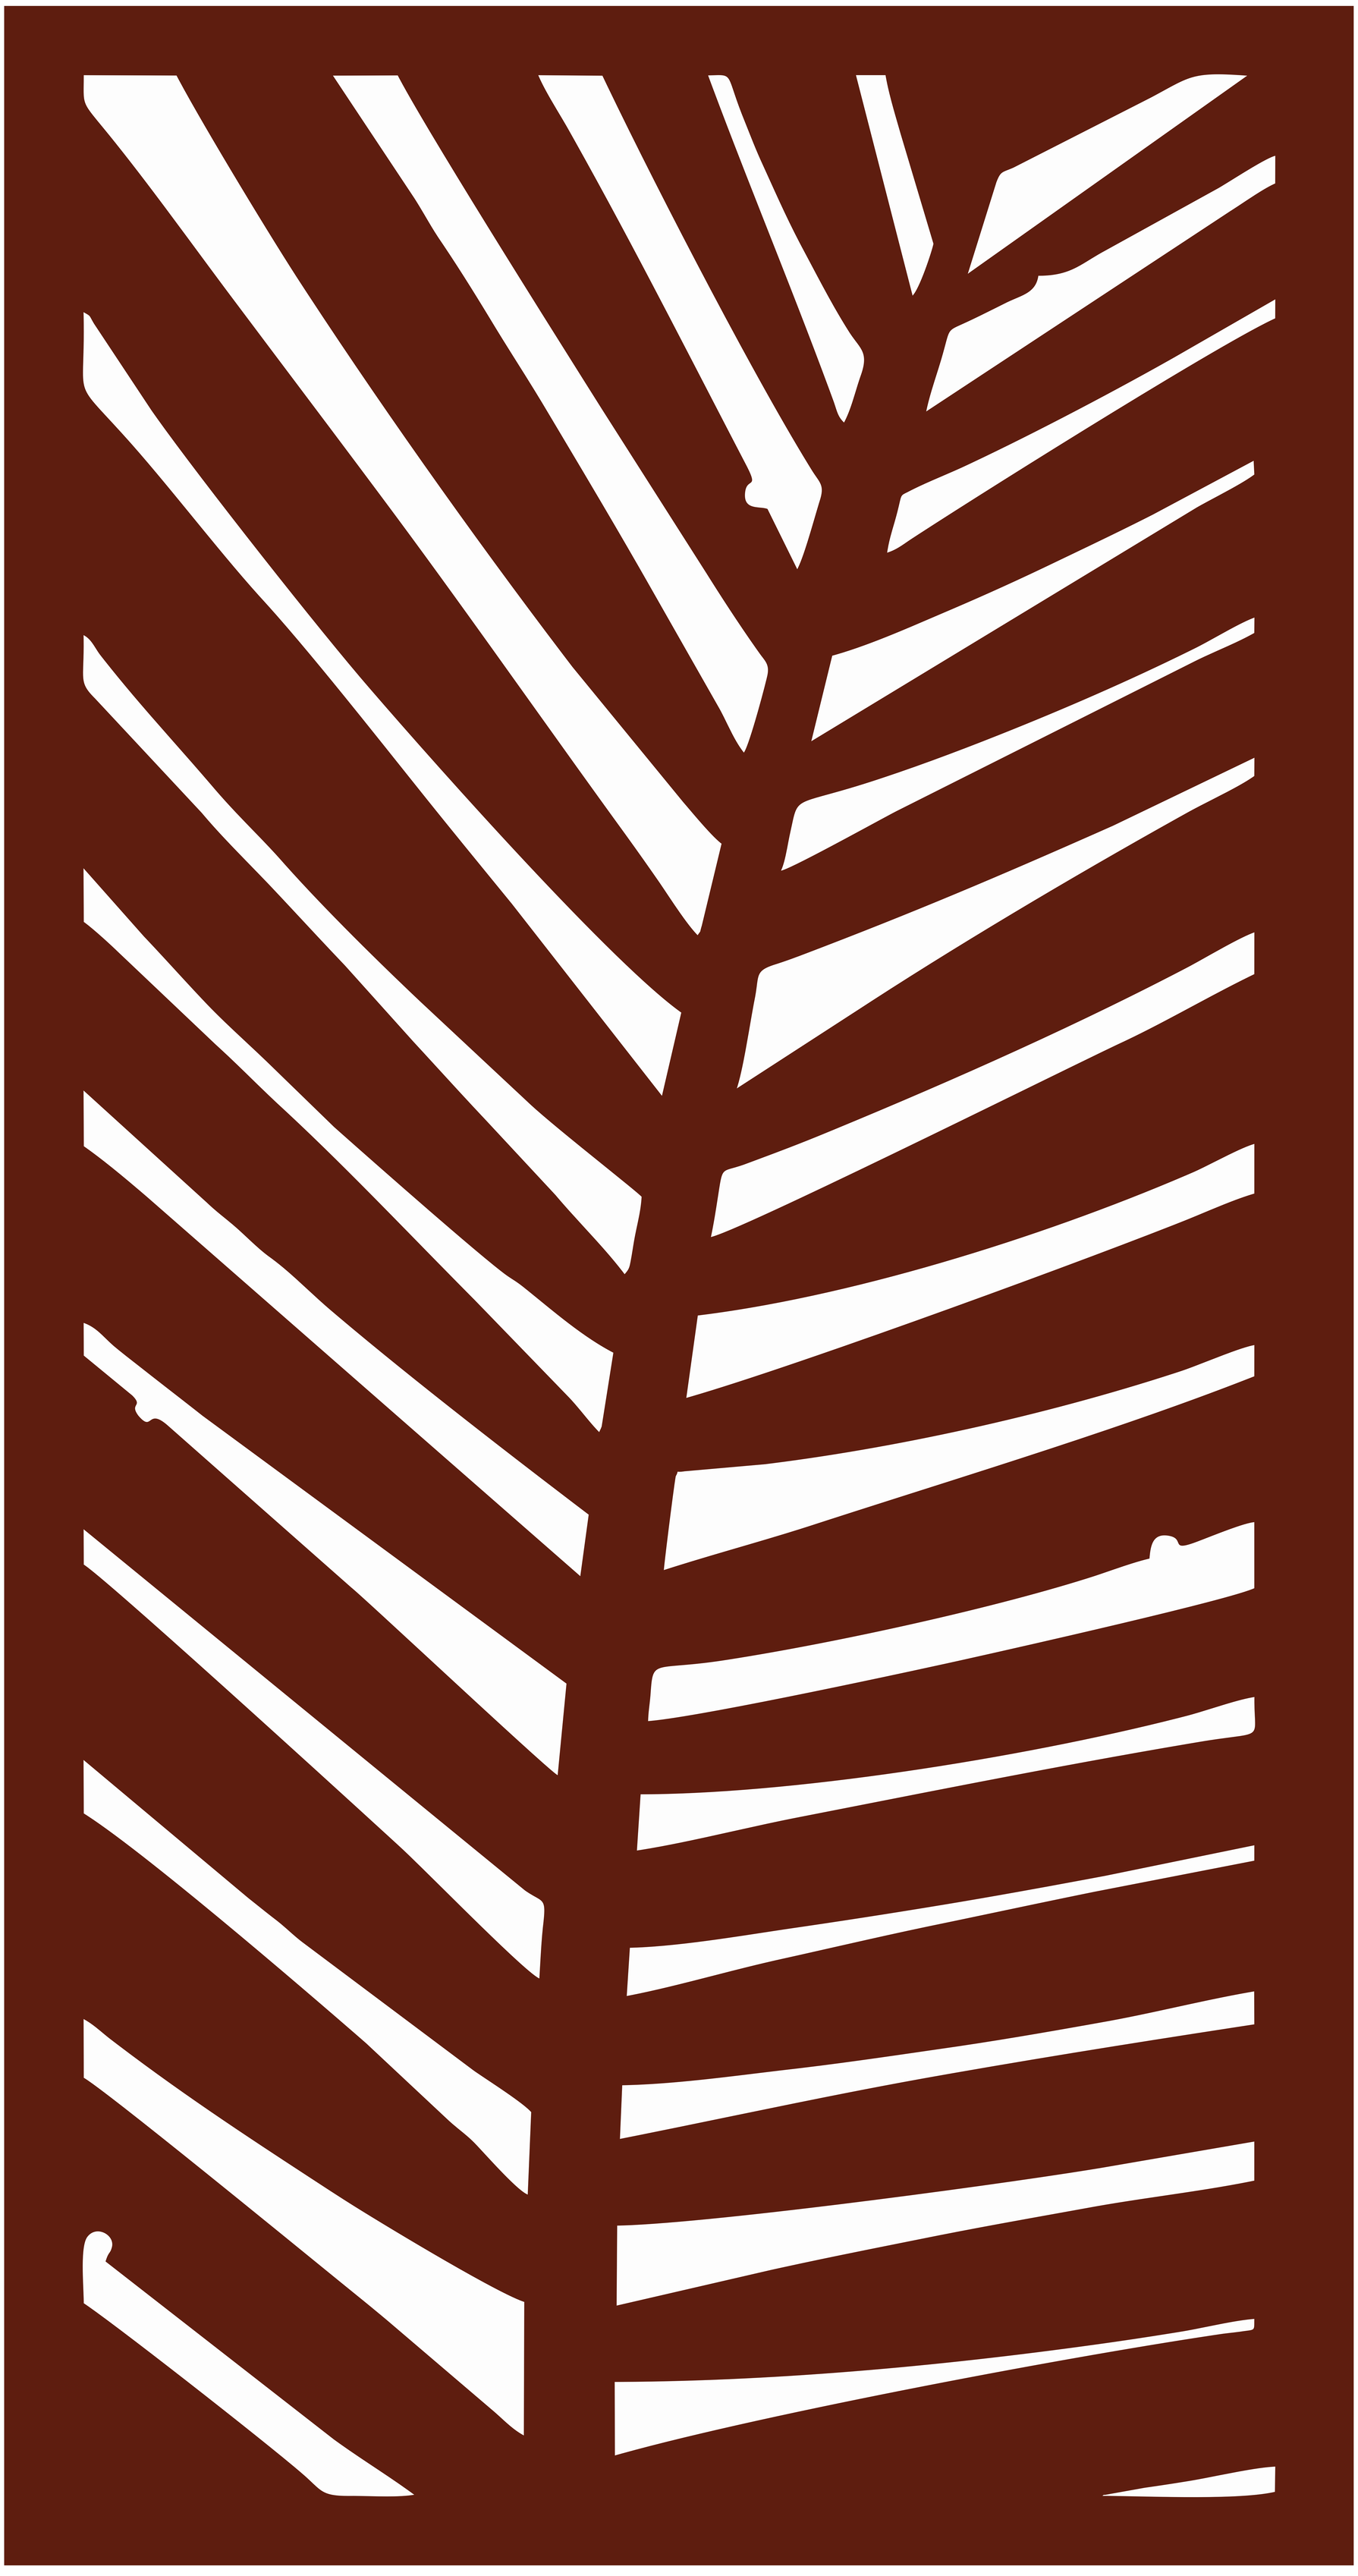

(4.0 3A43 5A74 3C122)

DESIGN 0103

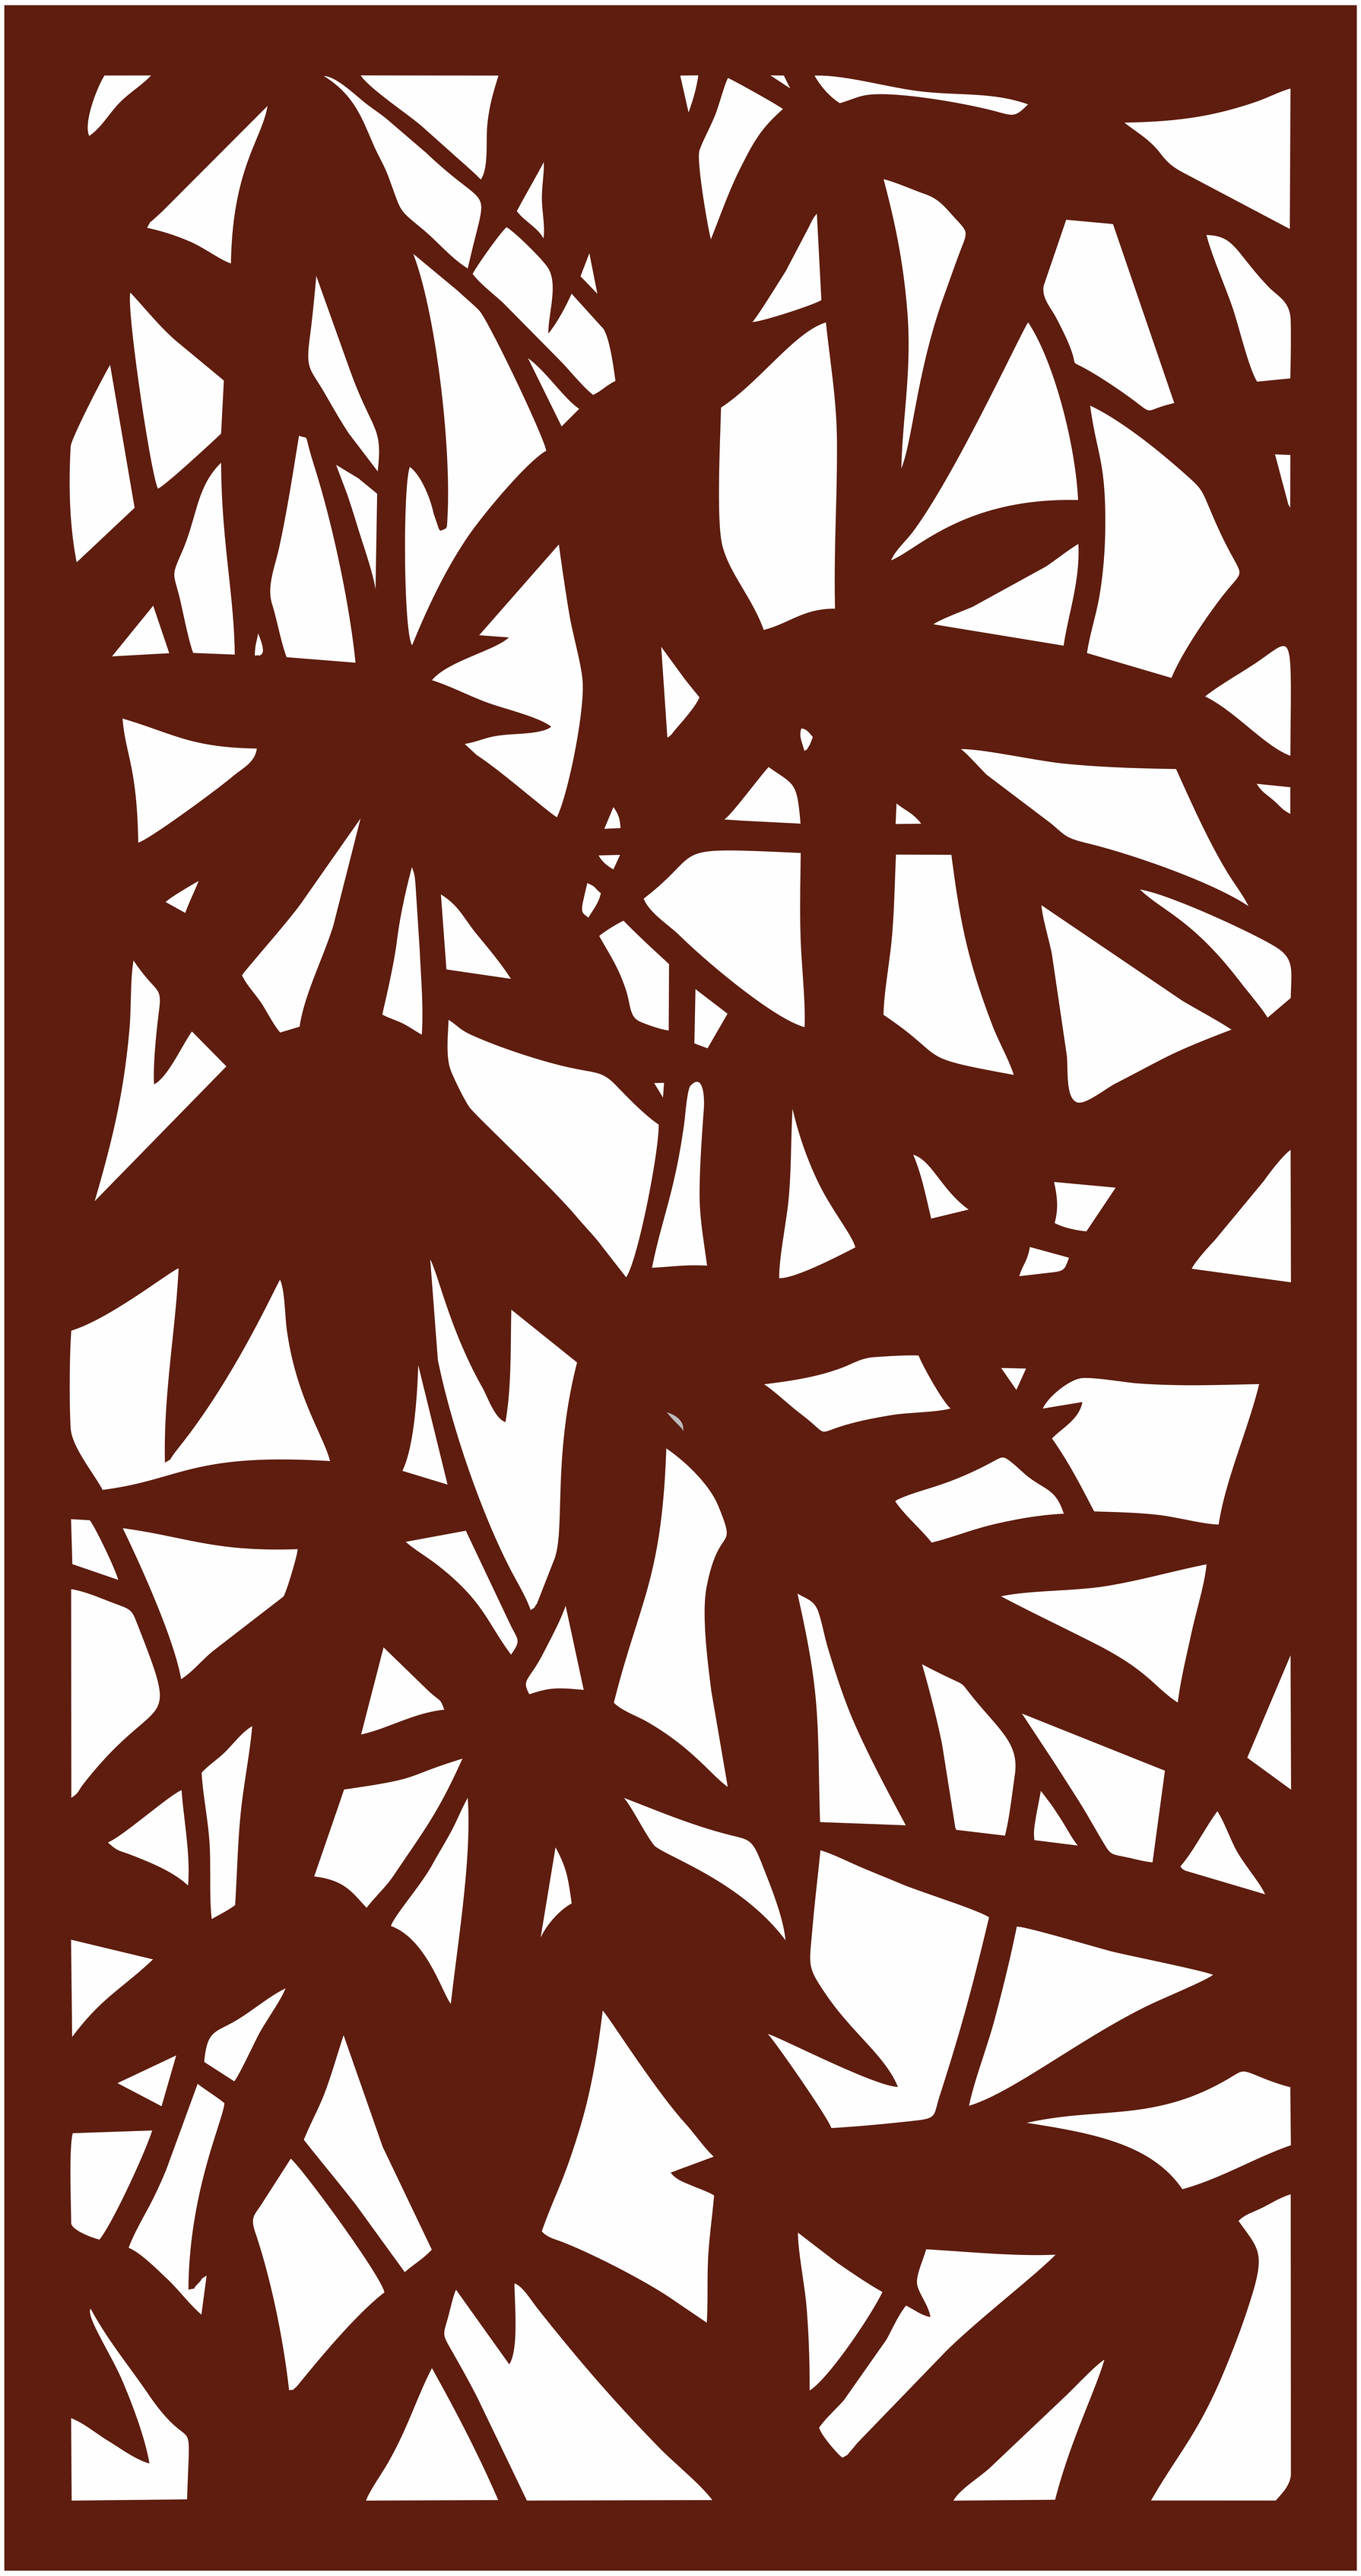

(4.0 3A43 5A74 3C122)